


DRILLING TEMPLATE SHEET: LEFT HANDED

IMPORTANT NOTE:
MAKE SURE YOU FOLLOW
THE STEP BY STEP
INSTRUCTION CAREFULLY

INSTALLATION TEMPLATE FOR SAMSUNG SMART DOORLOCK
SUITS 35MM TO 55MM DOOR THICKNESSES (EXT. TO 80MM AVAILABLE)

SAMSUNG
DIGITAL DOORLOCK
SHS-H505 / H705
SHS-P717 / P718
INSTALLATION
TEMPLATE

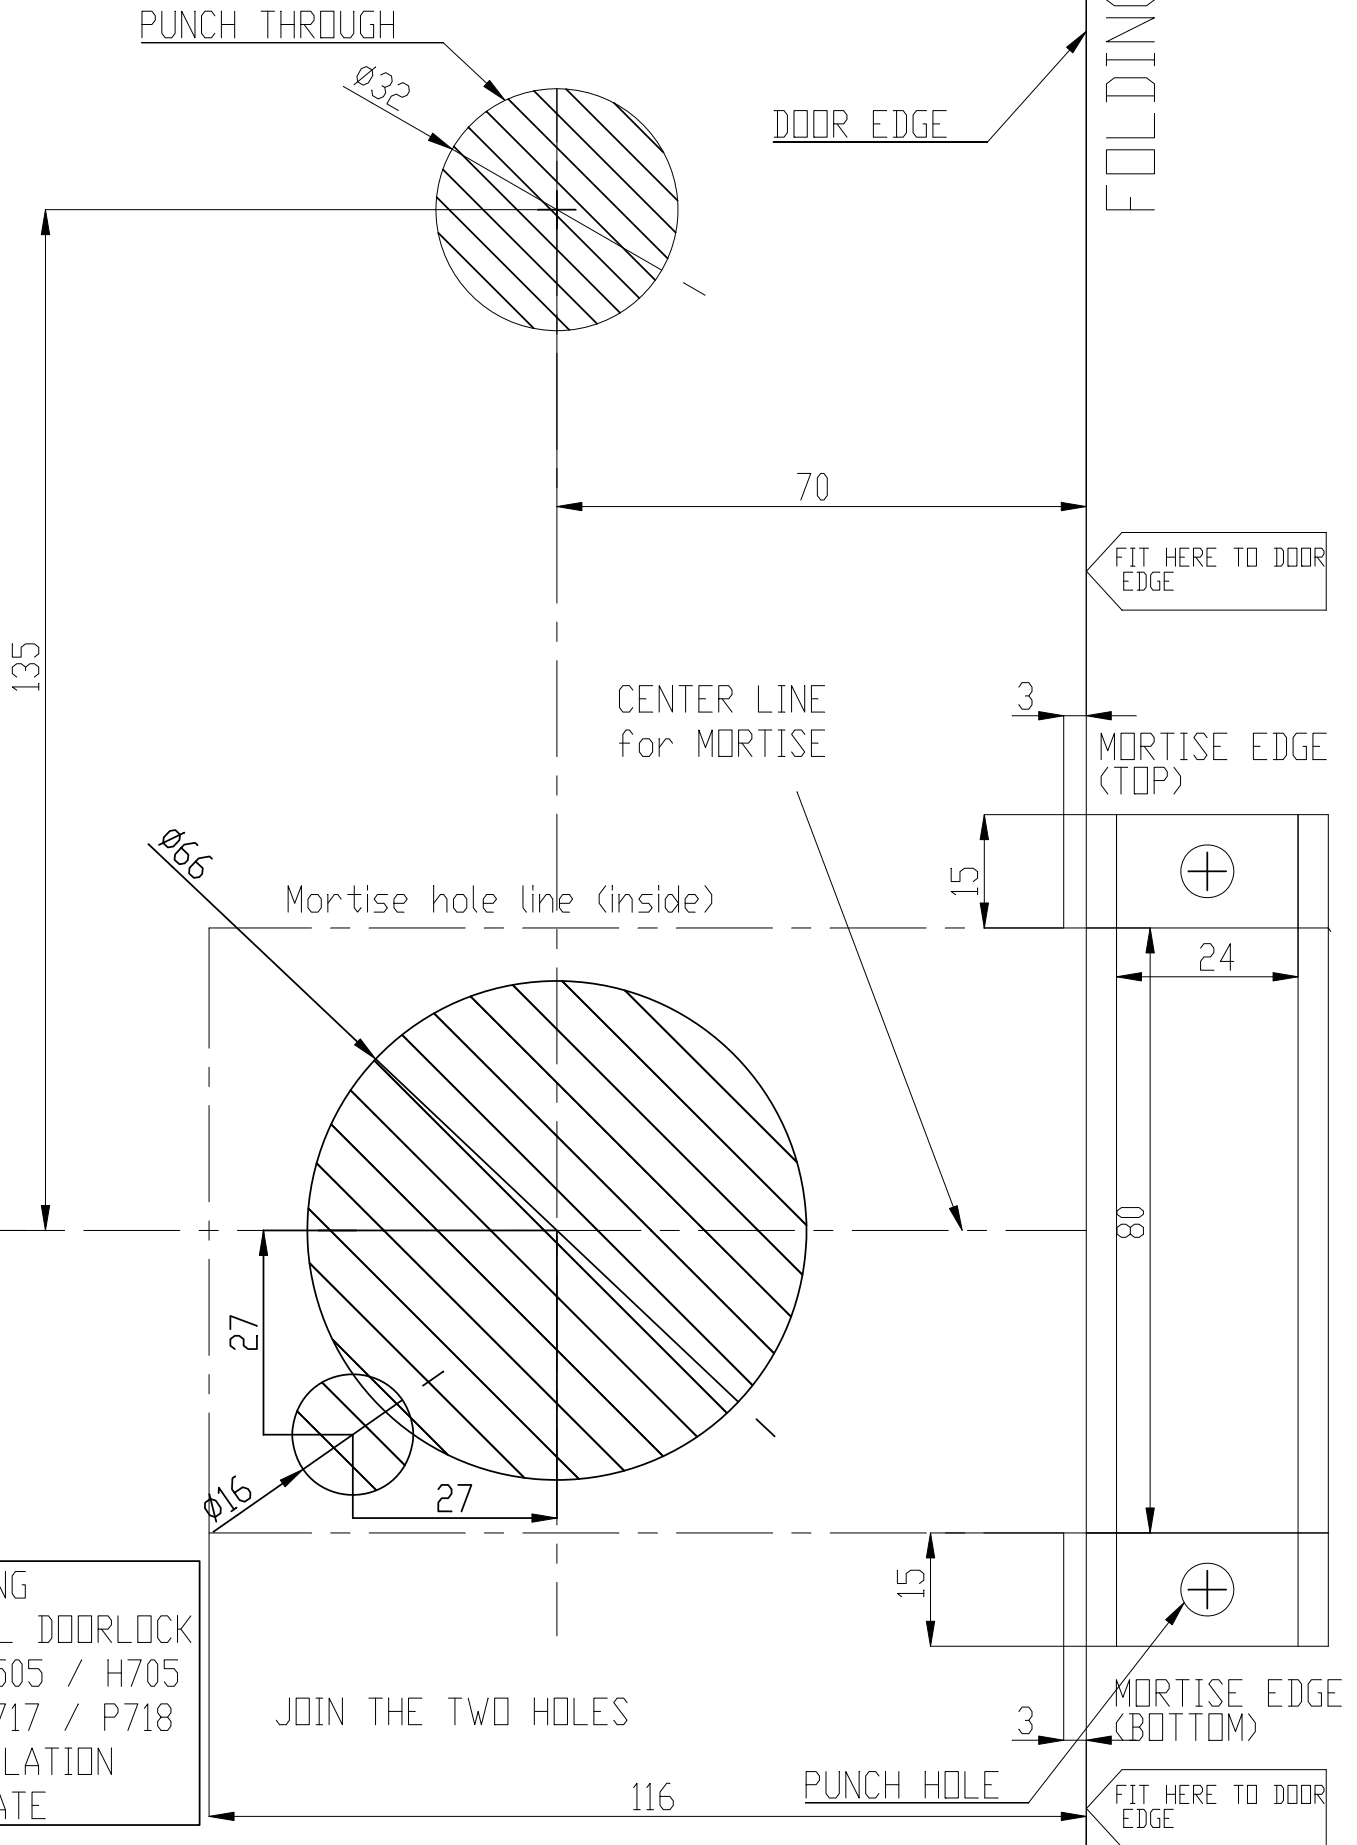

DRILLING TEMPLATE SHEET: RIGHT HANDED

IMPORTANT NOTE:
MAKE SURE YOU FOLLOW
THE STEP BY STEP
INSTRUCTION CAREFULLY

FOLDING LINE

DOOR EDGE

PUNCH THROUGH

$\phi 32$

FIT HERE TO DOOR
EDGE

70

135

MORTISE EDGE
(TOP)

3

CENTER LINE
for MORTISE

15

24

80

$\phi 66$

27

27

$\phi 16$

MORTISE EDGE
(BOTTOM)

3

PUNCH HOLE

116

JOIN THE TWO HOLES

INSTALLATION TEMPLATE FOR SAMSUNG SMART DOORLOCK
SUITS 35MM TO 55MM DOOR THICKNESSES (EXT. TO 80MM AVAILABLE)

SAMSUNG DOORLOCK
SHS-H505/705/P717/P718
INSTALLATION TEMPLATE

