AUSTRAL CLOTHES HOISTS PTY. LTD.
INCORPORATED IN VICTORIA A.B.N. 68 006 790 727
222-224 HAMMOND ROAD, DANDENONG , VICTORIA , 3175, AUSTRALIA
Tel 61 3 97067577 Fax 61 3 97067522
Website: www.australclotheslines.com.au

FOLD DOWN WALL MOUNT INSTALLATION INSTRUCTIONS for Addaline, Standard, Compact, Slenderline16, Slenderline20 and Unit Line models

ADDALINE (duo) 2400x1500mm

Parts supplied:
2 x Pre-Assembled (double) Side Arms (1500mm deep)
2 x Front spacer Bars (1037mm x 22mm x 22mm) – outer frame
2 x Front spacer Bars (985mm x 22mm x 22mm) – inner frame
2 x Front Joiner Bars (535mm x 25mm x 25mm) 1 x outer & 1 x inner frame
Cord 40m

Accessory Pack:
1 x Wall Template
2 x 16mm plastic end Caps for Side Braces
4 x 25mm plastic end Caps for Side Arm ends
2 x Cord Knob
2 x Cord Tidy
4 x8mm wall plug and 4 screws 6x50mm

STANDARD (single) 2400x1500mm

Parts supplied:
2 x Pre-Assembled Side Arms (1500mm deep)
2 x Front spacer Bars (1037mm x 22mm x 22mm)
1 x Front Joiner Bar (535mm x 25mm x 25mm)
Cord 33m

Accessory Pack:
1 x Wall Template
2 x 16mm plastic end Caps for Side Braces
2 x 25mm plastic end Caps for Side Arm ends
1 x Cord Knob
1 x Cord Tidy
4 x8mm wall plug and 4 screws 6x50mm

COMPACT (single) 2400x940mm

Parts supplied:
2 x Pre-Assembled Side Arms (940mm deep)
2 x Front spacer Bars (1037mm x 22mm x 22mm)
1 x Front Joiner Bar (535mm x 25mm x 25mm)
Cord 33m

Accessory Pack:
1 x Wall Template
2 x 16mm plastic end Caps for Side Braces
2 x 25mm plastic end Caps for Side Arm ends
1 x Cord Knob
1 x Cord Tidy
4 x8mm wall plug and 4 screws 6x50mm

SLENDERLINE 16(single) 2400x600mm

Parts supplied:
2 x Pre-Assembled Side Arms (600mm deep)
2 x Front spacer Bars (1037mm x 22mm x 22mm)
1 x Front Joiner Bar (535mm x 25mm x 25mm)
Cord 20m

Accessory Pack:
1 x Wall Template
2 x 16mm plastic end Caps for Side Braces
2 x 25mm plastic end Caps for Side Arm ends
1 x Cord Knob
1 x Cord Tidy
4 x8mm wall plug and 4 screws 6x50mm

SLENDERLINE 20(single) 3300x600mm

Parts supplied:
2 x Pre-Assembled Side Arms (600mm deep)
2 x Front spacer Bars (1200mm x 22mm x 22mm)
1 x Front Joiner Bar (1070mm x 25mm x 25mm)
Cord 25m

Accessory Pack:
1 x Wall Template
2 x 16mm plastic end Caps for Side Braces
2 x 25mm plastic end Caps for Side Arm ends
1 x Cord Knob
1 x Cord Tidy
4 x8mm wall plug and 4 screws 6x50mm

Unit Line (single) 1300x940mm

Parts supplied:
2 x Pre-Assembled Side Arms (940mm deep)
2 x Front spacer Bars (1200mm x 22mm x 22mm)
1 x Front Joiner Bar (1070mm x 25mm x 25mm)
Cord 20m

Accessory Pack:
1 x Wall Template
2 x 16mm plastic end Caps for Side Braces
2 x 25mm plastic end Caps for Side Arm ends
1 x Cord Knob
1 x Cord Tidy
4 x8mm wall plug and 4 screws 6x50mm

WALL MOUNT INSTRUCTIONS:

Mark the position of the drill holes using the Template supplied.

Mark the top fixing screw approximately 50mm above user's head height (if known). For general installation where user's height is unknown, mark the top fixing screw between 1800-1850mm above finished ground level. Ensure Template is vertically plumb.

1. Mark the fixing points for your Fold Down model as indicated below ensuring top marks are level. Please ensure fixing surface is structurally sound. Never fix a clothesline to mortar joints. Drill holes using an 8mm drill bit and a hammer drill or variable speed drill. Insert wall plugs flush with surface if fixing to a masonry wall.

. **Centre to centre fixing points for standard installation.** *See below for how to shorten an Austral Fold Down.*

Addaline	2400mm apart
Standard	2400mm apart
Compact	2400mm apart
Slenderline16	2400mm apart
Slenderline20	3300mm apart
Unit Line	1300mm apart

…/2

2. Attach the left Pre-Assembled Side Arm to wall using screws supplied. Attach the right Side Arm. The two bent Side Arms should face towards each other. **DO NOT TIGHTEN ANY OTHER BOLTS.**

3. Assemble the Front Bar by inserting one Front Spacer into each side of the Front Joiner (bar with Sticker). The hole on the end of each steel tube is a powdercoat hook and is not important to the installation.
To shorten a Fold Down Clothesline: Mark both sets of fixing points within the available space. Keep 50mm (min.) in from the end of any masonry wall. Measure the distance between the left and right fixing points. Deduct this amount from the standard fixing points given on the previous page for your clothesline model. This is the amount which will need to be cut off the Front Bar. For example: If you are installing a 2400mm long Fold Down and your fixing points are 2100mm apart, you will need to reduce the overall length of the Front Bar by 300mm. For the Joiner to remain in the centre of the Front Bar, an equal amount (in this instance 150mm) should be cut off the end of each front Spacer Bar. Do not cut the Joiner Bar. Insert cut Spacer Bars into each end of Joiner Bar to form the new length Front Bar.

4. **For Add-A-Line:** Assemble both sets of front bars. Insert one of the longer steel tubes into each end of one Joiner Bar. Insert one of the shorter steel tubes into each end of the other Joiner Bar. The longer Front Bar is for the outer frame and the shorter Front Bar is for the inner frame.

5. Insert Front Bar(s) into bent Side Arm and carefully maneuver the loose end into the opposite bent Side Arm.

6. **Ensure all bolts are secure but not over tight**. Bolts on the sliding Brace should be loose enough to allow marginal finger movement. The Catches must move freely to allow the Braces to lock and unlock.

7. To cord all lines, slide the black line tension lock(s) towards the front bend and position over the first punched hole. Thread the Cord through the first hole nearest the bend, leaving about 30cm of extra line. Continue threading Cord through to the back. Slip the Cord Tidy (6mm black grommet) onto the line BEFORE threading the last hole.
N.B. Addaline: Ensure both frames remain in the same position to ensure smooth cording. To cord the smaller frame: Cord from front to back through all 7 holes and tie Cord off (see steps 9 & 10. For the larger frame: cord from front to back through the first 8 holes only.

8. The smaller Addaline frame is raised and lowered, by manually securing the wire Braces into the Side Arm's larger punched holes.

9. Starting at the back of the frame, leave 10-15cm of Cord and cut excess off. Wrap line ***over the top of the side arm*** and knot several times to the inside of the frame (as shown) before pushing the cut end through the Cord Tidy. Do not tie the Cord around the tube frame as this will prevent the Side Arm from folding down into the channel bracket.

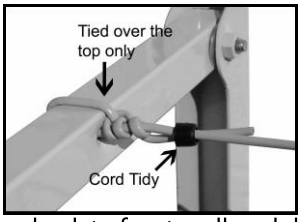

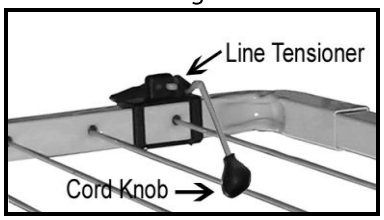

10. Working from back to front, pull each line taut, taking up the excess as you move from one line to the next until you Reach the Line Tension Lock (positioned over the first hole). Raise the Lever on the Line Tension Lock and pull the Cord through the hole directly under the Lever, pulling until the Cord is taut. Lock the lever down to secure the Cord. Wrap the line in and around the Line Tension Lock to secure. Leave approximately 12-15cm of excess Cord. Slide Cord Knob onto line end. Knot the Cord end and pull Cord Knob down over the knot. See Diagram.

11. Fit plastic caps to front of the 15mm Braces and ends of Side Arms.

TO LOWER LINE

a) Position your hand on the centre of the front Joiner Bar.
b) Push the Front Bar up firmly until you hear the 'clicks' or see the Clips move upwards and grip the side Brace. The Catches will pass over the screw heads and then drop down to disengage.
c) Lower the frame down.

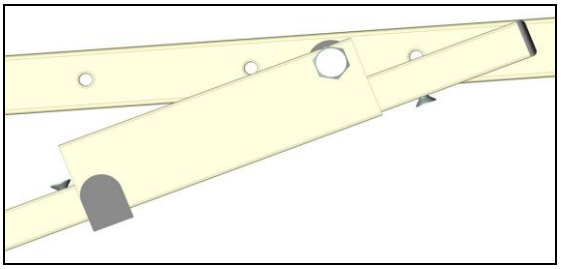

TO RAISE LINE

a) Position hand on the centre of the front Joiner Bar.
b) Lift the Front Bar until the Catches pass the top screws by approximately 1cm (1/2"). Gently release the Front Bar. The Catches will drop and stop against the screw head. If frame is raised too far, line will not lock into place. If this occurs, lower the frame and raise again.
c) Lower frame slowly and allow Catches to lock into position.

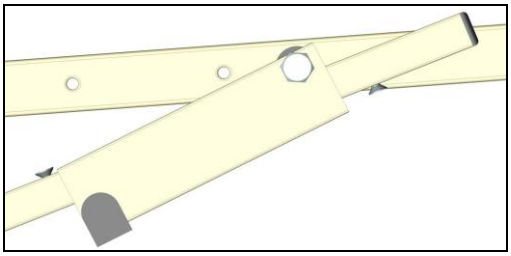

Please visit www.australclotheslines.com.au for additional installation information.