

RMWSL0227 Above Bonnet Storage Assembly Instructions

Hardware included;



10 x 50mm Hex Head Screws
23 x 60mm Hex Head Screws
2 x 70mm Hex Head Screws
17 x 80mm Hex Head Screws



47 x Nut




5 x Flanges

Additional Tools Required;




Components included;


Roof x 2

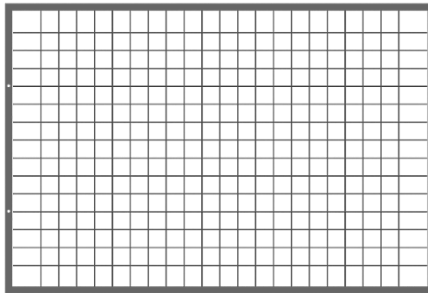


Front Panel x 2

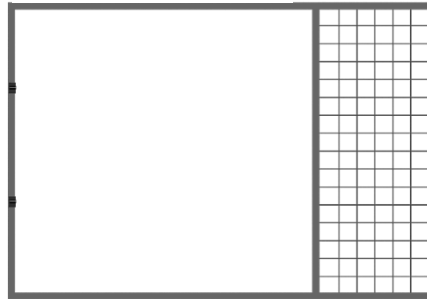


Door x 2

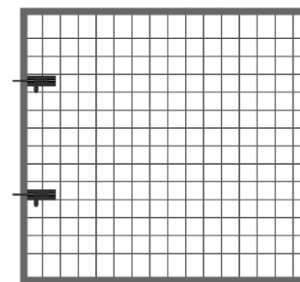


Floor x 2

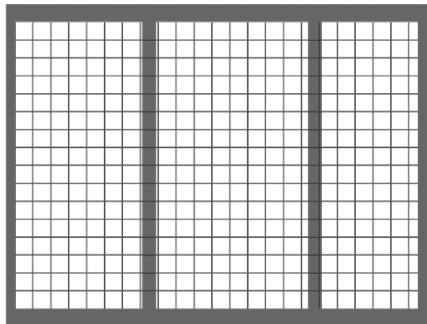

Back Panel x 2

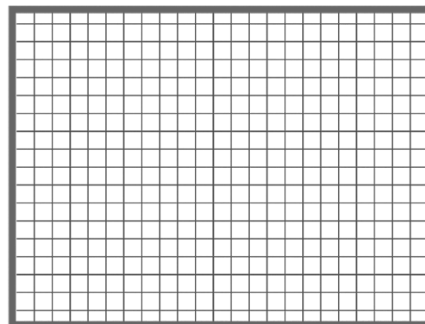

Side Panel x 2

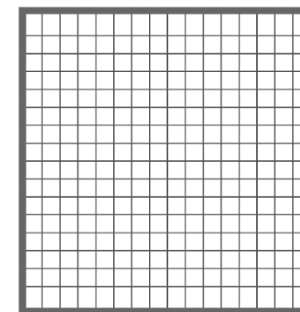

Corner Legs x 4

Centre Leg x 1

Cantilever Support x 1

Joining Bracket x 1



Assembly

Entire set up is to be done on level ground.
Requires 2-person assembly.

Step 1.

Unpack the unit and confirm you have all the parts listed.

Step 2.

Loosely fix all Floor, Side, Back, Door and Roof Panels using the screws and nuts provided.

Step 3.


Fix all Legs, Cantilever Support and Joining Bracket to the unit using the screws and nuts provided.

Step 4.

Tighten all screws.

Step 5.

Use bolts provided to fix the legs into the flanges.
Move in to position and fix the flanges to the floor (hardware not included).
For stability fix unit to a wall (hardware not included).

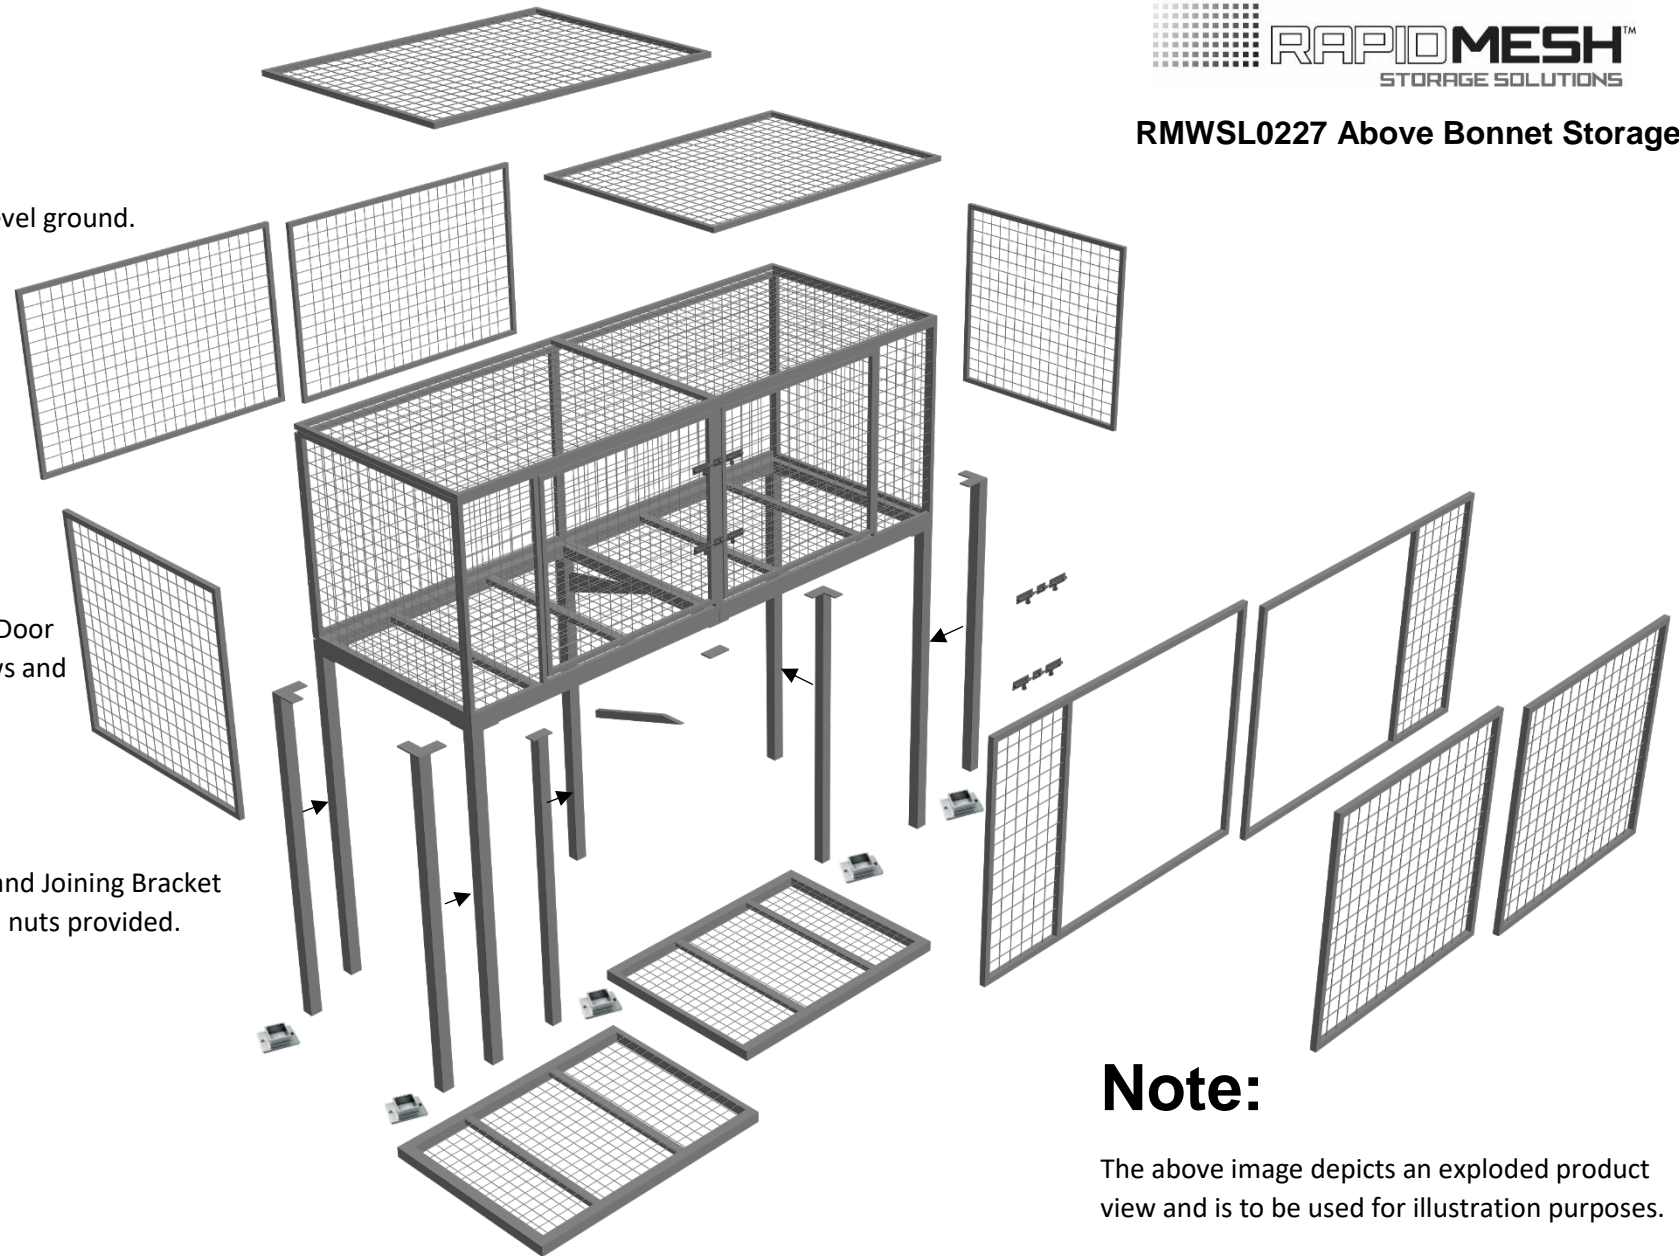

Note:

The above image depicts an exploded product view and is to be used for illustration purposes.

Our goods come with guarantees that cannot be excluded under the Australian consumer law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial application. This warranty is given by Rapid Hardware Group Pty Ltd, ABN 71145292646, 2 Park Drive, Dandenong South VIC 3175.