

ASSEMBLY INSTRUCTION FOR MAXI ULTRA HS2






When attaching unit to wall put safety bracket in middle of unit with 16mm pan head screw then 25mm pan head screw into wall. For plasterboard without a stud it is recommended to use a plug with screw (not provided).



PARTS IDENTIFICATION LIST

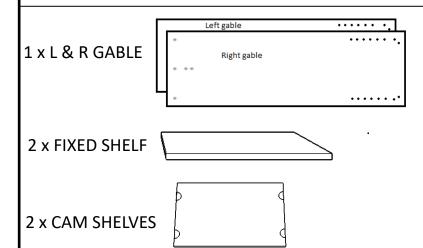

1 x FOLDED BACKING BOARD




1 x BOTTOM KICK




MODEL	DESCRIPTION	QTY	NO	MODEL	DESCRIPTION	QTY
3	CONFIRMAT SCREWS 50mm x 5mm	14	6		WHITE CAMS	8
	CAPS	14	7		CAM PINS	8
·	BACKING NAILS	60	8	Dividiti	16mm PAN HEAD SCREWS	1
4 - 1111111	16mm WOOD SCREW	3	9		25mm PAN HEAD SCREWS	1
69-	30mm FLANGES-PER SET OF 2	1	10	020	"L" SAFETY BRACKET	1
	30mmHANGING RAIL	1				
		CONFIRMAT SCREWS 50mm x 5mm CAPS BACKING NAILS 16mm WOOD SCREW 30mm FLANGES-PER SET OF 2	CONFIRMAT SCREWS 50mm x 5mm 14 CAPS 14 BACKING NAILS 60 16mm WOOD SCREW 3 30mm FLANGES-PER SET OF 2 1	CONFIRMAT SCREWS 50mm x 5mm 14 6 CAPS 14 7 BACKING NAILS 60 8 16mm WOOD SCREW 3 9 30mm FLANGES-PER SET OF 2 1 10	CONFIRMAT SCREWS 50mm x 5mm 14 6 CAPS 14 7 BACKING NAILS 60 8 16mm WOOD SCREW 3 9 30mm FLANGES-PER SET OF 2 1 10	CONFIRMAT SCREWS 50mm x 5mm 14 6 WHITE CAMS CAPS 14 7 CAM PINS BACKING NAILS 60 8 16mm PAN HEAD SCREWS 16mm WOOD SCREW 3 9 25mm PAN HEAD SCREWS "L" SAFETY BRACKET



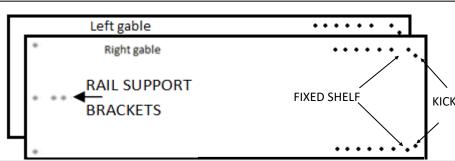

TAKE YOUR GABLES AND LAY THEM OUT FLAT, YOU SHOULD HAVE A LEFT AND RIGHT GABLE.


NEXT STEP REQUIRES YOU TO OPEN PART 2 KICK AND RETREVE THE INFILL. AND SCREWS.

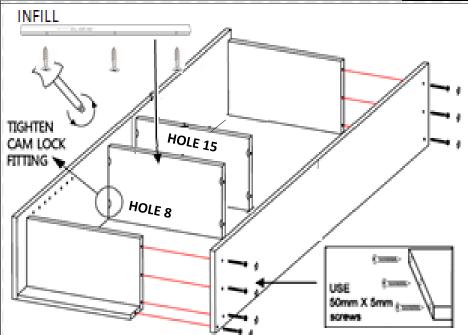

INSERT YOUR 4 PINS INTO THE HOLE NO: THEN INSERT THE CAMS INTO THE HOLES PROVIDED ON YOUR SHELF. USING SCREW DRIVER TWIST CAM INTO LOCK POSITION.

ALIGN YOUR SHELVES AND KICK TO THE LEFT-HAND GABLE, SCREW THEM INTO PLACE ATTACH YOUR RIGHT-HAND GABLE AND DO THE SAME.

FOLD OUT THE BACK, PROCEED TO NAIL IT INTO POSITION MAKING SURE YOU ARE

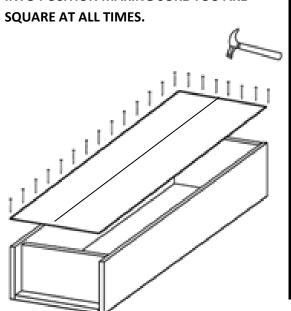



NEXT STEP.

TAP INTO POSITION YOUR FLANGES INTO THE HOLES PROVIDED IF YOU WISH YOU CAN SCREW IN 1 SCREW INTO THE MIDDLE OF THE FLANGE AND SLIDE ON YOUR HANGING RAIL.





NEXT STEP: GO TO YOUR PART 2
FOR INSTUCTIONS ON HOW TO
BUILD YOUR DRAWER.