

# Adjustable D.I.Y Shutter



EASY D.I.Y INTERNAL  
PLANTATION SHUTTER

**EASY<sup>o</sup>AS**  
ADJUSTABLE **D.I.Y** SHUTTER

Available at  
**BUNNINGS**  
warehouse

Take This Brochure to the Special Orders Desk to place an order

# EASY•AS

ADJUSTABLE **D.I.Y** SHUTTER



## EASY D.I.Y INTERNAL PLANTATION SHUTTER

Created by an industry leader known for quality and unsurpassed product innovation, EASY•AS is proud to present the world's first Adjustable D.I.Y Shutter range.



Call **1800 805 018**

Visit **easy-as.com.au**

# OWN BEAUTIFUL INTERNAL SHUTTERS TODAY

Owning beautiful shutters in your home has never been easier with the **EASY•AS** Adjustable D.I.Y Shutter range.

## AS EASY•AS 1, 2, 3



### STEP 1 MEASURE

*EASY•AS* Check Measure  
Inside Window Frame (Reveal Fit) only.



### STEP 2 ORDER

Find your shutter size within the adjustable range using the *EASY•AS* Shutter Selection Guide. Simply fill out the form (inside back page) and visit Bunnings Special Orders desk to place your order.




### STEP 3 INSTALL

Once your shutters arrive at Bunnings, take your **EASY•AS** Adjustable D.I.Y Shutter home, unpack and install.



Colour/Finish

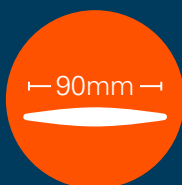

Blade Size



Adjustable Range



Material

## MADE FROM QUALITY PVC

### DURABLE, TRUSTED QUALITY

**EASY•AS Internal Plantation Shutters** are made from high quality PVC with water resistant properties – great for bathrooms and kitchens, also reinforced with an Aluminium core adding to their durability.



# CHECK MEASURE

**INSIDE WINDOW FRAME (REVEAL FIT) ONLY**  
Measure the inside of your window(s) frame across the width, height & depth as below.

## **STEP 1**

Measure window inside width



## **STEP 2**

Measure window inside height



## **STEP 3**


Measure window frame depth



**NOTE:** there needs to be **70mm depth minimum of complete clearance** from any obstacles, from the window frame edge.  
Obstacles to look for: Mullions, Locks, Window Handles, Winders, Storm Bars etc






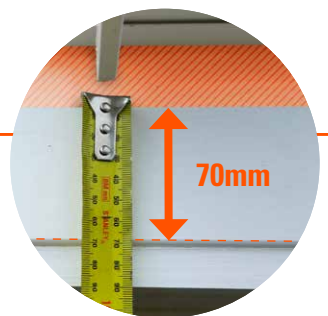














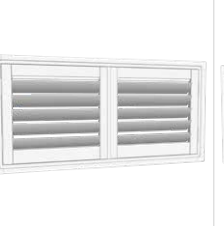
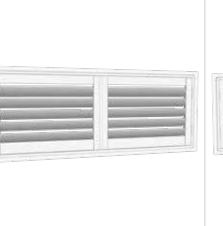





**EXAMPLE** Lock Handle

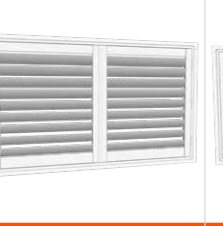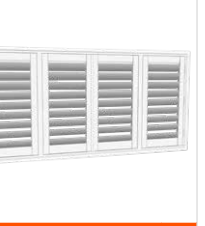

**EXAMPLE** Storm Bars
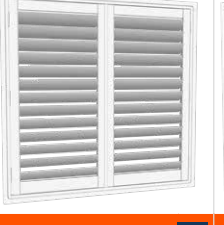
# ✓ SELECTION GUIDE

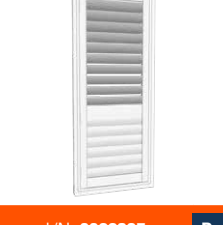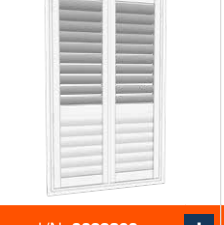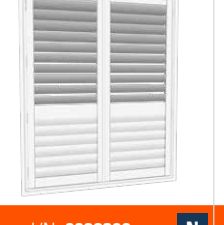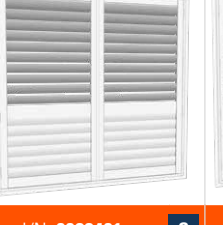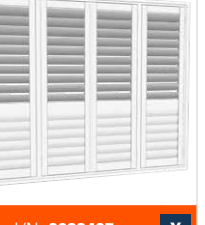INSIDE WINDOW FRAME (REVEAL FIT) ONLY

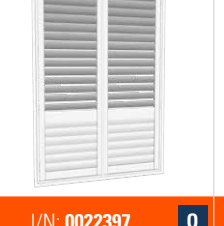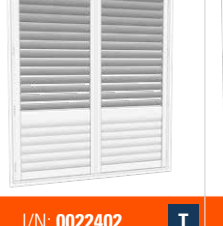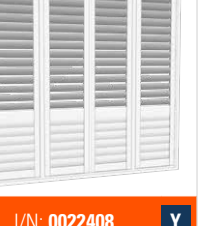
		WIDTH (mm)				
		610 (600-620)	910 (900-920)	1210 (1200-1220)	1510 (1500-1520)	1810 (1800-1820)
D R O P / H E I G H T (mm)	Adjustable Range 600 (590-610)	 I/N: 0022381 <b>A</b>	 I/N: 0022387 <b>F</b>	 I/N: 0022393 <b>K</b>	 I/N: 0022398 <b>P</b>	 I/N: 0022403 <b>U</b>
	900 (890-910)	 I/N: 0022382 <b>B</b>	 I/N: 0022388 <b>G</b>	 I/N: 0022394 <b>L</b>	 I/N: 0022399 <b>Q</b>	 I/N: 0022404 <b>V</b>
	1200 (1190-1210)	 I/N: 0022384 <b>C</b>	 I/N: 0022389 <b>H</b>	 I/N: 0022395 <b>M</b>	 I/N: 0022400 <b>R</b>	 I/N: 0022405 <b>W</b>
	1500 (1490-1510)	 I/N: 0022385 <b>D</b>	 I/N: 0022390 <b>I</b>	 I/N: 0022396 <b>N</b>	 I/N: 0022401 <b>S</b>	 I/N: 0022407 <b>X</b>
	1800 (1790-1810)	 I/N: 0022386 <b>E</b>	 I/N: 0022392 <b>J</b>	 I/N: 0022397 <b>O</b>	 I/N: 0022402 <b>T</b>	 I/N: 0022408 <b>Y</b>

# INSTALL GUIDE

**STEP 1** Lay out the frame, corners and panels in front of the window




**STEP 2** Assemble outer frame by sliding corner wedges together, then clipping on corner covers

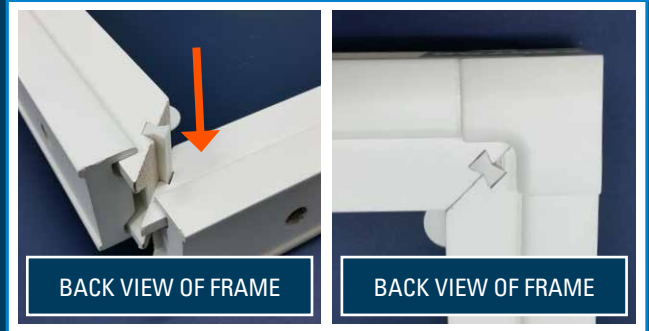


**STEP 3** Place frame into window/reveal and adjust evenly - expand turning anticlockwise. Secure with 1 screw on each side



**STEP 4** Insert panel(s) and secure with Hinge Pins. Check for smooth opening & closing

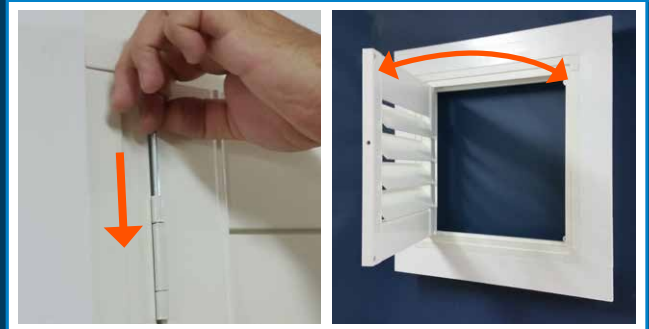

**STEP 5** Using the remaining screws, secure into window jamb. Place white tabs over holes

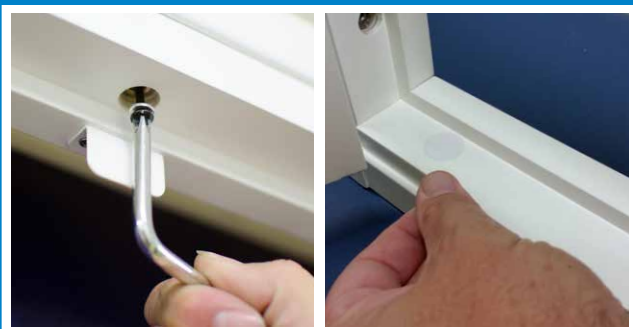

**TOOLS INCLUDED**

- Multi Tool - Screwdriver & Allen Key

**OPTIONAL TOOLS IF REQUIRED**

**Not Included / Sold Separately**

- Cordless Drill
- 2mm Drill Bit

Check out the **INSTALL VIDEO** at  
[easy-as.com.au](http://easy-as.com.au)

## USE THIS AREA TO PLAN YOUR SHUTTERS

### FOLLOW THE CHECK MEASURE INSTRUCTIONS

N.B - Check that there are no obstacles like locks, window handles, winders or storm bars that will interfere with the shutter.

Using your measurements and the  SELECTION GUIDE you can easily select your **EASY•AS** Adjustable D.I.Y Shutter and document them in the table below.

### WINDOW DETAILS

Item	Window Name/Location	Width (mm)	Height (mm)	Clearance Depth (Minimum 70mm)	Item Number (I/N)
X	Main Bathroom	910	1200	76	0022389
1					
2					
3					
4					
5					
6					

Take this to the Special Orders desk to complete your order

# How It Works

---

It's as simple as 1,2,3! Follow the steps shown to purchase or order your product. If you need further advice, speak to a Team Member at the Special Orders Desk in-store.

---

## 1. Select The Product You Want

View the extensive range available in this brochure or online. Use the item number shown below to order your product.



## 2. Order At The Special Orders Desk

After you have selected the product you want, take this brochure to the Special Orders Desk.

---

## 3. Collect Your Order

Upon placing your order, your product will arrive in 7-14 working days.

---

## Ask us about Additional Services

---



I/N: 0028821

