



It is advisable to wear protective gloves when handling these items, sensible shoes are also recommended.

**Please note the crate clips are designed to rust and may cause marking to the surface they are placed on.**




We recommend assembling the bed on a flat hard level surface and once complete it is advised to fill and plant out the Grow Crate on a level surface.


**Please use the palm of your hand when pushing on the clips, keeping fingers clear**

## ASSEMBLY


### Component List

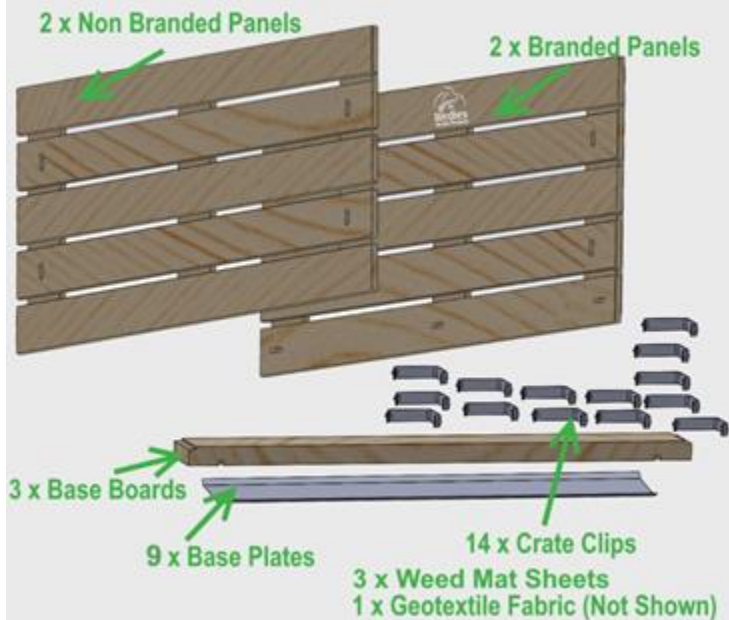


**NB: This Crate assembles upside down**

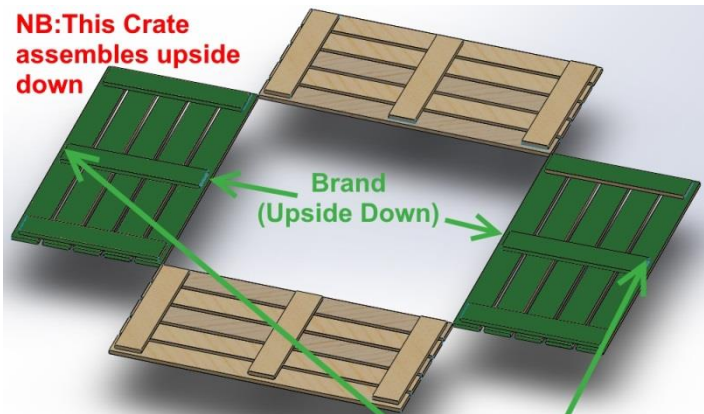

Place the branded slotted panels opposite each other facing down with the bottom slots facing out

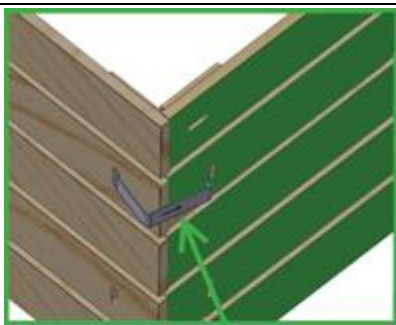


Place the short end of the clip into the slot on the non-branded panel and firmly push the marked end of the clip over the corner and into the side slot on the branded panel

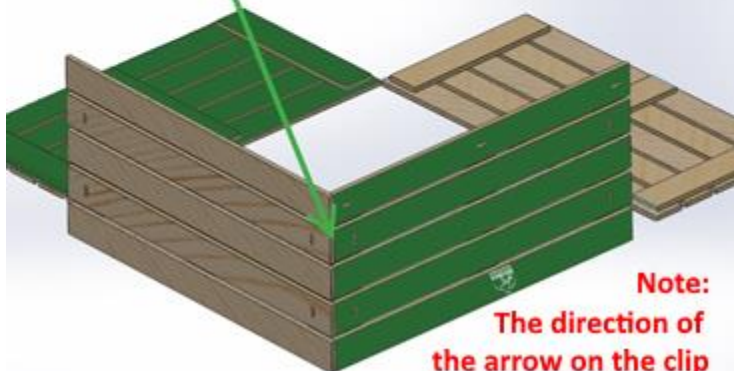


### NOTE:

Please ensure that the panels are overlapped correctly with the Branded Panels positioned inside the Non-Branded Panels.

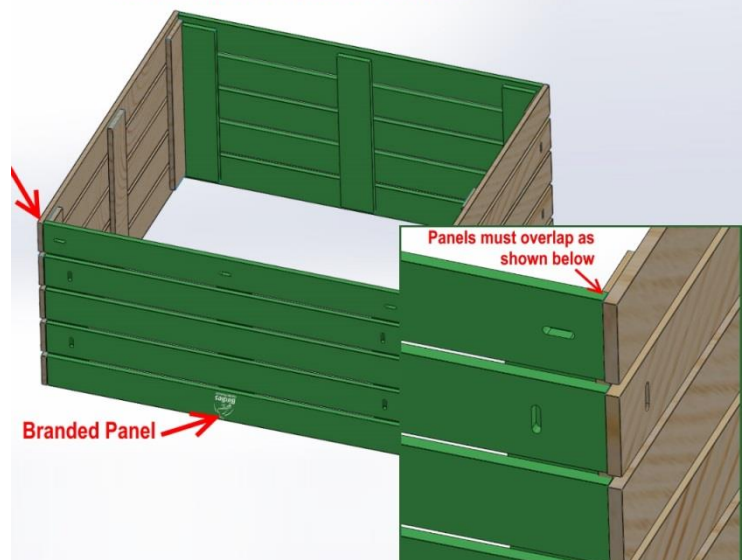




Tilt up the remaining panels and fixed them into place with the clips following step 3. You should now have the 4 outside walls of your Grow Crate in position

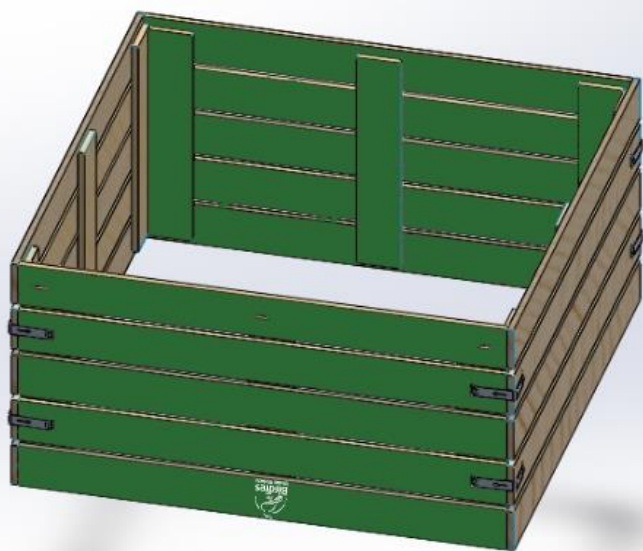



Place the base boards into position making sure the notched edge of the base board is resting on the branded side panel

Before turning your Grow Crate over push on the remaining clips to lock the base supports in place

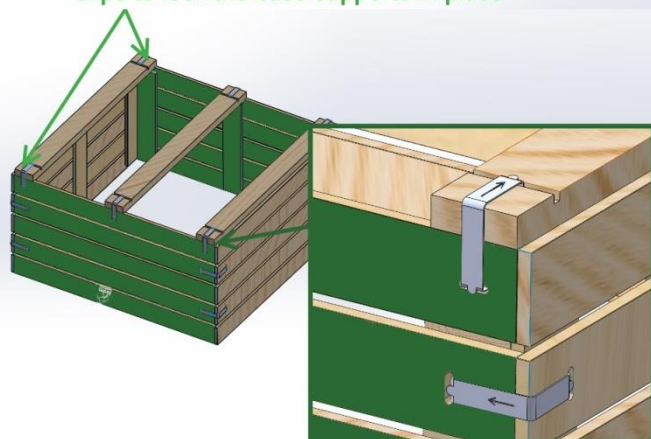

Place your base plates into position across the timber base supports making sure they overlap as per the caption below. Once in position place your square section of geotextile fabric onto the base plates with the remaining lengths of weedmat placed around the inside walls of the side panels. This can be held in place with some masking tape or pegs until you have filled you bed with soil

**Note:**  
Remove protective plastic lining from base plates

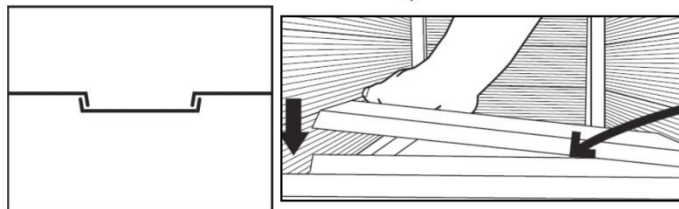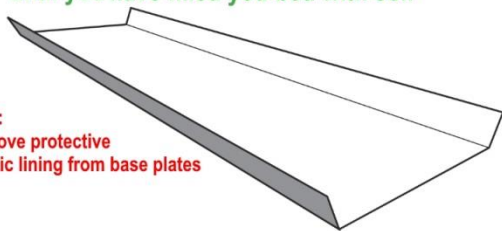

Geo Textile

Weed Mat x3  
Lining inner walls



**Please note:**

The Grow Crate Clips are only designed to go on one way, if the clips don't 'click' into place with a firm push we recommend looking at how your side panels are overlapped and then try again. Clips can be removed using a claw hammer.