


ASSEMBLY INSTRUCTION FOR LSD 550








LSD 550


When attaching unit to wall put safety bracket in middle of unit with 16mm pan head screw then 25mm pan head screw into wall. For plaster-board without a stud it is recommended to use a plug with screw (not provided).

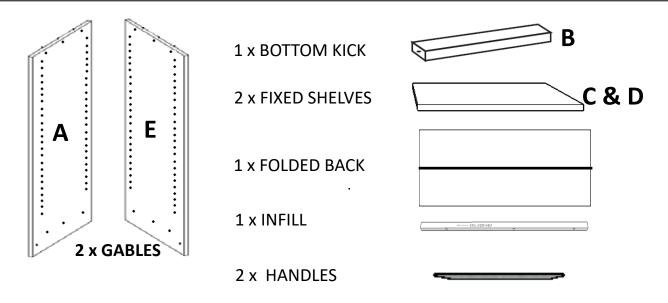

NO	MODEL	DESCRIPTION	
1	(3)	CONFIRMAT SCREWS 50mm x 5mm	10
2		WHITE CAPS	10
3	o	BACKING NAILS	75
4	Similia-	16mm PAN HEAD WOOD SCREWS	1
5		25mm PAN HEAD WOOD SCREWS	1
6	4 - 17777	30mm COUNTER SUNK WOOD SCREWS	3
7	000	"L" SAFETY BRACKET	1



ASSEMBLY INSTRUCTION FOR LSD 550

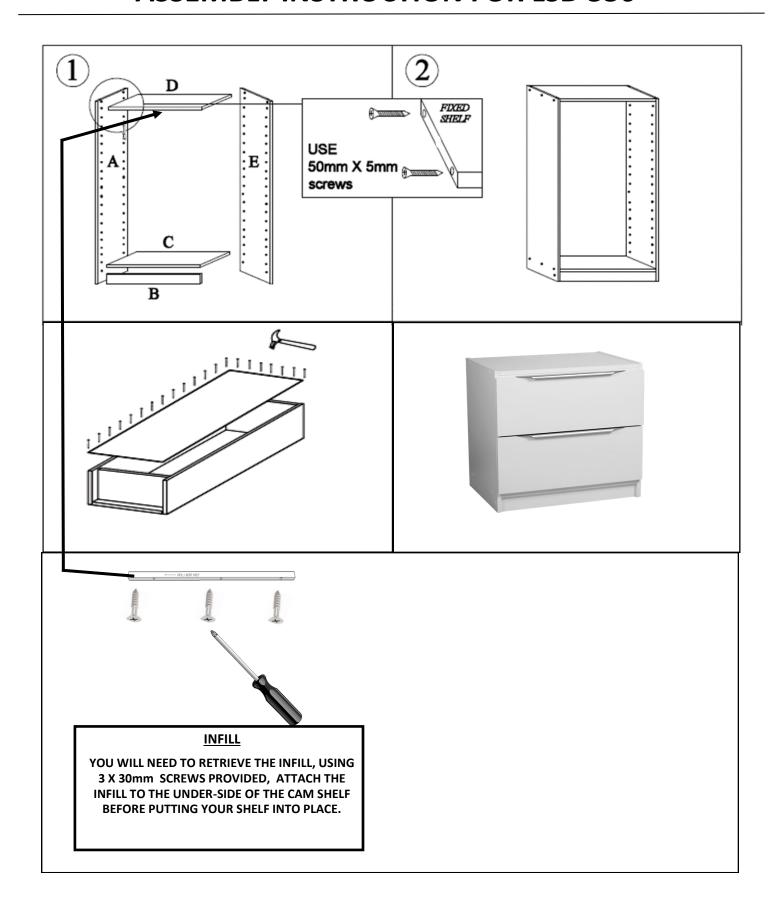




ASSEMBLY INSTRUCTION FOR LSD 550 DRAWERS


NO	MODEL	DESCRIPTION	QTY	NO	MODEL	DESCRIPTION	QTY
1	*Decommon*	CONFIRMAT SCREWS	8	5	30	CAMS	4
2		DOWELS	8	6	GIÚ SE	CAM PINS	4
3	o	BACKING NAILS	60	7	OF THE STATE OF TH	EURO SCREW	8
4	4 - min	16mm WOOD SCREWS	12	8		DRAWER RUNNERS	2

STEP 1.

LAYOUT YOUR DRAWER PIECES FLAT AS PER DESIGN WITH PRE-DRILLED HOLES FACING UP.

START WITH THE BACK OF THE FRONT DRAWER AND PLACE YOUR DOWELS & CAM PIN IN THE PRE-DRILLED HOLES ON EITHER SIDE AS INSTRUCTED BELOW.

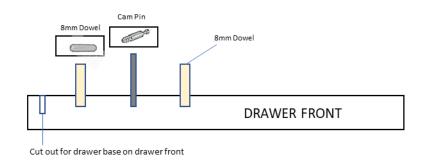

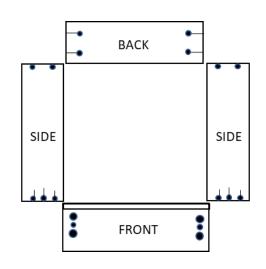


STEP 2.

GRAB YOUR FIRST SIDE AND INSERT YOUR CAMS INTO THE HOLE PROVIDED ON THE OUTSIDE OF THE DRAWER SIDE GENTLY AS PER INSTRUCTIONS BELOW.



IMPORTANT NOTICE:

PLACE THE FITTING OVER THE HOLE KEEPING THE SQUARE EDGE OF THE FITTING PARALLEL TO THE FACE OF THE BOARD, KNOCK IN **CAREFULLY**.

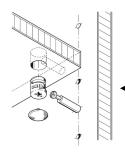

PUSH THE SIDE INTO THE FRONT DOWELS & PIN AND THEN CAREFULLY USING A SCREW DRIVER TURN UNTIL IT LOCKS IN. REPEAT THIS PROCESS WITH THE OTHER SIDE.


NOW PLACE YOUR LAST PIECE BETWEEN THE TWO SIDES USING THE SCREWS: NO: 1 SUPPLIED SCREW INTO THE SIDES OF THE BACK DRAWER PIECE.



DRAWER ASSEMBLY


STEP 3.

YOUR DRAWER SHOULD BE FACING DOWN WITH THE FRONT DRAWER EXPOSING THE CUTOUT FOR THE BASE TO BE PUSHED INTO FACE DOWN WITH THE BROWN SIDE SHOWING. MAKING SURE YOU HAVE THE DRAWER SQUARE, PROCEED TO NAIL DOWN THE BASE SPACING THEM OUT AROUND THE EDGE OF THE THREE SIDES.

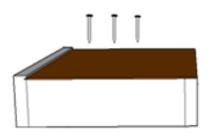

STEP 4.

RUNNER PLACEMENT



C-LEFT-GABLE RUNNER


PLACE YOUR RUNNERS INTO THE DESIGNATED HOLES MAKING SURE THE WHEEL IS FACING TO THE FRONT ON THE GABLE.

HOLE POSITION NO 1 AND 8.

YOUR DRAWER RUNNER WILL HAVE THE WHEEL TO THE BACK OF THE DRAWER.

STEP 5.


USING THE HANDLE SCREW (NO:4) ATTACHED THE HANDLE TO THE BACK OF THE DRAWER FRONT INTO THE PREDRILLED HOLES ALREADY PROVIDED.





STEP 6.

PLACE YOUR DRAWER RUNNER ON THE BOTTOM OF THE DRAWER FLUSH WITH BACK OF DRAWER, THEN USING THE WOOD SCREWS PROVIDED (No:4) SCREW TWO INTO EACH RUNNER. REPEAT FOR THE OTHER SIDE.

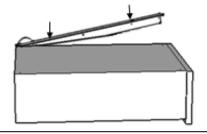

PICTURE OF YOUR FINISHED DRAWER



Multistore Industries (Aust) Pty Ltd

9 Nevilles Street, Underwood, QLD 4119

Tel-(07) 3208 6799 Fa

Fax- (07) 3209 6332

www.multistore.com.au

sales@multistore.com.au



WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement of refund for major failure.

10 Year Warranty

- If the purchaser has a fault or defect with this product, the purchaser needs to contact Multistore Industries (Aust) directly on (07) 3208 6799 and state date of purchase, place of purchase and proof of purchase.
- Multistore Industries (Aust) will replace any faulty or defect parts at no cost to the customer. A replacement will be sent to you as soon as possible, or product can be exchanged at the store of purchase.
- This warranty is in addition to other rights and remedies of the customer under law.

Sincerely,

Multistore Industries (Aust) Management