


Screen housing profile

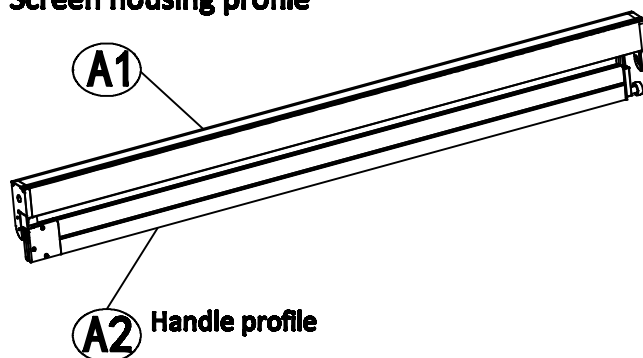

(A) x2



(F) x9

M4X25



(G) x9

M4X20



(H) x8

M3X12





(I) x12

M3X20





(J) x12

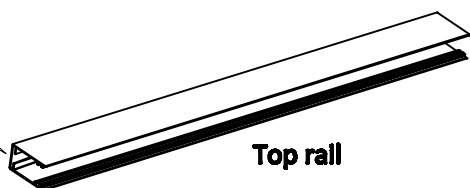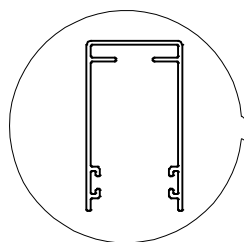


(C) x2

Top rail

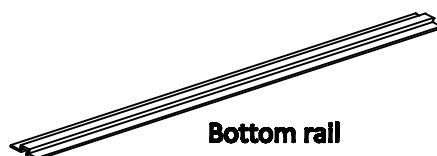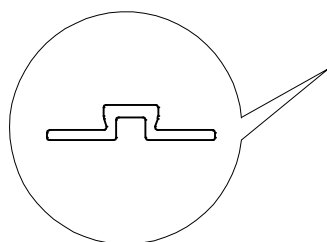

(D) x2


Bottom rail

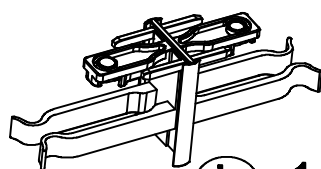


(L) x1




Handle
(K) x4




Clip piece
(E) x6

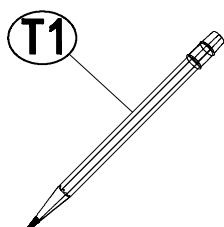


(T1)

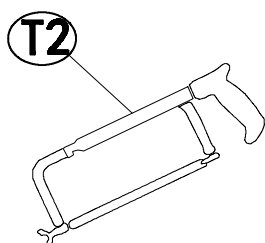


(T2)

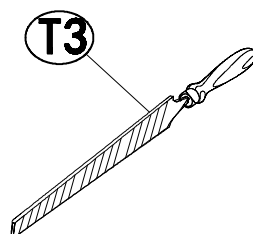


(T3)

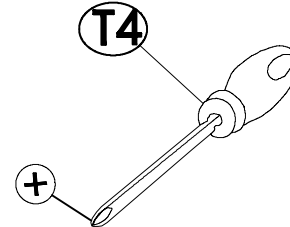

(T4)

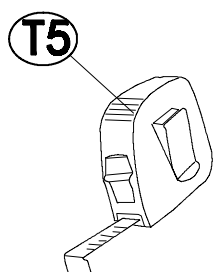


(T5)

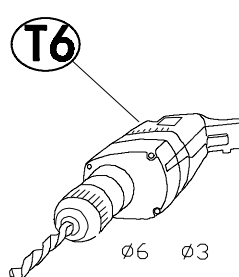


(T6)


Ø6 Ø3

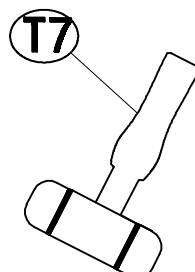




(T7)

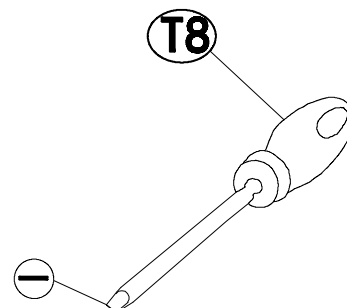


(T8)

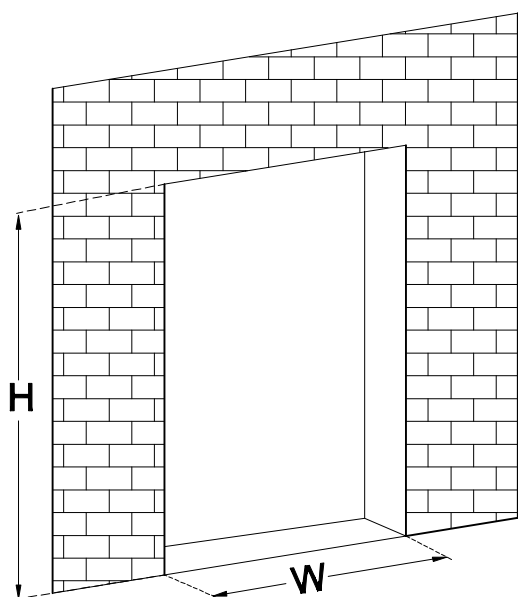

Measure the dimension of the door (High and Width), then cut the profiles as following instructions.

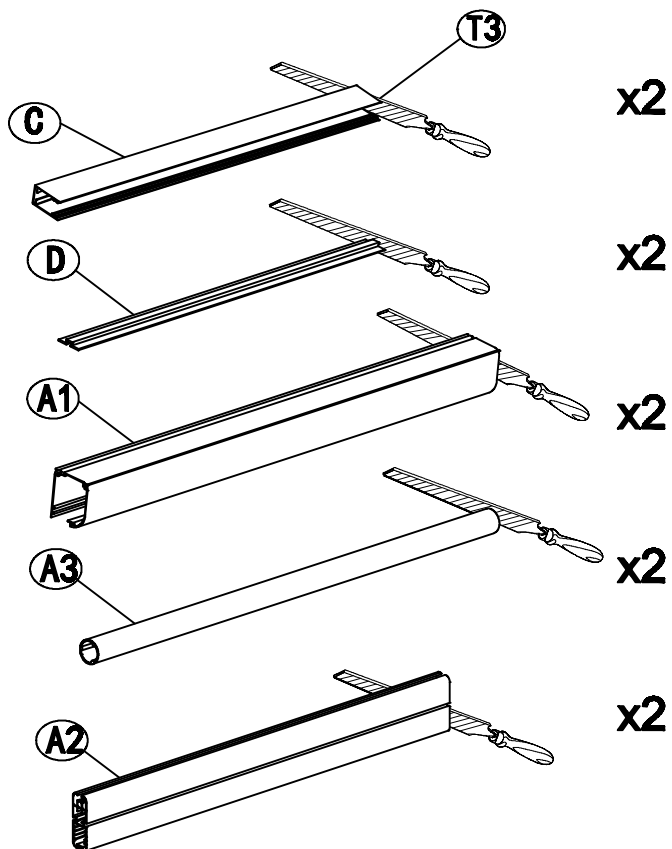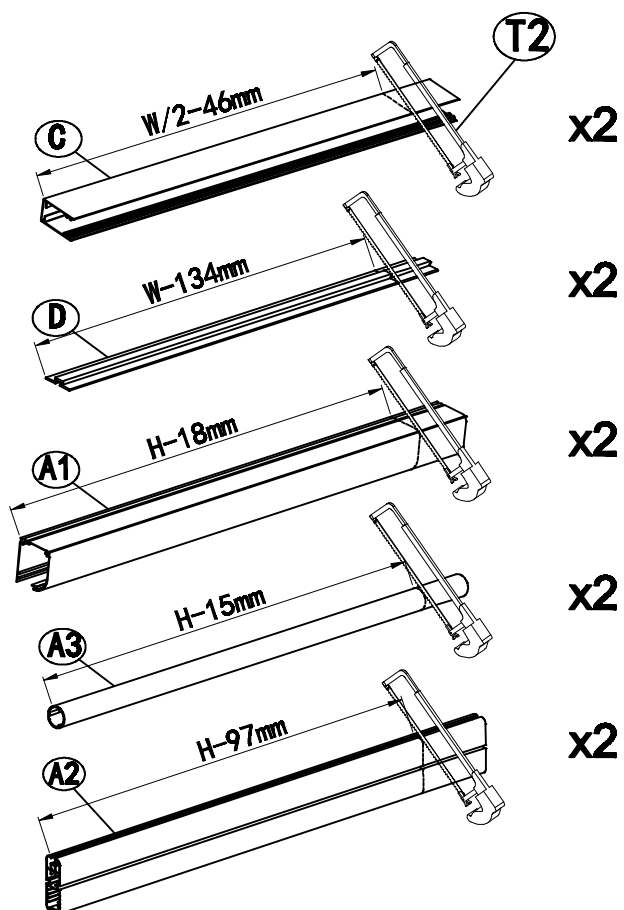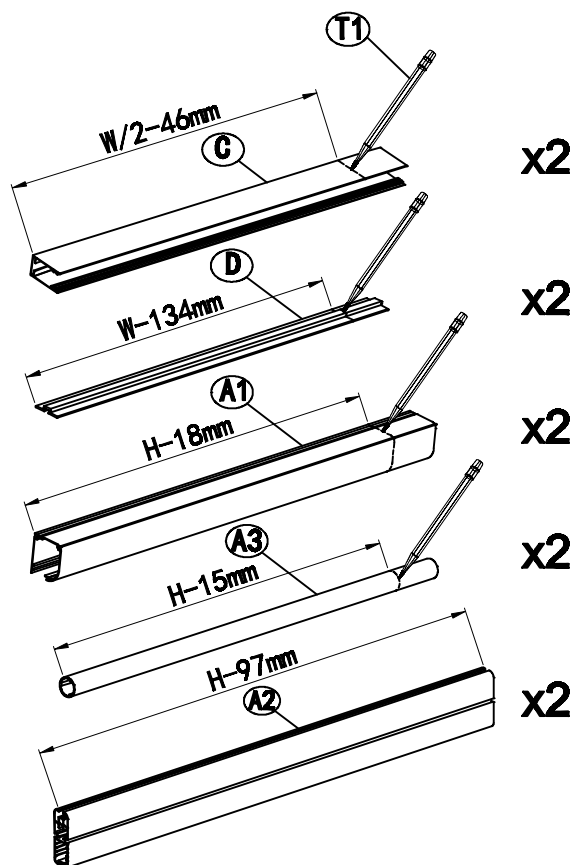


Left door

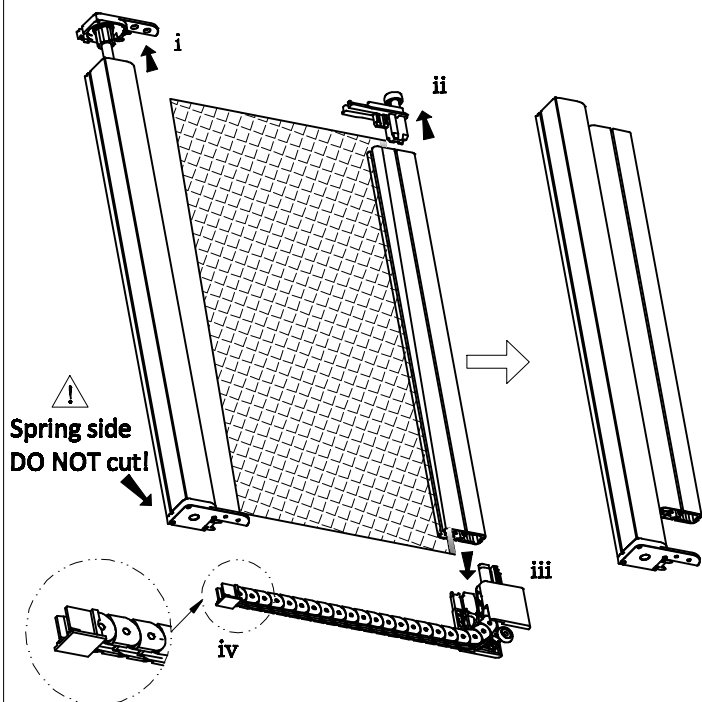


The screen house + handle bar cutting:


- Take off the top end cap from Screen housing.
- Take off the top end cap from handle profile.
- Release the bottom end cap from the handle bar.
- Take off chain from the end cap of Screen housing.

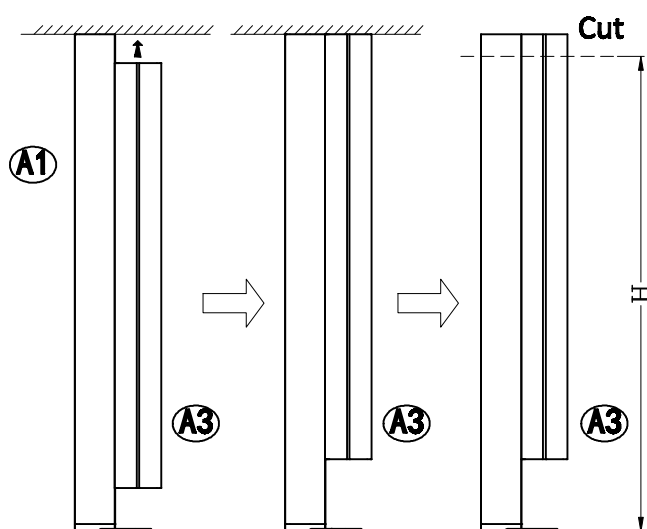

Then make the end of both profiles on the same level for cutting.

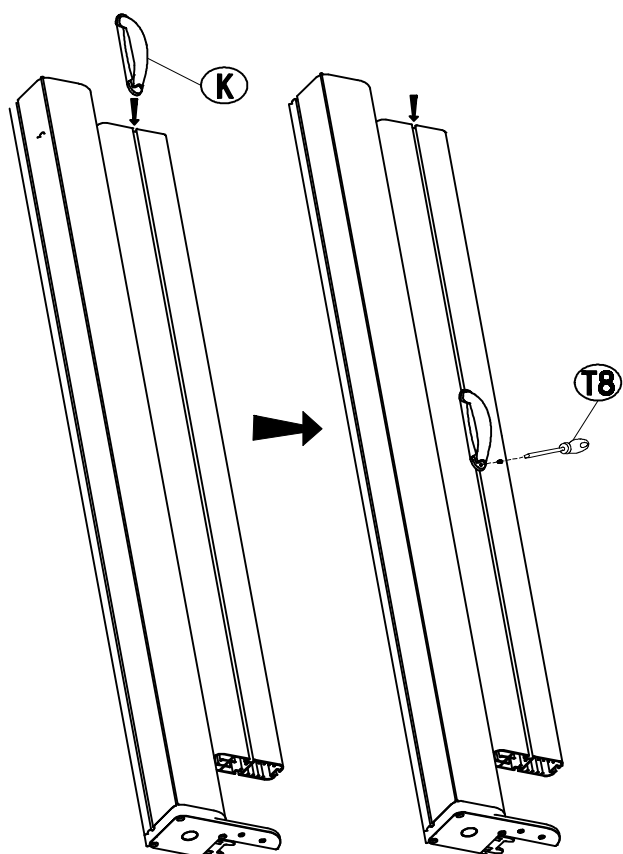


After cutting, put the handles into the handle profile and fix it to the proper position.

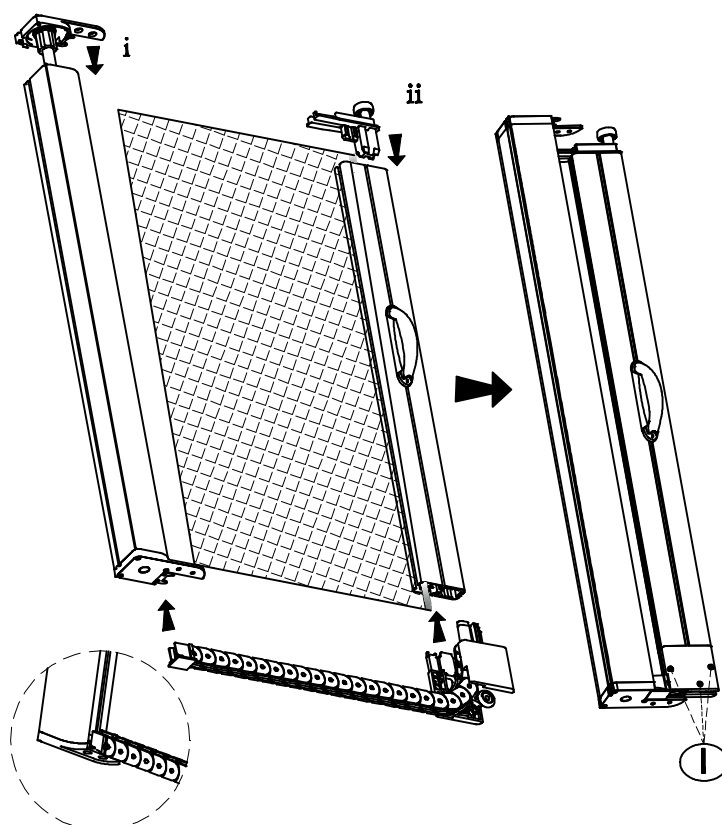


Then put the end caps back to the screen housing + handle profile, assemble again.
Also remember to connect the chain to the bottom end cap on the screen housing.

Right door

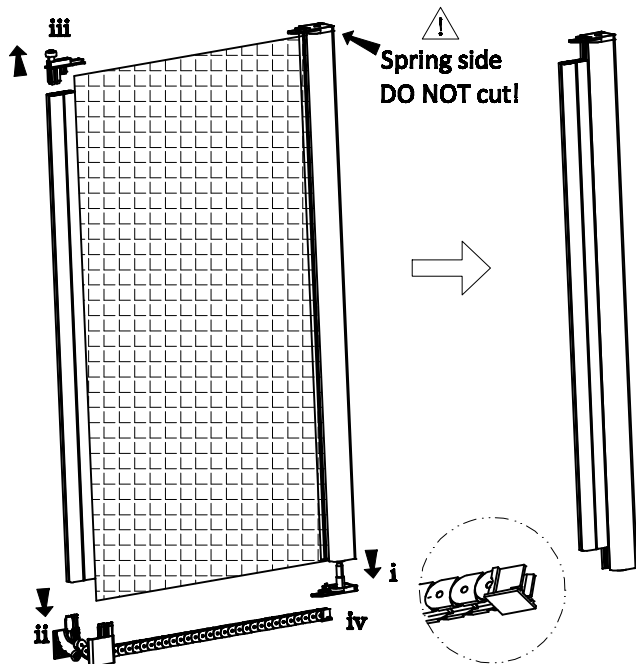


The screen house + handle bar cutting:


- i. Take off the bottom end cap from Screen housing.
- ii. Take off the bottom end cap from handle profile.
- iii. Release the top end cap from the handle bar.
- iv. Take off chain from the end cap of Screen housing.

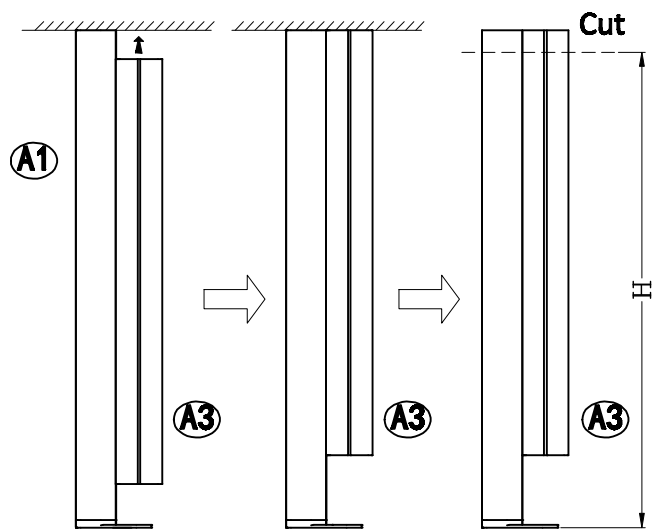


Then make the end of both profiles on the same level for cutting.

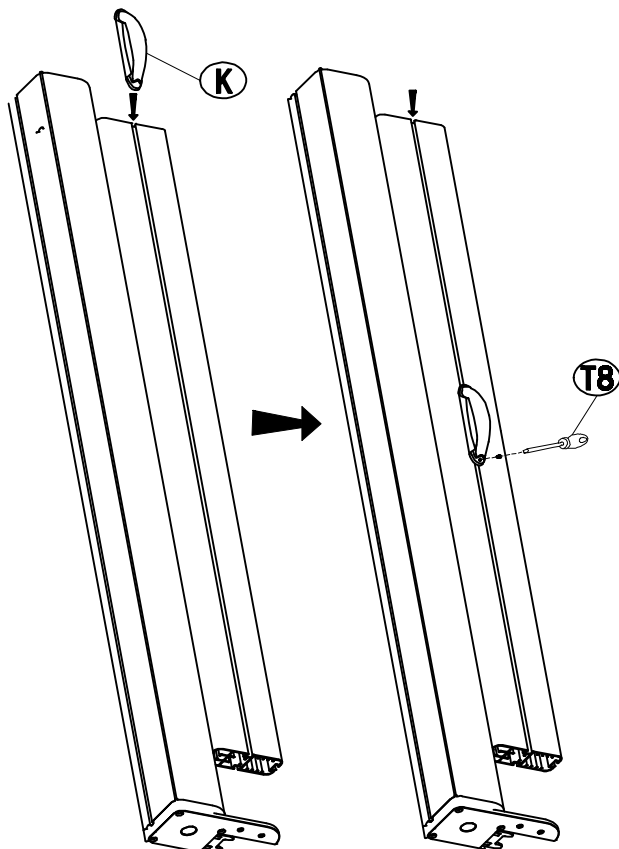


After cutting, put the handles into the handle profile and fix it to the proper position.

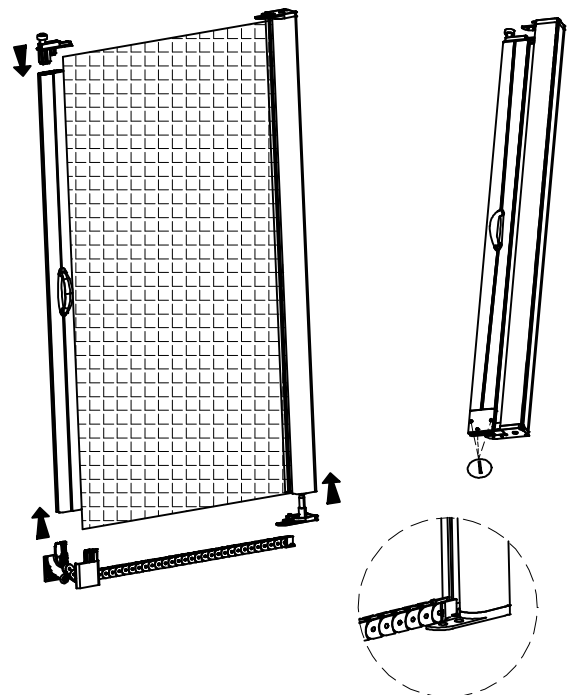


Then put the end caps back to the screen housing + handle profile, assemble again.
Also remember to connect the chain to the bottom end cap on the screen housing.

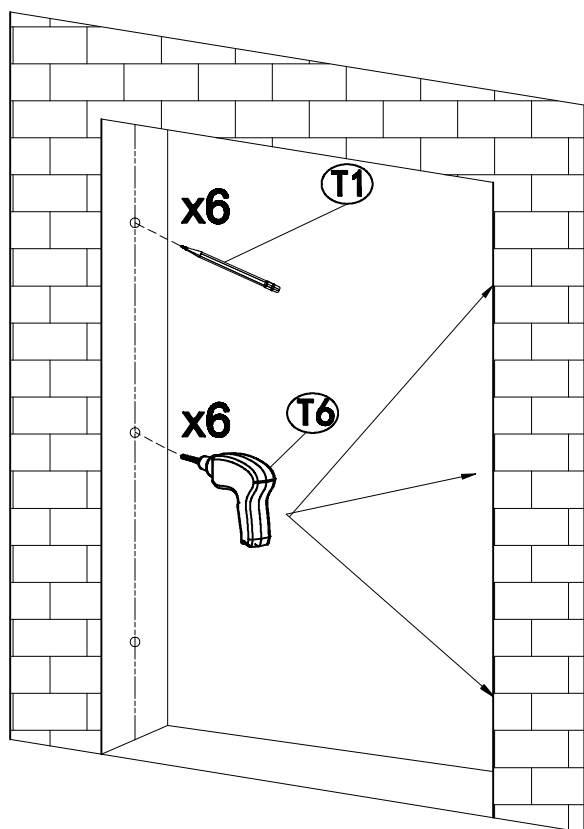


Mark the screw holes for the clipping piece and drill holes on the mark.

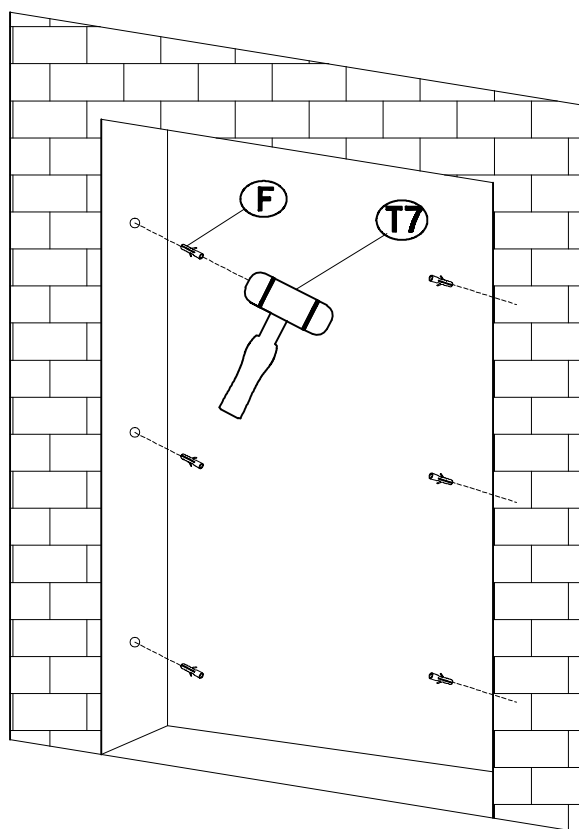







Put the expansion nail into the screw hole already drilled.

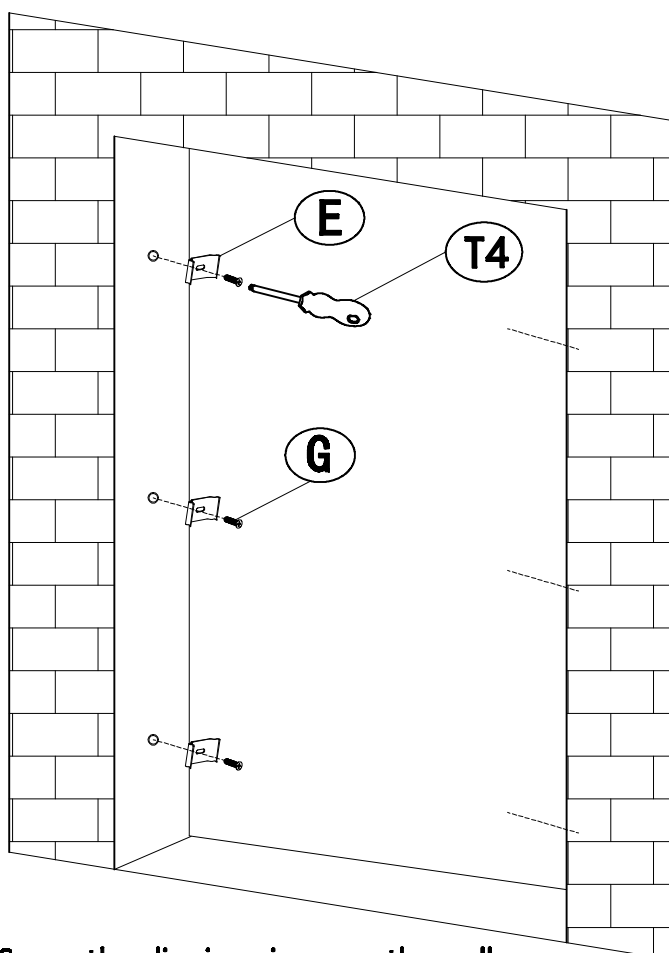

Screw the clipping pieces on the wall

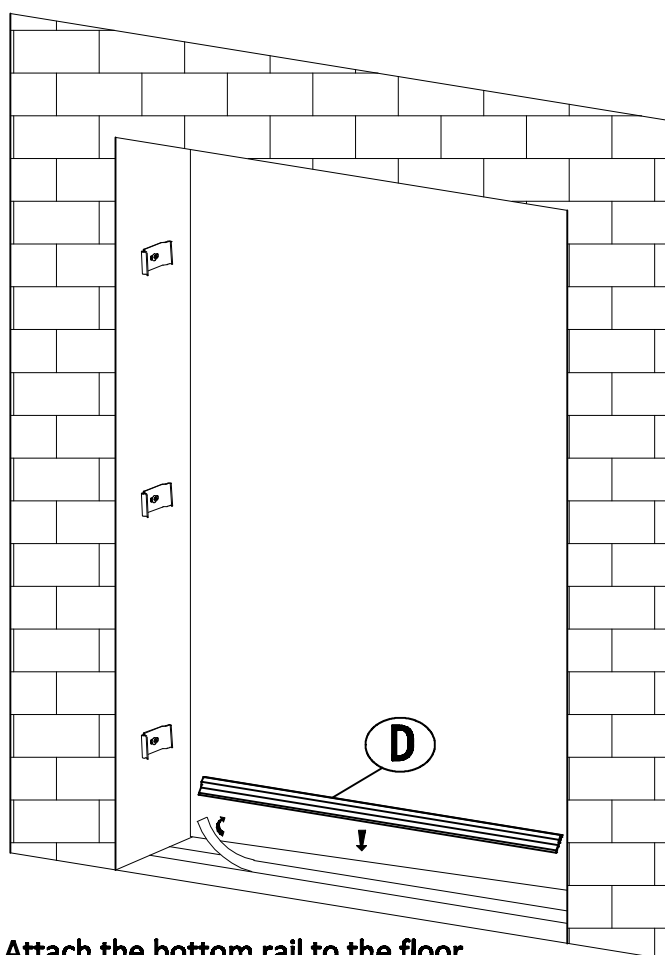

Attach the bottom rail to the floor with a double sided adhesive tape.

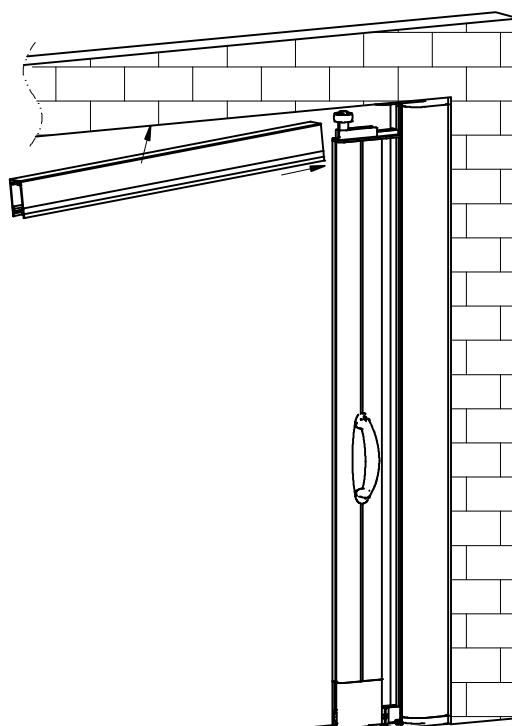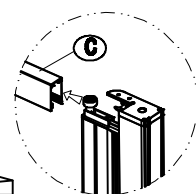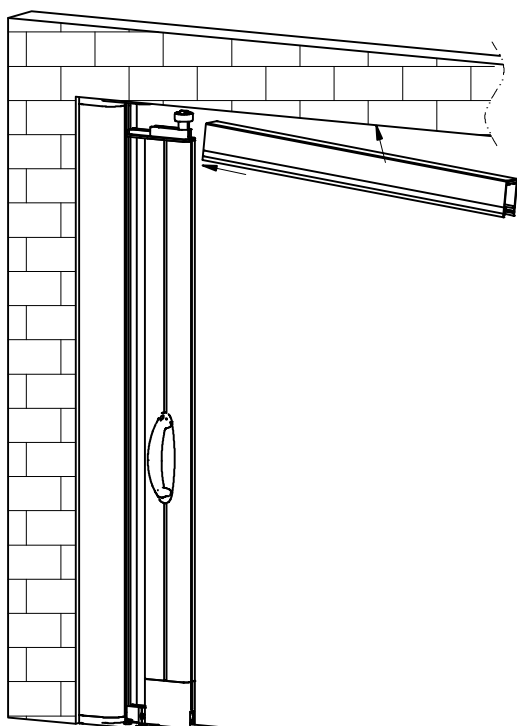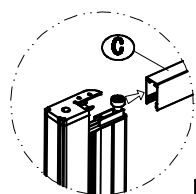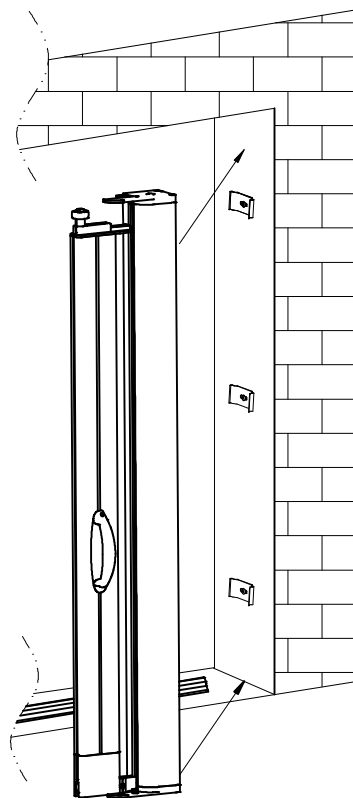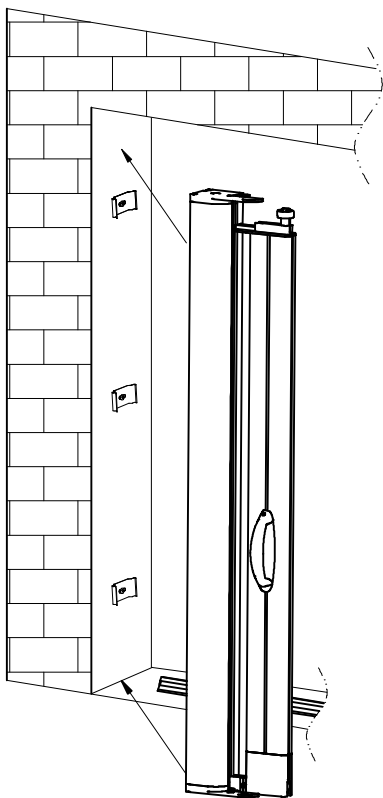

After that connect the top rail to the top end cap of the screen housing.

After that connect the top rail to the top end cap of the screen housing.

