




AZZURRA

INSTALLATION INSTRUCTIONS

MONZA, TITAN, EVERE, COMO & UNIVERSAL ON RAIL

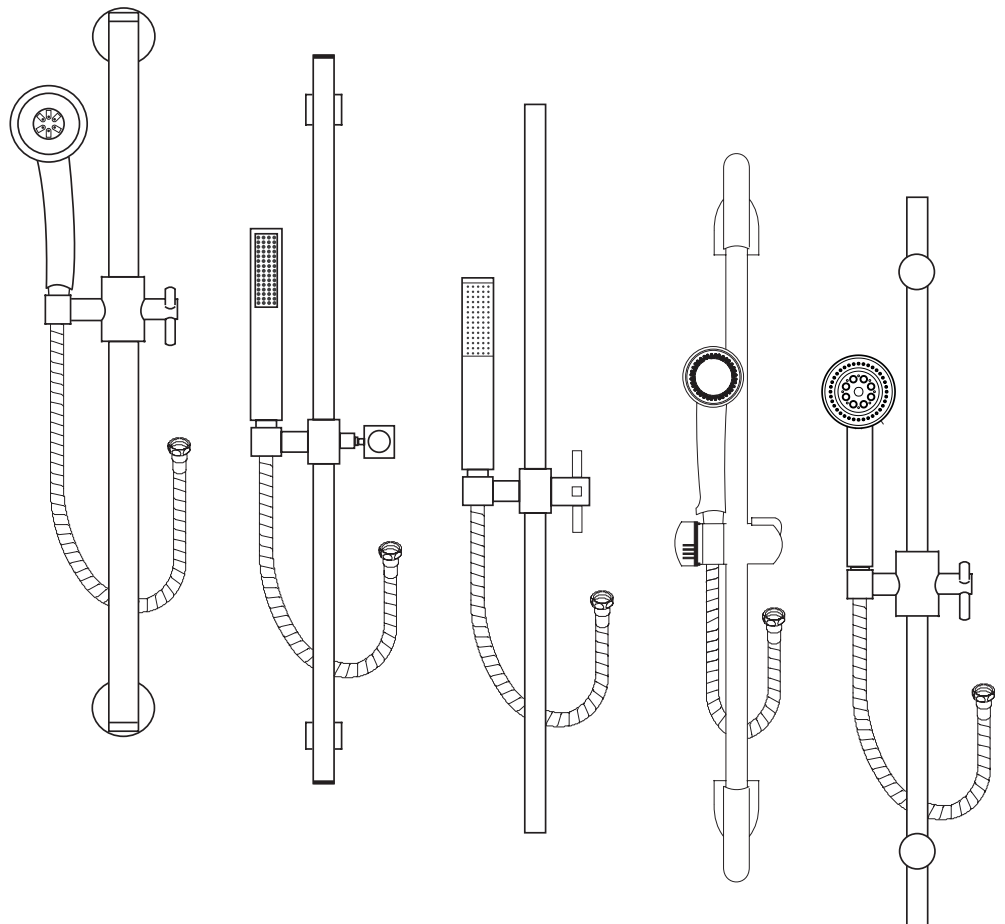


Installation is to be in accordance with AS/NZS3500 as required by
AS/NZS3662

VERSION 2.0 2013

MONZA, TITAN & EVERE ON RAIL

Installation Instructions

FOREWORD

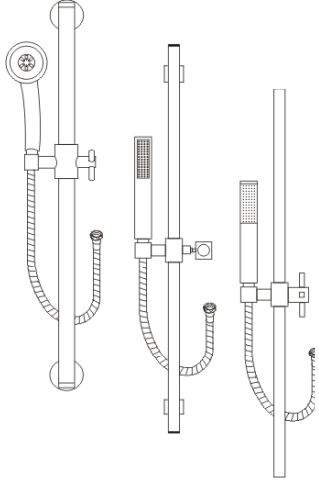


- Please ensure these installation instructions are current and for the product they are intended for.
- These instructions are a guide only and all Azzurra products must be installed by a trade qualified plumber.
- Ensure that the correct tools are used in each step of these procedures.
- For further information and or product support contact Azzurra Imports Pty Ltd.

MONZA, TITAN & EVERE ON RAIL

Installation Instructions

RAIL, ELBOW, HOSE & SHOWER HEAD INSTALLATION

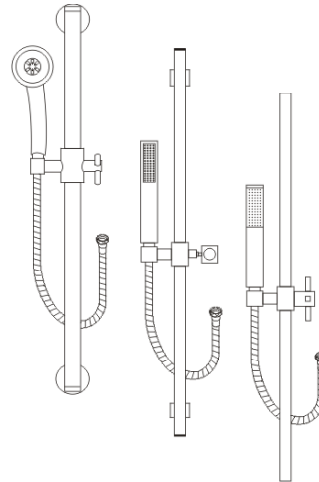

1. With the allen key provided unscrew the grub screws in the base plates and remove the wall brackets.
2. Position rail in the desired location and mark around the top and bottom face plates.
3. With a straight edge and using a spirit level mark the vertical centreline of the circle drawn.
4. Bisect this line centrally and mark 2 holes in each bracket.
5. Drill 4 holes as marked and insert the wall plugs provided.
6. Attach the brackets using the stainless steel screws supplied.
7. Attach rail to the brackets, securing with the allen headed grub screws.
8. Connect the flexible hose to the 1/2" bsp supply pipe and using this to direct the water stream to the waste outlet, flush the line thoroughly.
9. Remove the hose after flushing.
10. Screw the right angled wall elbow to 1/2" bsp thread protruding from the wall.
11. Fit the shower head to the flexible hose and then connect to the right angled wall elbow.


***N.B. Please be careful during installation to avoid scratching the shower set. Care should be taken not to damage the flow controller when fitting the wall elbow to a male thread. Product may not be suitable for use with gravity-fed water heaters, low pressure supply networks, instantaneous water heaters, tempering valves and thermostatic mixing valves.**

COMO SHOWER ON RAIL

installation Instructions

FOREWORD

- Please ensure these installation instructions are current and for the product they are intended for.
- These instructions are a guide only and all Azzurra products must be installed by a trade qualified plumber.
- Ensure that the correct tools are used in each step of these procedures.
- For further information and or product support contact Azzurra Imports Pty Ltd.

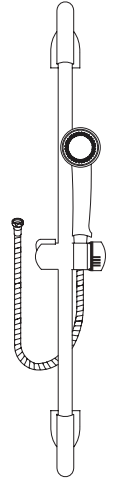


COMO SHOWER ON RAIL

installation Instructions

RAIL, ELBOW, HOSE & SHOWER HEAD INSTALLATION

1. Slide off the covers from both end brackets.
2. Position rail in the desired location checking that it is vertical using a spirit level.
3. Mark the position of the holes in both end brackets.
4. Drill six holes as marked and insert the wall plugs provided.
5. Attach the brackets using the stainless steel screws supplied.
6. Slide on the bracket cover plates.
7. Connect the flexible hose to the 1/2" bsp supply pipe and using this to direct the water stream to the waste outlet, flush the line thoroughly.
8. Remove the hose after flushing.
9. Screw the right angled wall elbow to 1/2" bsp thread protruding from the wall.
10. Fit the shower head to the flexible hose and then connect to the right angled elbow.




***N.B. Please be careful during installation to avoid scratching the shower set. Care should be taken not to damage the flow controller when fitting the wall elbow to a male thread. Product may not be suitable for use with gravity-fed water heaters, low pressure supply networks, instantaneous water heaters, tempering valves and thermostatic mixing valves.**

UNIVERSAL ON RAIL

Installation Instructions

FOREWORD




- Please ensure these installation instructions are current and for the product they are intended for.
- These instructions are a guide only and all Azzurra products must be installed by a trade qualified plumber.
- Ensure that the correct tools are used in each step of these procedures.
- For further information and or product support contact Azzurra Imports Pty Ltd.

UNIVERSAL ON RAIL

Installation Instructions

RAIL, ELBOW, HOSE & SHOWER HEAD INSTALLATION



1. Position rail in the desired location and mark around the top and bottom face plates.
2. With a straight edge and using a spirit level mark the vertical centreline of the circle drawn.
3. Bisect this line centrally and mark 1 hole in each bracket 570mm apart.
4. Drill 1 hole as marked and insert the wall plugs provided.
5. Attach the brackets using the stainless steel screws supplied.
6. Screw the right angled wall elbow to 1/2" bsp thread protruding from the wall.
7. Connect the flexible hose to the 1/2" bsp supply pipe and using this to direct the water stream to the waste outlet, flush the line thoroughly..
8. Remove the hose after flushing.
9. Screw the right angled wall elbow to 1/2" bsp thread protruding from the wall.
10. Fit the shower head to the flexible hose and then connect to the right angled wall elbow.

***N.B. Please be careful during installation to avoid scratching the shower set. Care should be taken not to damage the flow controller when fitting the wall elbow to a male thread. Productr may not be suitable for use with gravity-fed water heaters, low pressure supply networks, instantaneous water heaters, tempering valves and thermostatic mixing valves.**

Azzurra Imports Pty Ltd - Product Warranty can be found on the Website at www.azzurra.com.au

For product support please call 1300 765 768