


Premier Garden Shed Assembly Instructions Model: J30232GK



We thank you for choosing an Australian made shed. For further assistance please visit our detailed instructional video library at Http://www.abscosheds.com.au/watch-videos

At ABSCO Industries we are always looking to be number ONE, so please let us know what you think of our instructions. Feedback makes us better. feedback@absco.com.au

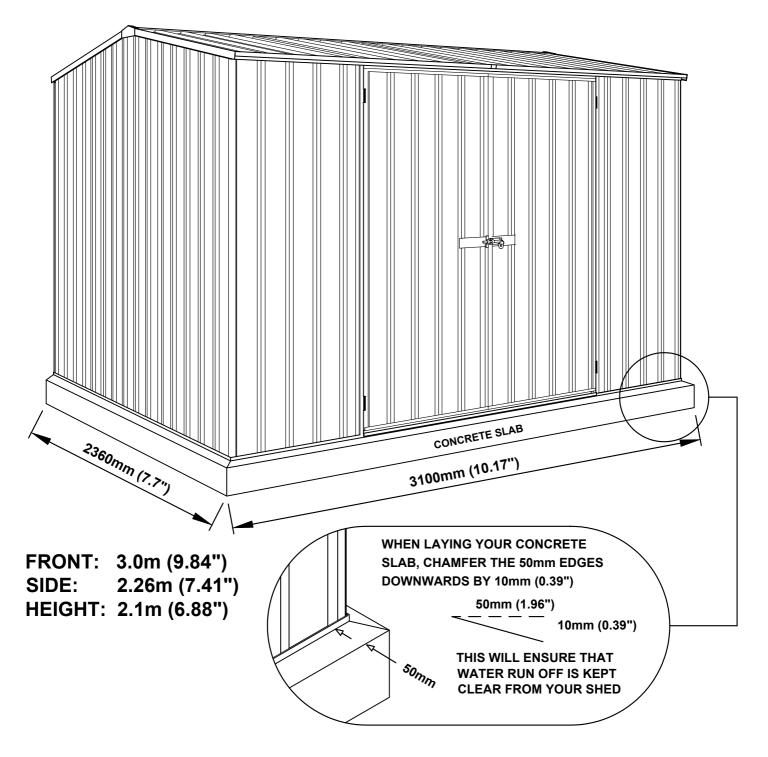

GENERAL INSTRUCTIONS

- Before commencing any assembly, read through these instructions in detail to gain a thorough understanding of assembly methods and associated details.
- Unpack the carton and carefully identify and check off all the parts against the parts described and illustrated on pages three and four.

SITE PREPARATION

- The site for the shed must be level. An uneven surface may result in misalignment of parts.
- It is recommended that the shed be set on a 100mm concrete slab and anchored down appropriately (refer to last page for details).
- Anchor sets are not supplied as standard items with this product as some customers wish to use their own anchoring systems.







Normal: 4mm & 10mm Masonry: 10mm

- A NOTE ON SAFETY
- Some parts may have sharp edges. It is advisable to wear gloves when handling these items and safety glasses if drilling holes. Sensible shoes are highly recommended.
- Do not erect your shed in windy conditions, ensure that the shed is securely anchored to a solid foundation immediately after construction is completed.
- It is highly recommended to erect the shed with two or more people.














COMPONENTS PACKING LIST - CHECK OFF ALL COMPONENTS

QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	СНЕСК
2	STEEL SHEET 1785mm X 773mm (70.3" X 30.4")	30A		2	JAMB L= 1785mm (70.3")	89A	
2	STEEL SHEET 1785mm X 773mm (70.3" X 30.4")	31A		1	JAMB L= 1568mm (61.7")	90A	
1	STEEL SHEET 1725mm X 773mm (67.9" X 30.4")	A		1	JAMB L= 1725mm (67.9")	89C	
1	STEEL SHEET 1725mm X 773mm (67.9" X 30.4")	В		4	JAMB L= 1120mm (44.1")	91A	
8	STEEL SHEET 1170mm X 773mm (40.1" X 30.4")	49A		4	LIP TRIM 1170m (46.1")	86A	
2	STEEL SHEET 1915mm X 773mm (75.4" X 30.4")	36L		2	PEAK BRACE 490mm (19.3")	15A	
2	STEEL SHEET 1915mm X 773mm (75.4" X 30.4")	36R					
2	STEEL SHEET 1980mm X 773mm (77.9" X 30.4")	42D					
2	STEEL SHEET 1785mm X 711mm (70.3" X 28.0")	34A					



COMPONENTS - SPLICED CHANNEL & RIDGE BEAM

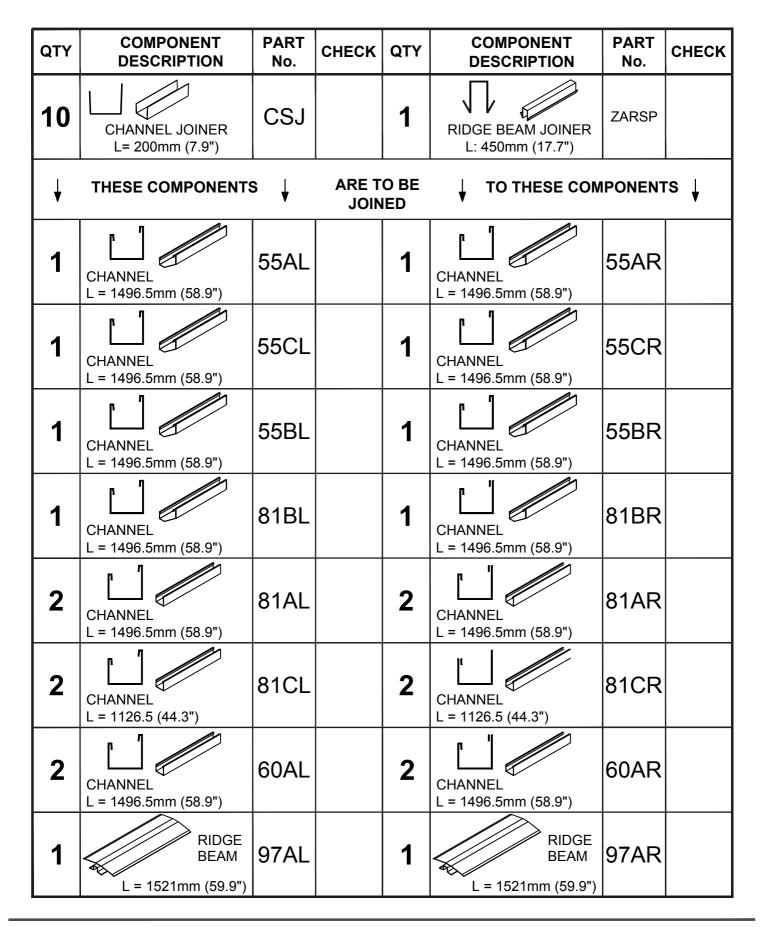



FULL LENGTH CHANNELS & ACCESSORIES

QTY	COMPONENT DESCRIPTION	PART No.	СНЕСК	QTY	COMPONENT DESCRIPTION	PART No.	СНЕСК
1	CHANNEL L = 1568mm (61.7")	79A		2	CHANNEL L = 1143mm (45.0")	83L	
2	CHANNEL WITH HINGES L = 1725mm (67.9")	58A		2	CHANNEL L = 1143mm (45.0")	83R	
1	CHANNEL L = 1725mm (67.9")	58B		4	CHANNEL L = 773mm (30.4")	58C	
220	SELF TAPPING SCREWS			3	DOOR PADBOLT		
8	SELF DRILLING HEX HEAD TEK SCREWS (NO HOLE REQUIRED)			2	DOOR PADBOLT HASP		
8	4mm (0.16") NUT & BOLT SET SECURE TWO PADBOLTS TO DOOR SHEET			12	3mm (0.12") POP RIVETS SECURE HINGES TO DOOR (ALTERNATIVE FIXING METHOD)		
12	4mm (0.16") CSK SCREW & NUT SECURE HINGES TO DOOR			2	DOOR STRAP L: 165mm (6.5")	12A	
1	// 3mm (0.12") DRILL B						
1	HEX TEK SCREV						
2	CAP GABLE <i>ABSCO</i> <i>L</i> : 170mm (6.7")	14A					



INSTRUCTIONS FOR JOINING SPLICED CHANNELS


NOTE: THE TEXT MARKED ON ALL PARTS MUST BE SHOWN ON THE SAME SIDE AS EACH OTHER.



STEP 1.


Position the channels and the CSJ joiner channel so the center of the CSJ is in line with the end of each channel to be joined together.



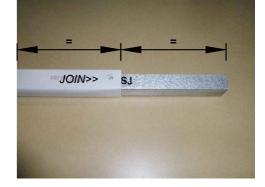

STEP 2.


Join the first channel to the CSJ by inserting the center of the CSJ (on an angle) to the end of the channel where the JOIN>> text is marked. Push down one side of the CSJ until you hear a 'click'.

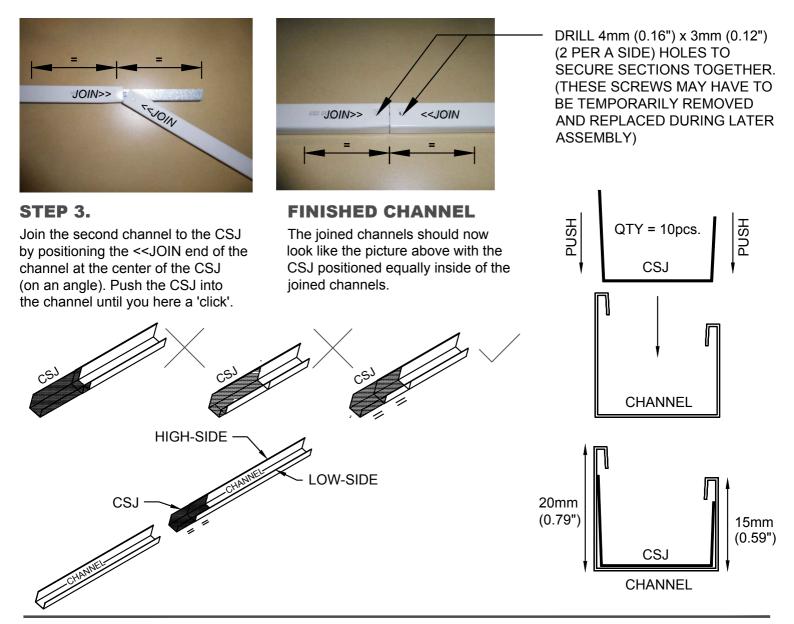



STEP 1. PRE-ASSEMBLY OF SPLICED CHANNELS


NOTE: JOIN TOGETHER 20 X CHANNEL SECTIONS USING 10 X CHANNEL JOINERS (PART CSJ)

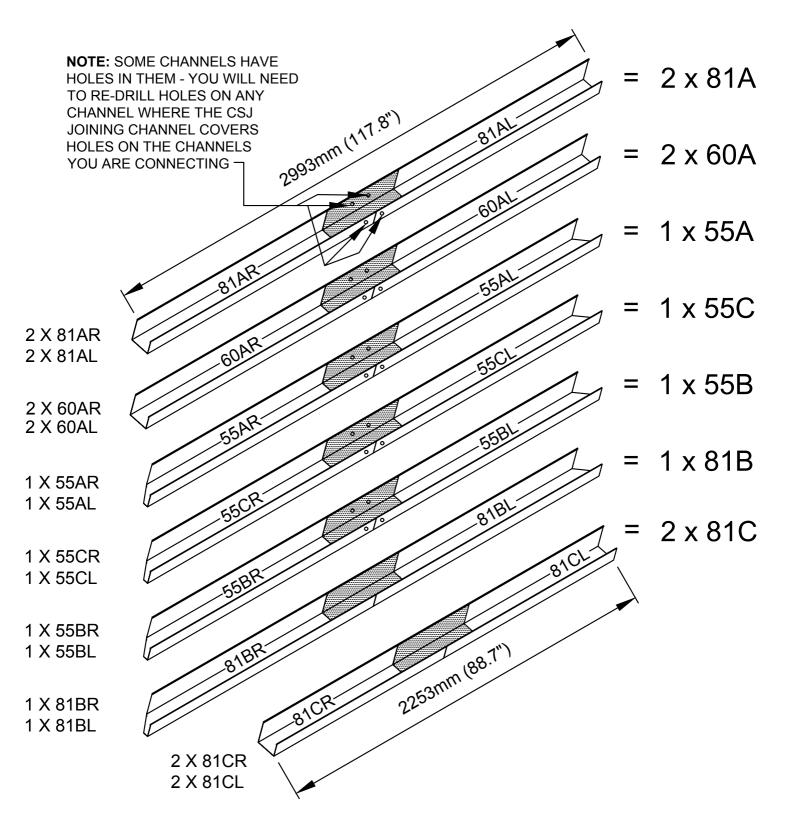




INSTRUCTIONS FOR JOINING SPLICED RIDGE BEAM

STAGE 1: PUSH RIDGE BEAMS TOGETHER, MAKE SURE THERE IS A 50mm OVERLAP OF THE RIDGE CAP

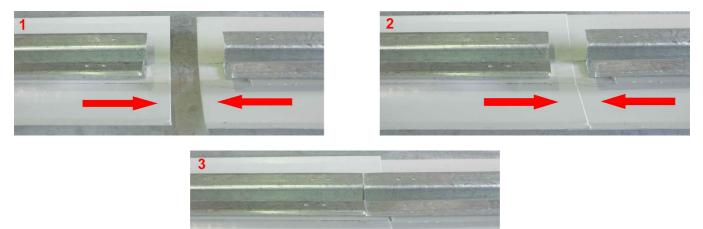

STAGE 2: INSERT RIDGE CAP JOINER INTO CONNECTED RIDGE CAPS. MAKE SURE JOINER HAS 225mm IN EACH RIDGE CAP.

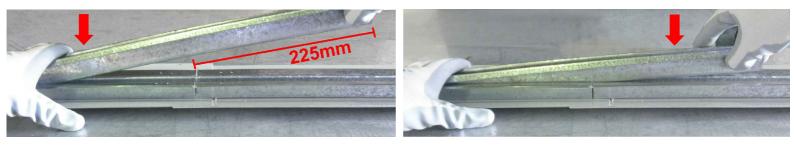

50mm




STAGE 3: TURN RIDGE CAP OVER AND MEASURE 250mm FROM THE END OF EACH RIDGE CAP PLACE TEK SCREWS IN 50mm INCREMENTS FROM SAID END. REPEAT THIS PROCESS FOR THE OPPOSING HALF OF RIDGE BEAM









STEP 2. PRE-ASSEMBLY OF SPLICED RIDGE BEAM

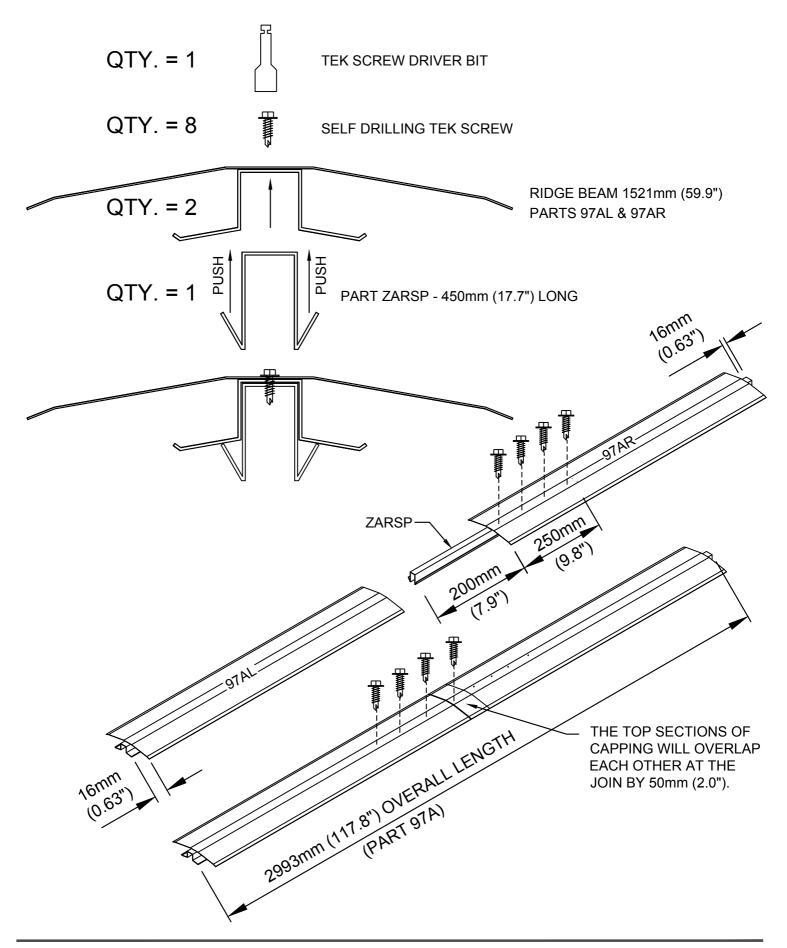



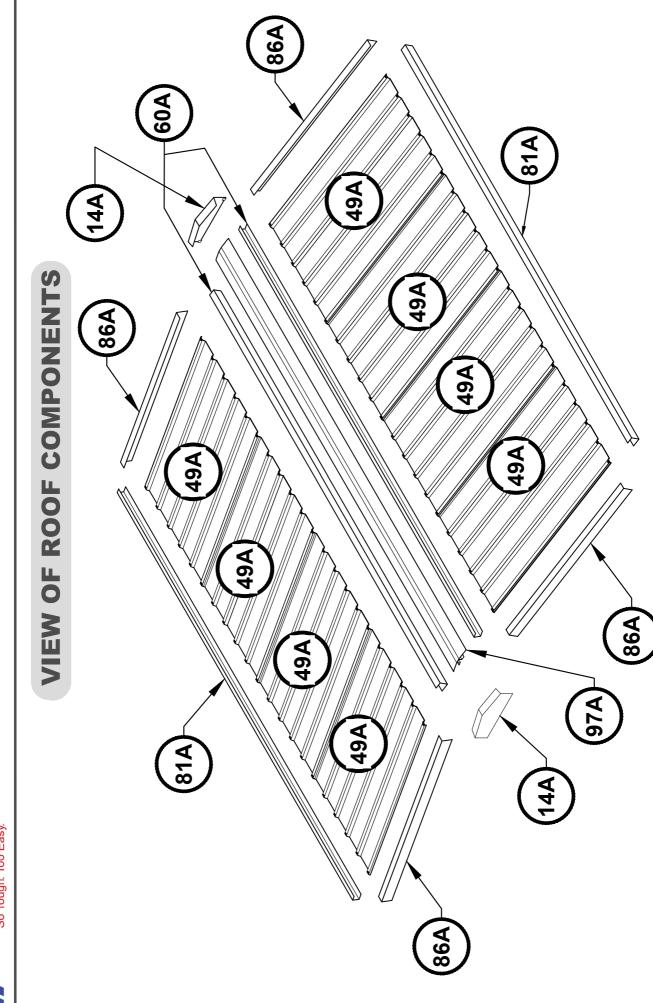

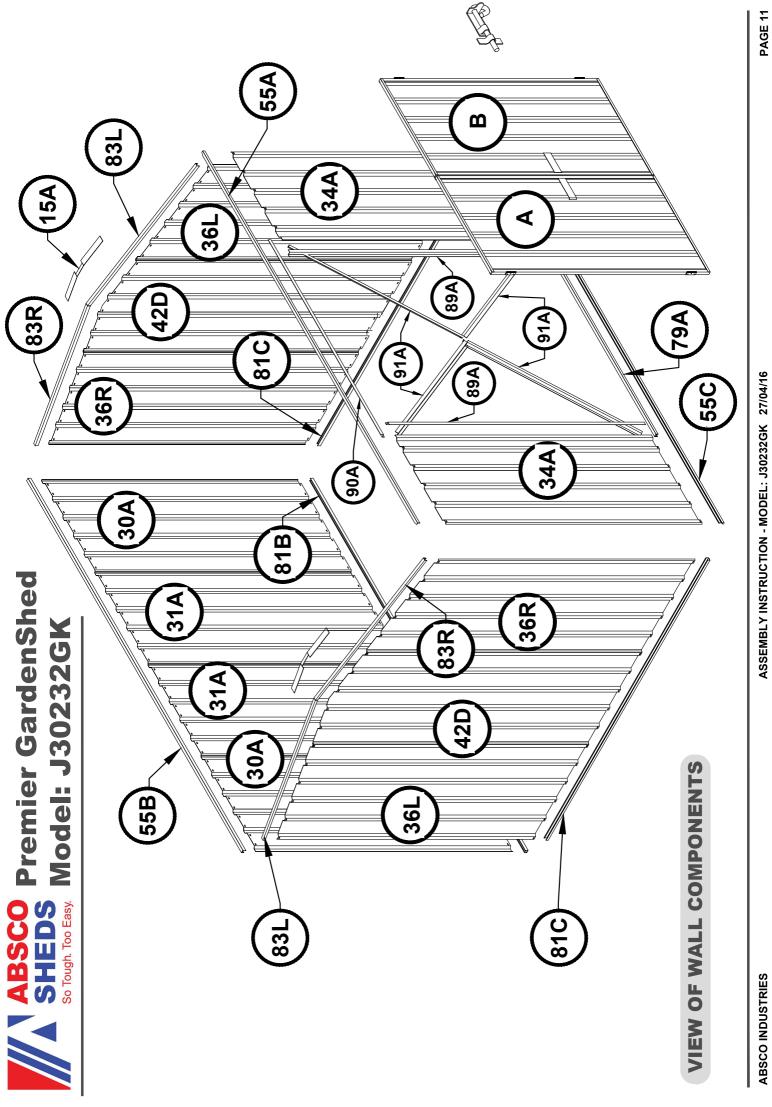


ASSEMBLY INSTRUCTION - MODEL: J30232GK 27/04/16



ABSCO ASSEMBLY INTRODUCTION


The snap-tite assembly system locks most perimeter channels to all roof and wall sheets without the need for tools and fasteners .



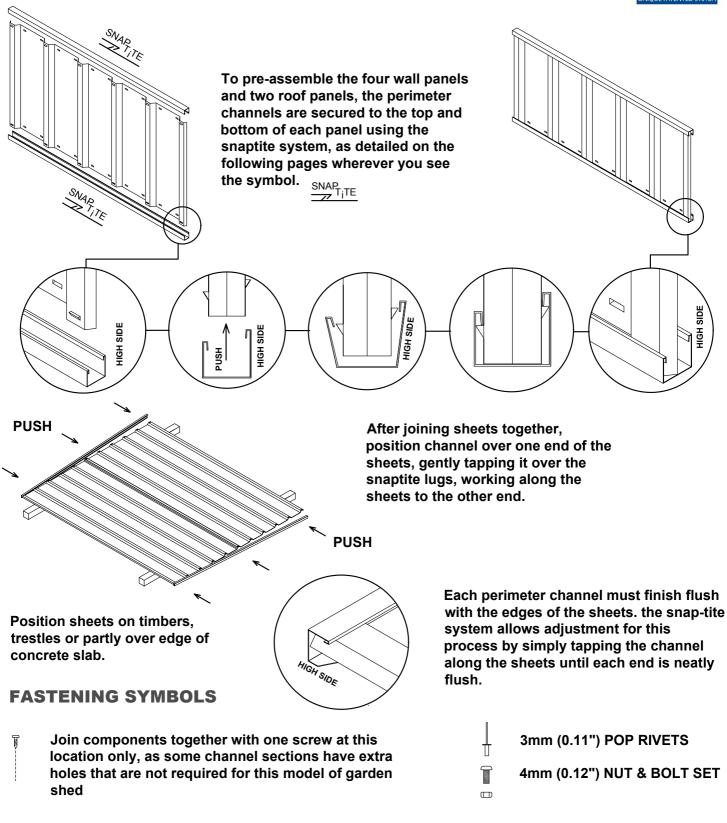


Do not join components together at this location yet, as the screw may obstruct further assembly of other components



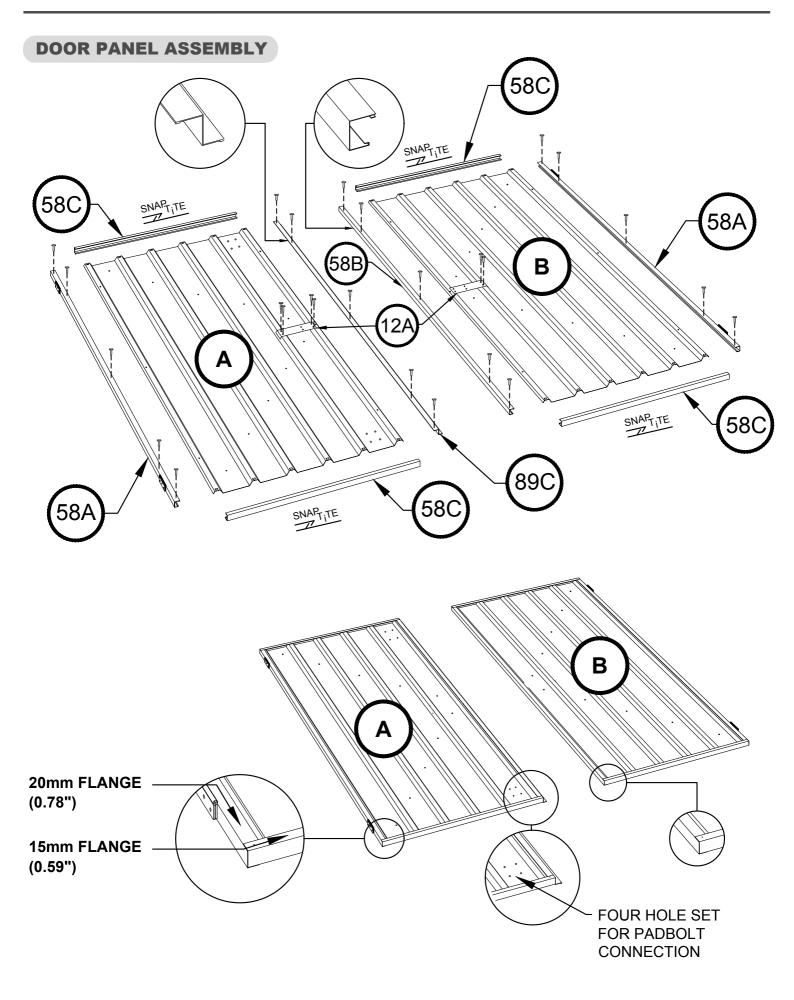




REAR PANEL ASSEMBLY

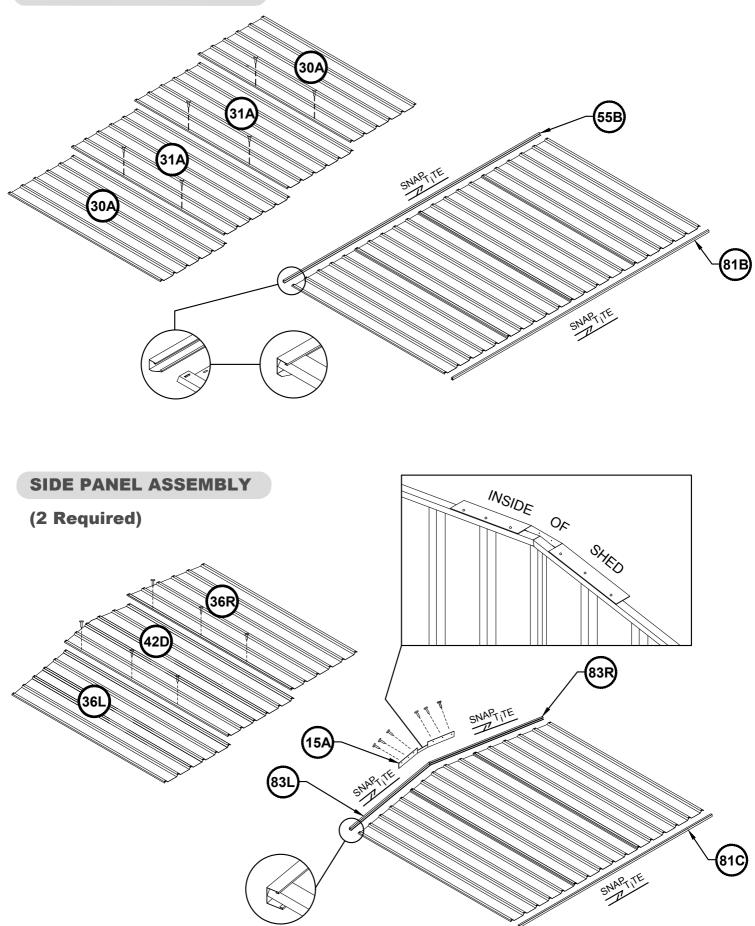




ROOF PANEL ASSEMBLY


(2 Required)

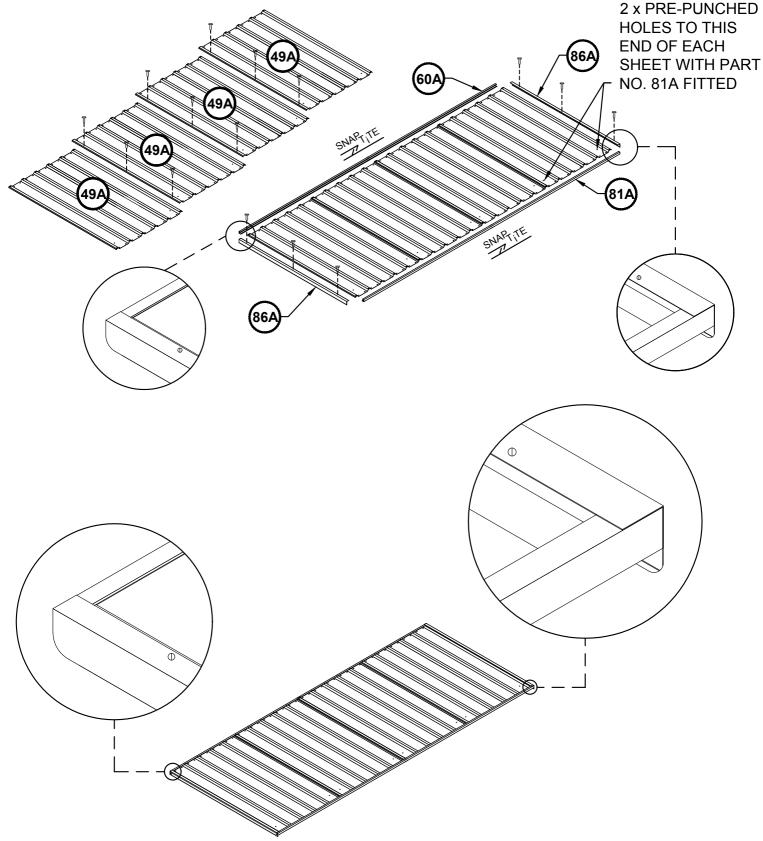



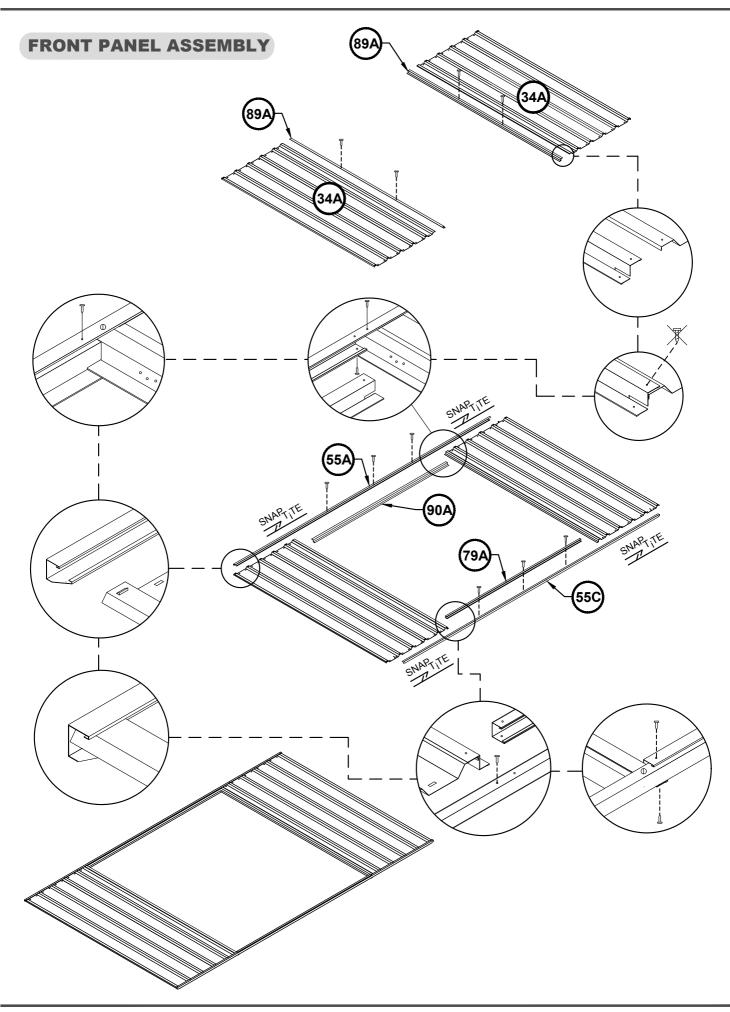




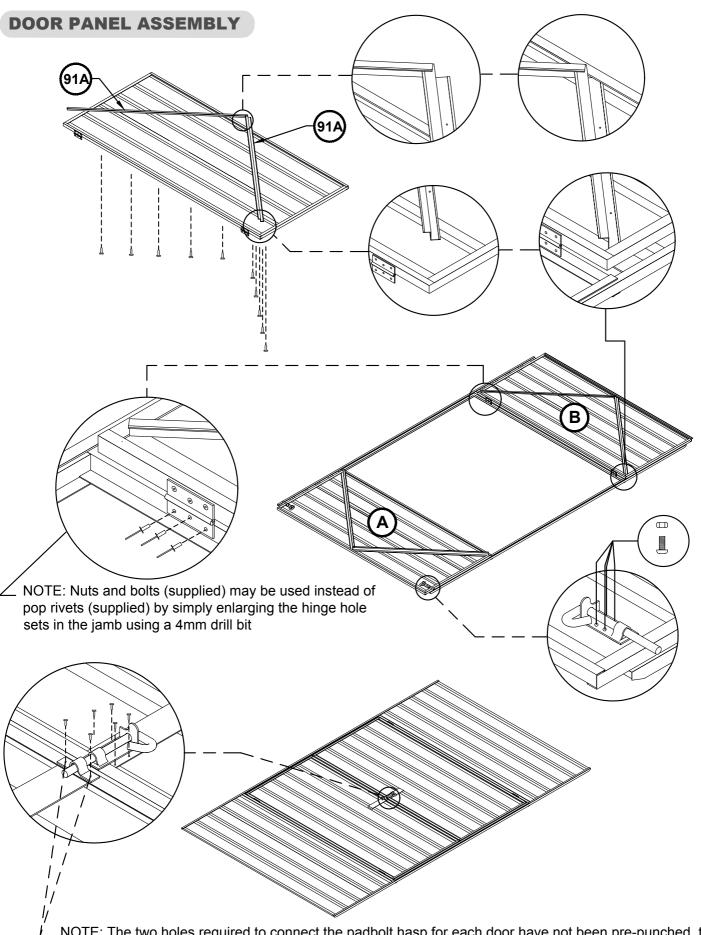


NOTE: The two holes required to connect the padbolt hasp for each door have not been pre-punched, to allow for proper alignment. position each hasp centrally over the padbolt shaft, and drill 3mm holes and secure with screws




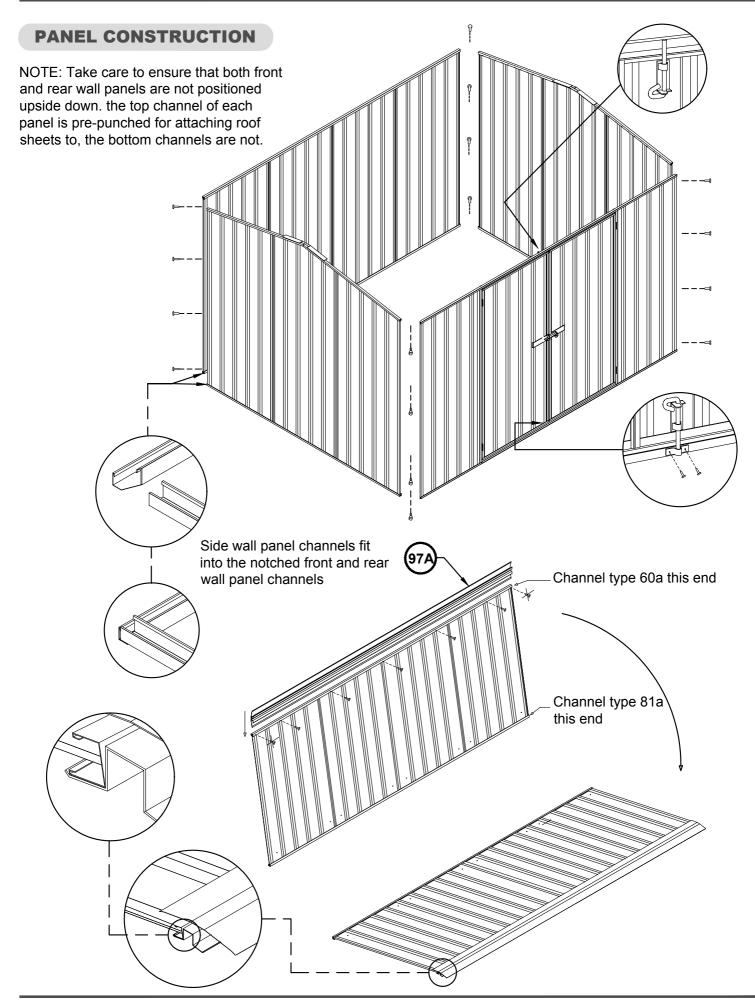



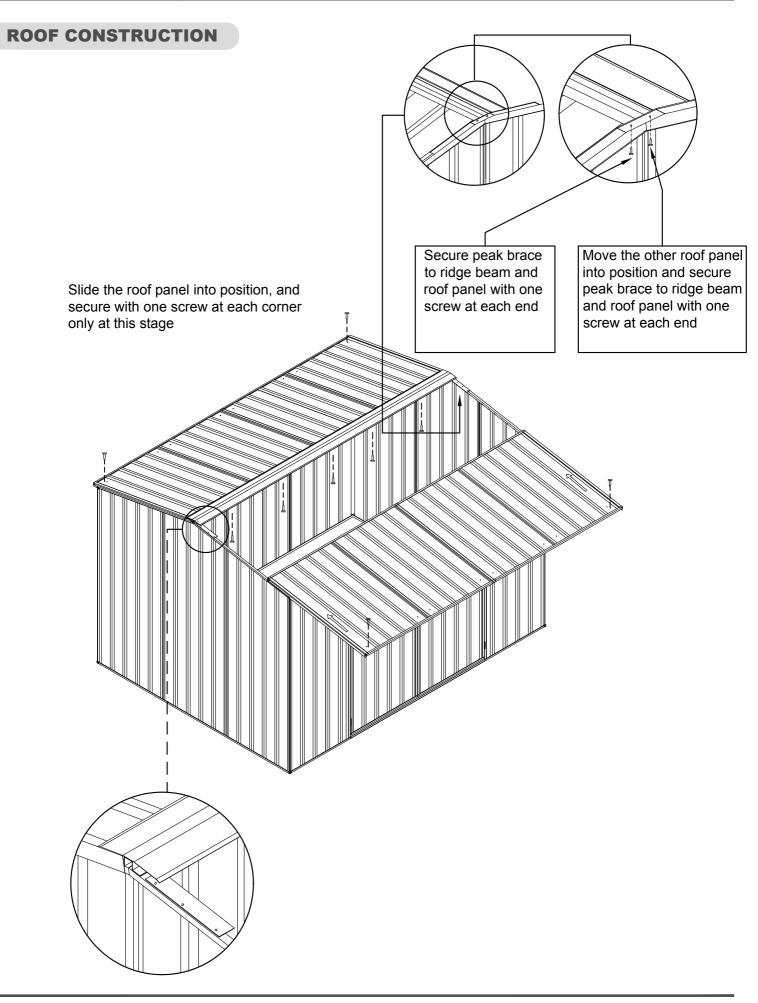



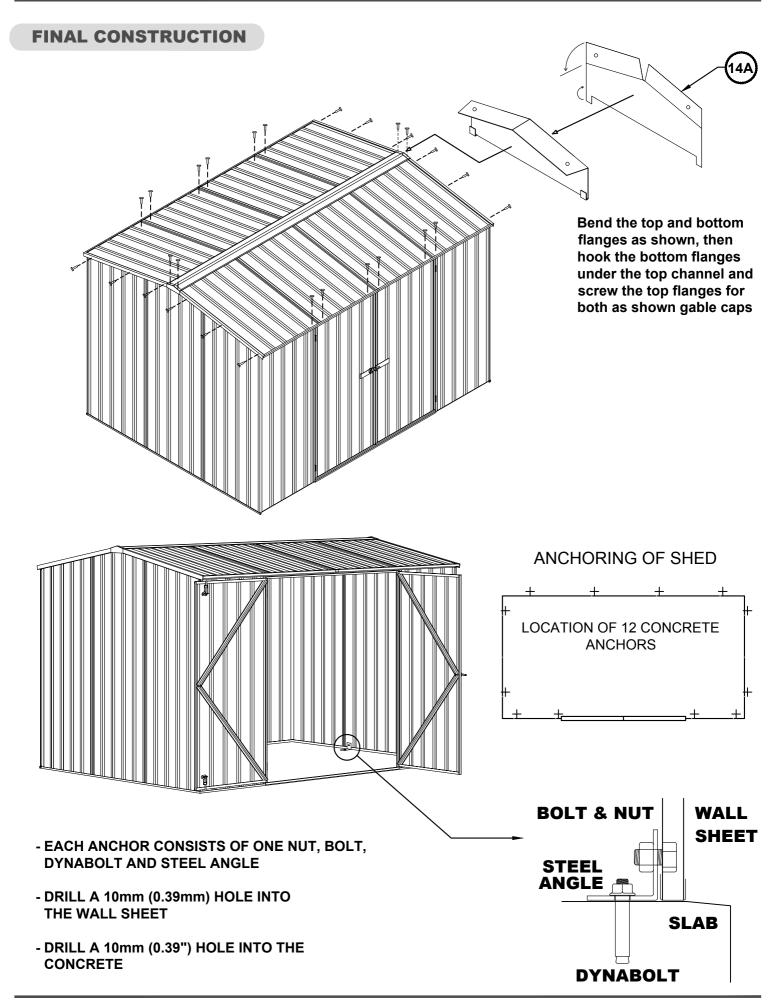



AUSTRALIA PRODUCT WARRANTY AGAINST DEFECTS

Congratulations on your purchase of an ABSCO SHED

ABSCO SHEDS, including garden sheds, garden beds, aviaries, storage units, garages, awnings and carports are made using high quality Australian made steel.

We are pleased to advise we warrant that the steel coating will not rust, crack, flake peel or blister for 20 years from date of purchase, when installed within Australia.

This warranty does not apply to surface deterioration of panels caused by 'Swarf" (Tiny particles of steel debris left from cutting, grinding or drilling operations) that has not been removed after building construction, or as a result of contact with damp soil, chemicals, fertilisers or other corrosive substances.

This warranty covers any Absco product used for normal domestic use and installed in accordance with the installation instructions. The warranty does NOT cover Damage caused by storms, wind, rain snow or poor foundations.

This warranty does NOT cover ABSCO products installed in severe coastal, industrial or other highly corrosive environments. The warranty does not cover fasteners (screws, nuts, bolts, rivets, hasps or bolts).

The warranty is limited to replacement and delivery of components and does not include any labour or installation costs. The benefits given by the warranty are in addition to your other rights and remedies under a law in relation to the goods or services to which the warranty relates.

The warranty applies to the exclusion of all other representations, guarantees or warranties express or implied, our goods come with guarantees that cannot be excluded under the Australian consumer law and is not transferable. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of an acceptable quality and the failure does not amount to a major failure. For further information go to http://www.consumerlaw.gov.au.

Please retain a proof of purchase (sales docket or invoice) or register your warranty within 30 days of purchase here: <u>www.absco.com.au/register_warranty.php</u>

In the unlikely event a warranty claim is made, it must be supported by photographic evidence and details of the defect, including component part numbers, together with proof of purchase documentation (or on-line registration of purchase) and forwarded to the address below. Upon receipt of the warranty claim, the Customer Service Manager will contact you within three business days to advise you of the assessment outcome of the claim, which may include your expenses incurred in making the claim.

THE CUSTOMER SERVICE MANAGER, ABSCO INDUSTRIES, PO BOX 119 ACACIA RIDGE QLD AUSTRALIA 4110

PHONE: 1800 029701 FAX: 07-33441191 EMAIL: warranty@absco.com.au

Issued 01 January 2012



ABSCO SHEDS - STORAGE GUIDELINES

ABSCO SHEDS include garden sheds, garden beds, storage units, aviaries, garages, awnings and carports.

ABSCO SHEDS are designed to be weatherproof for normal weather conditions. In the event of extreme weather conditions such as heavy rain, combined with high wind gusts, the ridge capping, sheeting joins, screw fixings etc., may exhibit minor deformations which may allow some water entry. These areas should be checked regularly to ensure that maximum strength and protection is maintained.

Other weather conditions such as extreme heat and extreme cold, moist or dry air can influence the effects of concrete floor moisture and/or condensation on the underside of the roof sheets.

ABSCO SHEDS and storage units are primarily used for storage of garden equipment such as lawnmowers, wheelbarrows, garden tools etc. Storage items that might be adversely affected by any of the above conditions may require additional protection such as being sealed or covered by plastic sheets and/or stacked above the concrete floor on timber slats.

Waterproof sealants may be used to offer further protection where required around joins and screw fixings, as can rubber door seals and other products which are available from most hardware outlets.

Placement of waterproof sealants (silicone) between the base of the shed and concrete slab is not recommended, as this process can have a reverse effect, preventing excess water from escaping, resulting with water accumulating and being trapped inside the shed.

Absco accepts no responsibility for water entry, floor moisture, condensation or the condition of the Contents inside your Absco steel building arising from any of the pre-mentioned weather conditions.