Mondella

PLUMBERS INSTALLATION GUIDE
BOTTLE TRAP

Connection –
Note - This product is suitable for a 32mm waste connection.

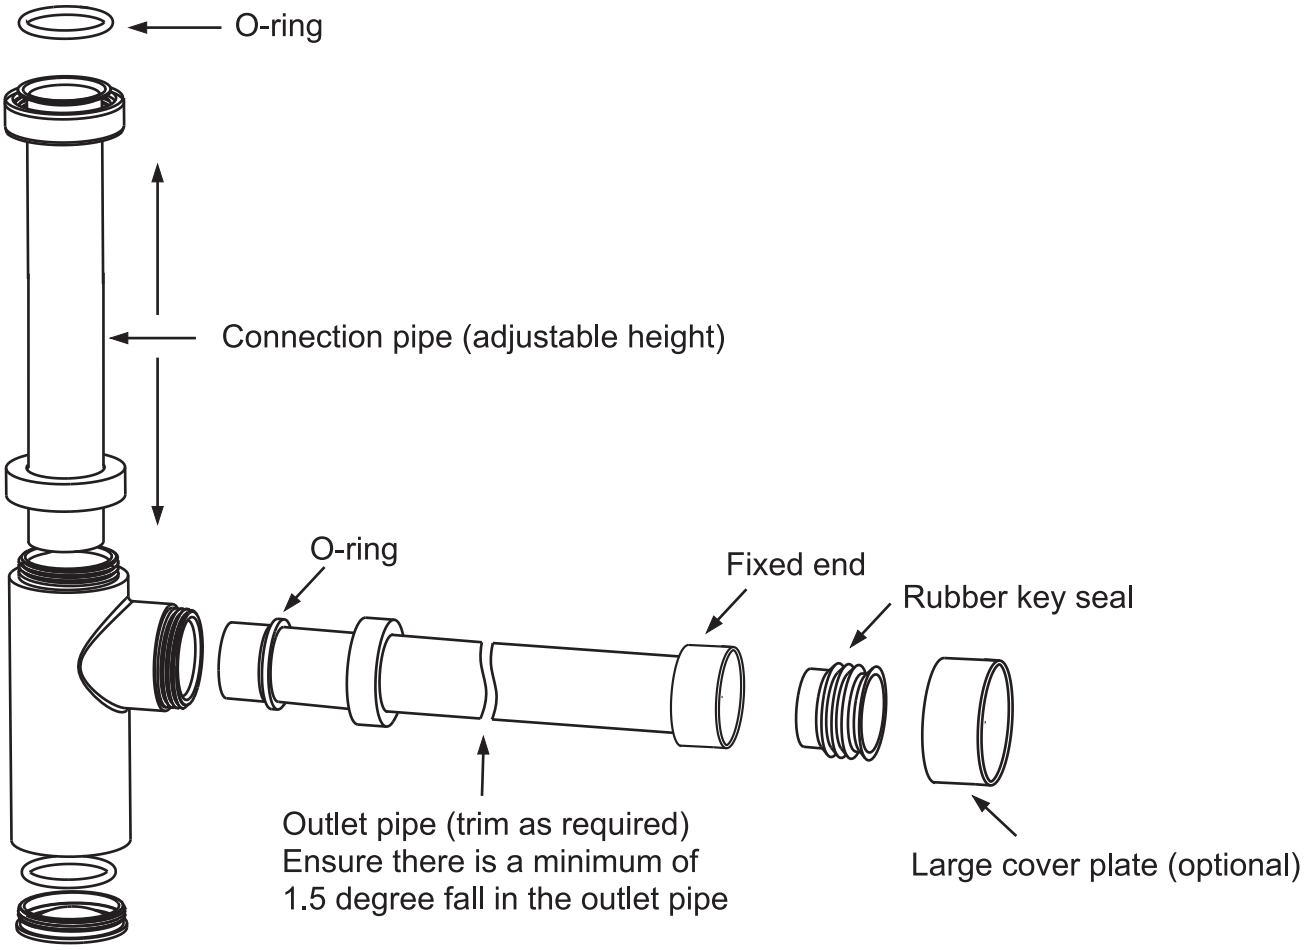

Installation –

1. Install the outlet pipe (trim outlet pipe as required) ensuring there is a minimum 1.5 degree fall. When taking measurements ensure the outlet pipe is fully engaged. Note - use a pipe cutter to trim the outlet pipe to size, ensure the cut end is deburred so it won't damage the O-ring.
2. Install the connection pipe to the 32mm plug & waste. Adjust the height as required, ensure there is a minimum 1.5mm degree fall on the outlet pipe.
3. Ensure all joints a firmly tightened. (do not over tighten).
4. Test for leaks.

Cleaning –
Clean with warm soapy water, do NOT use abrasive or corrosive cleaners.