



# ORDER FORM

## GET GOING ON YOUR RIDGI!

### 1 CHOOSE YOUR SLEEPERS All sleepers are 150x50mm x1.5m


#### IRONBARK

ITEM NO 1080347  
QTY NEEDED \_\_\_\_\_



#### SANDSTONE

ITEM NO 1080434  
QTY NEEDED \_\_\_\_\_

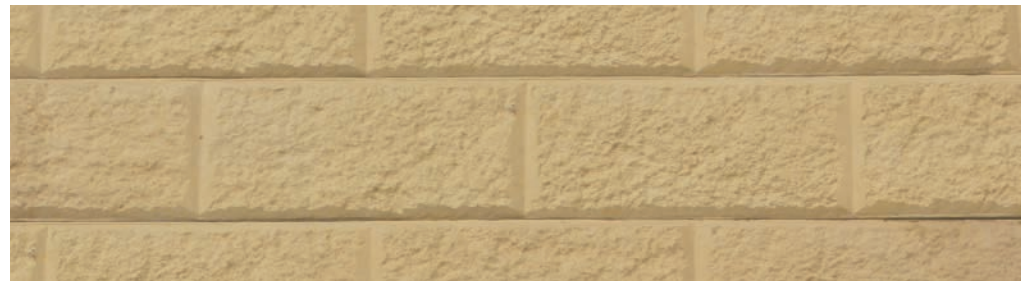

#### SMOOTH

ITEM NO 1080327  
QTY NEEDED \_\_\_\_\_



#### GUMTREE

ITEM NO 1080351  
QTY NEEDED \_\_\_\_\_



#### THE ROCKS

ITEM NO 1080428  
QTY NEEDED \_\_\_\_\_



### 2 SELECT YOUR POSTS



ORIGINAL											
WALL HEIGHT	POST HEIGHT	ITEM NUMBER	QTY NEEDED	WALL HEIGHT	POST HEIGHT	ITEM NUMBER	QTY NEEDED	WALL HEIGHT	POST HEIGHT	ITEM NUMBER	QTY NEEDED
300mm	600	1080333		300mm	600	1080338		300mm	600	1080343	
450mm	900	1080334		450mm	900	1080339		450mm	900	1080344	
600mm	1200	1080335		600mm	1200	1080340		600mm	1200	1080345	
750mm	1500	1080336		750mm	1500	1080341		750mm	1500	1080331	
900mm	1800	1080337		900mm	1800	1080342		900mm	1800	1080332	

RIDGI PLUS+							
WALL HEIGHT	POST HEIGHT	ITEM NUMBER	QTY NEEDED	WALL HEIGHT	POST HEIGHT	ITEM NUMBER	QTY NEEDED
300mm	600	1080408		300mm	600	1080424	
450mm	900	1080409		450mm	900	1080425	
600mm	1200	1080410		600mm	1200	1080405	
750mm	1500	1080412		750mm	1500	1080406	
900mm	1800	1080413		900mm	1800	1080407	

#### DON'T FORGET:

FENCE BRACKET*	ITEM NUMBER	QTY NEEDED
	1080353	

\*RIDGI Fence Brackets are not supplied with bolts.

#### WHAT IS EFFLORESCENCE?

Efflorescence is the formation of mineral deposits, usually white, on the surface of concrete which can cause slight discolouration. Efflorescence on concrete is not a product fault, and is easily removed through normal maintenance.

Visit [ridgi.com.au](http://ridgi.com.au) for more information.

#### PLEASE NOTE MINIMUM ORDER VALUES APPLY

Please check with Special Orders team member to confirm direct delivery lead times and cost.

**FOR MORE INFORMATION OR HELP WITH RETAINING WALLS ABOVE 900MM CALL AUSSIE CONCRETE PRODUCTS ON 07 3348 1200 OR VISIT [AUSSIECONCRETEPRODUCTS.COM.AU](http://AUSSIECONCRETEPRODUCTS.COM.AU)**

### 3 CONFIRM DELIVERY ADDRESS

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

SUBURB \_\_\_\_\_ POST CODE \_\_\_\_\_

PHONE \_\_\_\_\_ MOBILE \_\_\_\_\_

EMAIL \_\_\_\_\_



DESIGNED & ENGINEERED IN AUSTRALIA BY **AUSSIE CONCRETE PRODUCTS**

QBCC License # 1075330

9 348020 002002



## REINFORCED CONCRETE RETAINING WALLS

### DIY CONCRETE SLEEPER & GALVANISED STEEL POST RETAINING WALL SYSTEM

- ✓ 100% termite proof materials
- ✓ Easy to design and install system
- ✓ Perfect for walls up to 900mm tall
- ✓ Great textures to match your garden, or paint to match your existing colour scheme



"This great Australian design is what every DIY landscaper is looking for - strength, durability, termite resistant, rot resistant, with a natural look."  
JAMIE DURIE

Available at **BUNNINGS warehouse**

[RIDGI.COM.AU](http://RIDGI.COM.AU)

Take This Brochure to the Special Orders Desk to place an order





# EASY-AS DESIGN & INSTALLATION GUIDE

## RIDGI REINFORCED CONCRETE SLEEPERS

When you do-it-yourself with RIDGI you're using a reinforced retaining wall system that has been designed, engineered and certified specifically for retaining walls, garden beds and edging up to a height of 900mm.

The RIDGI System comprises reinforced concrete sleepers and strong, long lasting 60UC hot dipped galvanised steel posts and fence brackets.

This means you won't have to worry about termites, rot or warping, and your RIDGI will stand the test of time. The RIDGI system has a 15 year warranty and is proudly Australian designed and manufactured by Aussie Concrete Products.

The variety of sleeper finishes enables you to easily get the look you want. Want to match your existing house colour scheme or landscape or get a timber look? The RIDGI sleeper finishes give you both - you can even paint them to match!



## RIDGI REINFORCED CONCRETE SLEEPERS

Your RIDGI Reinforced Concrete Sleepers are engineer designed and reinforced, meaning they are strong and reliable. RIDGI Reinforced Sleepers come in a variety of designs, textures and finishes.

Many people love the Ironbark which looks like timber, or the smooth look that can be painted to match your existing colour scheme. All RIDGI Reinforced Concrete Sleepers are 150mm high by 1.5m long, and a sturdy 50mm thick, including internal reinforcing.




## RIDGI RETAINING POSTS & FENCE BRACKETS

Designed to give lasting protection against weather and corrosion, RIDGI Retaining Posts and Fence Brackets are made from 60UC and 3mm hot dipped galvanised steel so they're stronger, last longer and are hassle free.

RIDGI Retaining Posts are colour coded and simple to use - Ender, Corner and Joiner posts are easily configured to create the perfect design. RIDGI posts are sold in a variety of heights to suit walls from 300 to 900mm high.

RIDGI Retaining Posts can also be fitted with RIDGI Fence Brackets, which are weight rated for Colorbond® fencing. This gives you the flexibility to begin building immediately above your wall, saving room and giving you a cleaner line. \*up to a maximum of 1.8m high

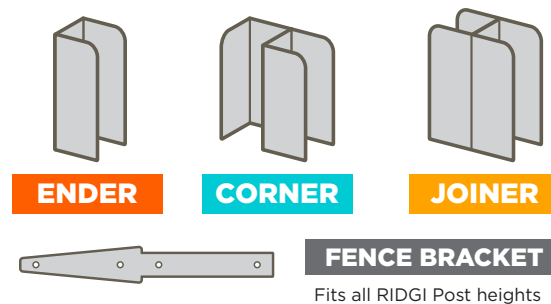

## RIDGI PLUS+

RIDGI PLUS+ posts offer another level of customisation and longevity.

Featuring an attractive gun-metal, "hammered" finish, RIDGI PLUS+ are perfect for crafting a signature look that can elevate your RIDGI to the next level, or provide a streamlined look to your design. Beyond looking great, the powder coating process means they're guaranteed for 25 years!




## WHAT YOU'LL NEED BEFORE YOU GET STARTED

- ✓ Measuring Tape
- ✓ Level and String Line
- ✓ Shovel
- ✓ Steel Posts or Pegs
- ✓ Post Hole Digger
- ✓ RIDGI Planning Sheet (available at [ridgi.com.au/plan](http://ridgi.com.au/plan)).
- ✓ Quick set concrete
- ✓ Ag pipe and weed matting
- ✓ RIDGI Reinforced Sleepers of your choice
- ✓ RIDGI Retaining Posts




## 1 DESIGN YOUR RIDGI

- Measure out and sketch your RIDGI using our Planning Sheet
- Count up the number and kinds of Retaining Posts you need, and decide on the finish of your Sleepers.

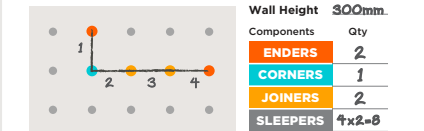

## 2 PREP YOUR SITE

- Clear and level your site area, making sure you leave 200mm clear behind the RIDGI - you'll need it for backfill.
- Hammer steel posts or pegs where your RIDGI will start and end.
- Run string lines between the pegs, top and bottom. Be sure the top string line shows the top height of your RIDGI. Use a spirit level to make sure everything is level.
- Start from one end and mark a cross on the ground at 1520mm intervals (this is where your holes will go).

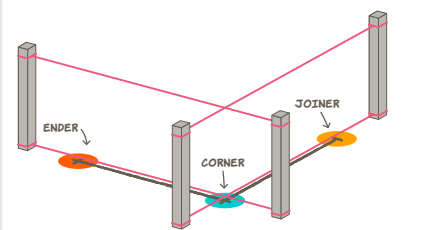

## 3 DIG YOUR HOLES


- At the marked spots, dig or auger your holes with a 300mm diameter. Remember - your holes have to be as deep as your RIDGI is tall to make sure it's strong!
- If you're installing RIDGI Fence Brackets, mark and drill your mounting holes for your bolts now.



REMEMBER: HOLES MUST BE AS DEEP AS YOUR WALL IS HIGH

## 4 SET THE POSTS


- Work with one hole at a time.
- Fill the hole with quick setting concrete and lower your RIDGI Retaining Post into it, ensuring it is straight and level with top string line.
- Set corner posts first and recheck post intervals before setting ender or joiner posts.

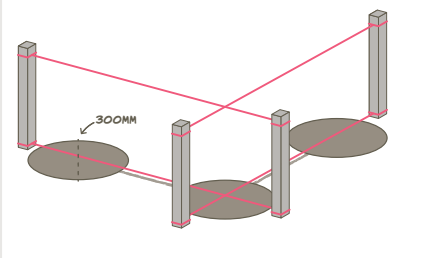

## 5 INSERT YOUR SLEEPERS

- Allow the post hole concrete to cure for 2 days before bolting\* on your RIDGI Fence Brackets and sliding your RIDGI Reinforced Sleepers into place.
- If your ground is not level before you slide in the sleepers, consider laying a concrete pad between posts to ensure that sleepers are stacked up evenly.

\*Bolts not included.

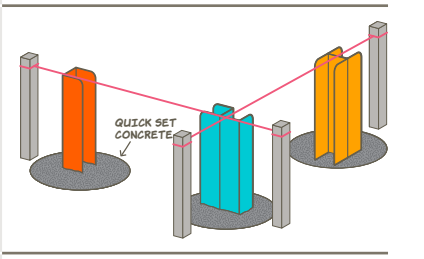

## 6 AG PIPE & BACKFILL

- Place 65mm ag pipe at the base of the back of the wall, then backfill with 20mm drainage gravel to 200mm from top of the wall.
- Fill to the top with a clay soil plug.

