
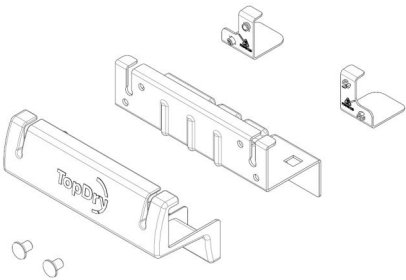


TOPDRY Retracting Line – Receiving Bracket Installation Instructions

Parts List

| | | |
|---------|-------------------|---|
| AD05525 | Receiving Bracket |  <p>The diagram shows an exploded view of the receiving bracket assembly. It includes a main L-shaped bracket with the 'TopDry' logo, a smaller L-shaped bracket, two corner brackets, and two screws. Arrows indicate the assembly direction for the corner brackets.</p> |
|---------|-------------------|---|

Replace the Receiving Bracket

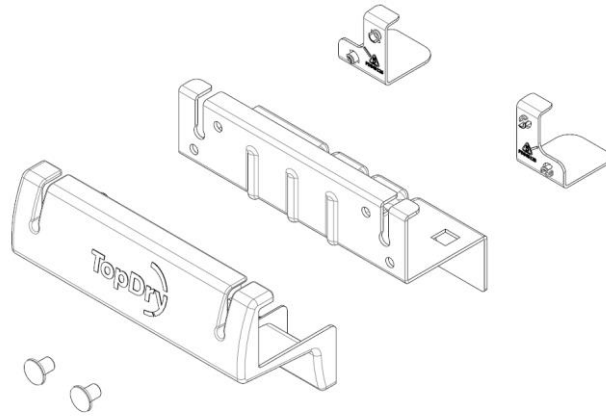

1. Undo the two the original fasteners securing the bracket to the wall or post
2. Press the blanking plugs into the mounting holes that will not be used. Outer holes are for wall mounting, inner holes are for post mounting.
3. Ensure the plastic spacers and the cover are clipped onto the metal bracket
4. Secure the new Receiving Bracket to wall or post.