


HÄFELE 110° PUSH HINGE

Half Overlay - Clip On **PUSH TO OPEN**







Drilling Instructions


Mounting Instructions


Hinge Cup (Door)

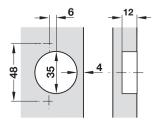

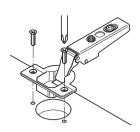


Mount Plate (Cabinet Side)







Join the two points marked by an arrow.



Apply light pressure.








Adjusting the Door

Depth adjustment of door with Häfele mounting plates.

With the Häfele mounting plates with quick fixing system, a depth adjustment of the door from -0.6 mm up to +3 mm is possible via eccentric. It is not necessary to loosen further screws.





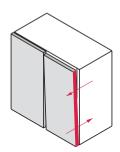

Height adjustment of door with Häfele mounting plates with slot.


Height adjustment of door of ±2 mm is possible by loosening the two fixing screws. The slots allow the mounting plates to slide in both directions. Afterwards the screws must be re-tightened.












Lateral adjustment of door with Häfele concealed hinges.

The adjusting screw produces the lateral travel of the hinge arm from –2 mm up to +2 mm.












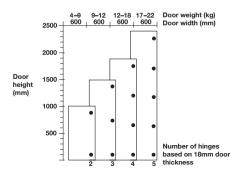




Tools Required:

- > 35mm Ø Drill Bit & Template Kit
- > 2mm Ø Drill Bit
- > Pencil
- > Power Drill
- > No 2 Pozidrive Screwdriver / Screw Bit

Screw fixing

Cup fixed with screws (countersunk head).



Hinge Drilling Pattern



HÄFELE AUSTRALIA PTY. LTD ARTICLE # 483.02.437 8 MONTEREY RD DANDENONG VIC 3175 730.83.662



