


2 PCS


HÄFELE

HÄFELE 105° SOFT CLOSE HINGE
Half Overlay - Clip On

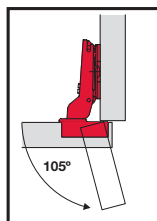


Drilling Instructions



Hinge Cup (Door)

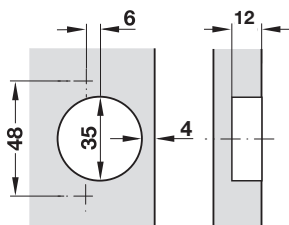


Mounting Instructions

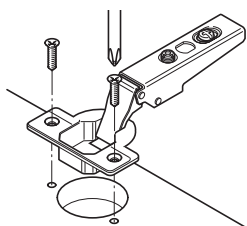

Mount Plate (Cabinet Side)

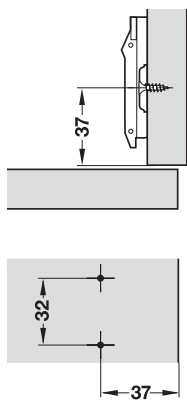

Join the two points marked by an arrow.


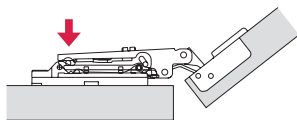


Apply light pressure.

Adjusting the Door



Depth adjustment of door with Häfele mounting plates.

With the Häfele mounting plates with quick fixing system, a depth adjustment of the door from -0.6 mm up to $+3$ mm is possible via eccentric. It is not necessary to loosen further screws.

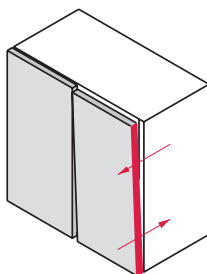



Height adjustment of door with Häfele mounting plates with slot.

Height adjustment of door of ± 2 mm is possible by loosening the two fixing screws. The slots allow the mounting plates to slide in both directions. Afterwards the screws must be re-tightened.

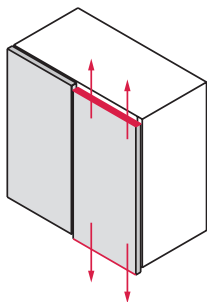
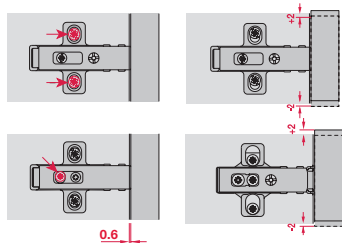


Lateral adjustment of door with Häfele concealed hinges.

The adjusting screw produces the lateral travel of the hinge arm from -2 mm up to $+2$ mm.

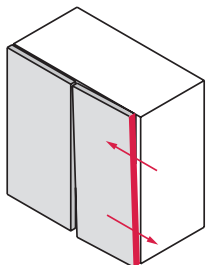

HÄFELE

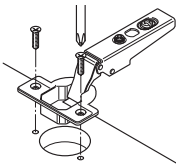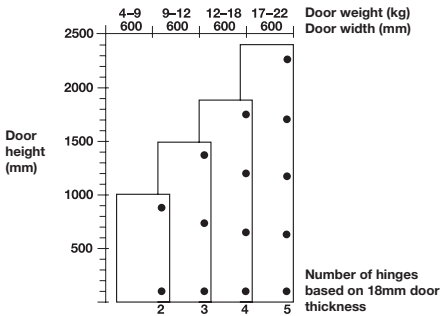


Tools Required:

- > 35mm Ø Drill Bit & Template Kit
- > 2mm Ø Drill Bit
- > Pencil
- > Power Drill
- > No 2 Pozidrive Screwdriver / Screw Bit

Screw fixing

Cup fixed with screws (countersunk head).

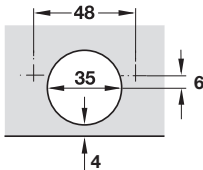

Hinge Drilling Pattern

MADE IN CHINA

