





**RB18L15 / RB18L15A / RB18L25 / RB18L25A /  
RB18L40 / RB18L40A / RB18L50 / RB18L50A**

**18V LITHIUM-ION BATTERY PACK  
ORIGINAL INSTRUCTIONS**

**RB18L15 / RB18L15A /  
RB18L25 / RB18L25A**

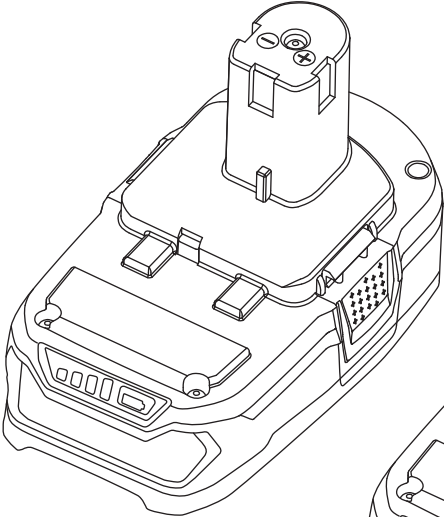

**RB18L40 / RB18L40A /  
RB18L50 / RB18L50A**

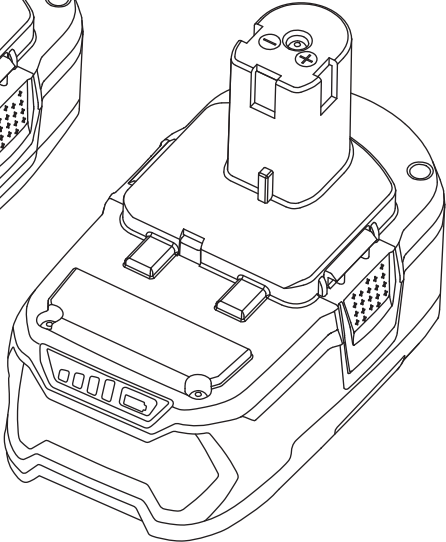

## DESCRIPTION

1. Latches
2. Charge level indicator
3. Charge level indicator button

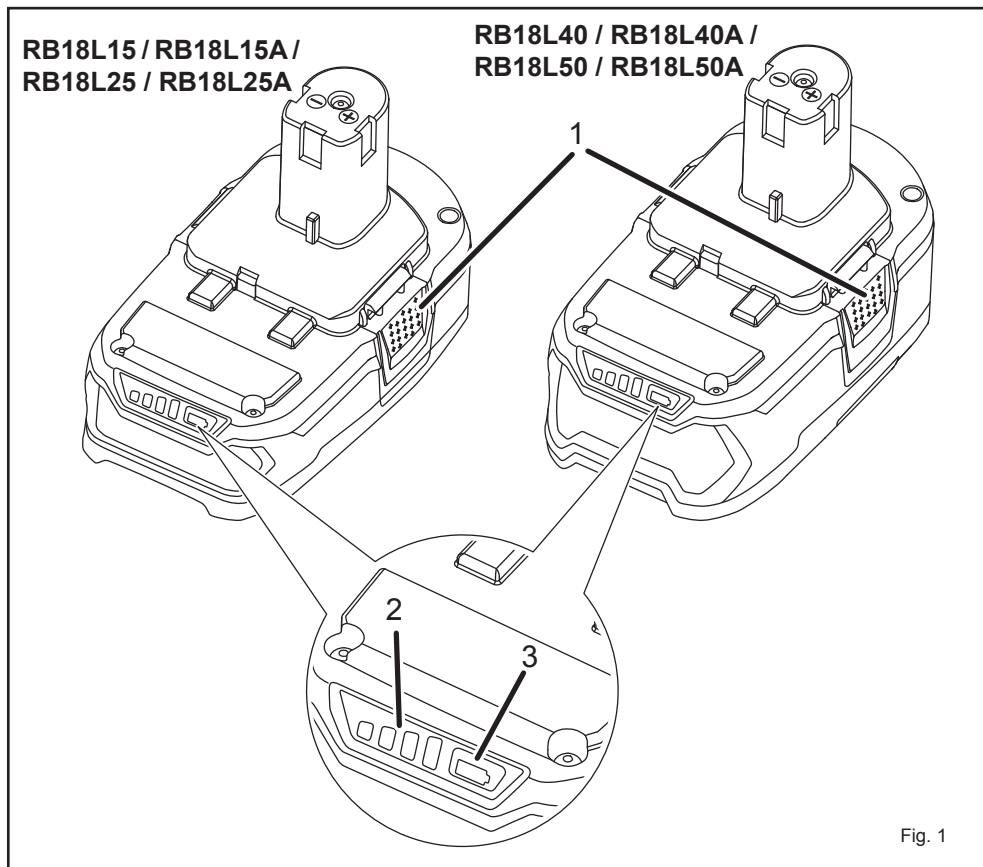


Fig. 1



## **Important!**

It is essential that you read the instructions in this manual before assembling, operating, and maintaining the product.



Subject to technical modifications.



Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery operated (cordless) power tool.

## SAFETY INSTRUCTIONS

### WARNING

To reduce the risk of fire, personal injury, and product damage due to a short circuit, never immerse your tool, battery pack or charger in fluid or allow a fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach-containing products, etc., can cause a short circuit.

The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.

Please read and observe these instructions before using the product.

- **When battery pack is not in use, keep it away from other metal objects such as paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another.** Shorting the battery terminals together may cause sparks, burns or fire.
- **Do not place battery tools or their batteries near fire or heat.** This will reduce the risk of explosion and possible injury.
- **Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow.** A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.
- **Batteries can explode in the presence of a source of ignition, such as a pilot light.** To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.
- **Do not charge battery tool in a damp or wet location.** Following this rule will reduce the risk of electric shock.
- **For best results, charge the battery tool in a location where the temperature is more than 10°C but less than 37°C.** To reduce the risk of serious personal injury, do not store outside or in vehicles.

- **Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in contact with the skin, wash immediately with soap and water, then neutralize with lemon juice or vinegar. If liquid gets into the eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention.** Following this rule will reduce the risk of serious personal injury.

## TRANSPORTING LITHIUM BATTERIES

Transport the battery in accordance with local and national provisions and regulations.

Follow all special requirements on packaging and labelling when transporting batteries by a third party. Ensure that no batteries can come in contact with other batteries or conductive materials while in transport by protecting exposed connectors with insulating, non-conductive caps or tape. Do not transport batteries that are cracked or leaking. Check with the forwarding company for further advice.

## RESIDUAL RISKS

Even when the product is used as prescribed, it is still impossible to completely eliminate certain residual risk factors. The following hazards may arise and the operator should pay special attention to avoid the following:

- Use the product only for its intended use. Do not alter or modify the product from the original design or function.
- Always be aware that misuse and improper handling of the product can cause injury to yourself and others.

## INTENDED USE

Use the battery pack for Ryobi One+ 18V cordless products only.

## OPERATION

### BATTERY PROTECTION FEATURES

Ryobi One+ 18V lithium-ion battery packs are designed with features that monitor and protect the lithium-ion cells (active, standby, shut off and sleep modes ) and maximize battery life.

- The tool may stop during use to prevent overheating or overloading of the battery (active mode). In this case, release the trigger to reset and resume operation.
- If this does not reactivate the tool, the battery is completely discharged (stand-by or sleep mode) and needs to be charged in a compatible charger.
- The battery can be recharged in stand-by or sleep mode. It is not necessary to completely discharge the battery pack before recharging.



**NOTE:** A completely discharged battery (sleep mode) needs reactivation before the charging process begins. To reactivate a battery in sleep mode, place the battery in the charger and wait for 90 seconds. If the charging process does not begin, please remove the battery and wait for 30 seconds. Then start a second attempt to re-activate the battery by placing it in the charger. If the charging process does not begin after 3 attempts, the battery may be faulty. In this case, have the battery serviced by a qualified repair person using only identical replacement parts.

**NOTE:** The LED charge indicator light will not work if the battery protection feature has caused the battery pack to stop powering the tool (sleep mode). When the charger resets the battery pack, the LED will again function.

- The One+ 18V lithium-ion battery packs are equipped with an additional SHUT-OFF mode, minimizing self-discharge of the battery while the battery is not in use. It will be reactivated automatically when used with a tool or by pressing the LED gauge.

**NOTE:** In SHUT-OFF mode, the battery will show low voltage when tested with a volt-meter. Use the battery in a tool or press the LED gauge for read-out of the actual voltage.

### COLD WEATHER OPERATION

The lithium-ion battery pack can be used in temperatures down to -10°C. Put the battery pack on a tool and use the tool in light duty application. After a while, the battery pack will warm up and begin operating normally.

### CHARGING THE BATTERY PACK

Battery packs are shipped in a low charge condition to prevent possible problems. Therefore, they should be charged prior to first use.

**NOTE:** If the charger does not charge the battery pack under normal circumstances, return both the battery pack and charger to the nearest Ryobi authorised service centre for electrical check.

Battery pack	Compatible charger (not included)
RB18L15	BCS618G
RB18L15A	BCL14181H
RB18L25	BCL14183H
RB18L25A	BCL14181V*
RB18L40	RC18150U
RB18L40A	RC18150
RB18L50	RC18627U
RB18L50A	RC18115
	RC18120

\* for vehicles' 12V DC outlets

### ⚠ WARNING

Only charge in compatible 18V chargers. Use of other chargers may result in fire, damage or serious personal injury.

- Press down on the battery pack to ensure contacts on the battery pack engage properly with the contacts in the charger.
- Connect the charger to the power supply. Make sure it is the required power supply.
- Make sure the latches on each side of the battery pack snap into place and the battery pack is secured in the charger before beginning operation.
- Place the battery pack in the charger aligning raised rib on the battery pack with the groove in the charger.
- The battery pack will become slightly warm to the touch while charging. This is normal and does not indicate a problem.

**NOTE:** Do not place the charger and battery pack in an area of extreme heat or cold. They will work best at normal room temperature.

- Place charger on hard surface not soft (carpet, etc.), when charging batteries.
- When batteries become fully charged, unplug the charger from power supply and remove the battery pack.
- To remove battery pack from the charger, depress the latches on each side of the battery pack.
- After normal usage, a minimum of 1 hour charging time is required to fully recharge the battery pack.

### CHARGING A HOT BATTERY PACK

When using a tool continuously, the battery pack will become hot. A hot battery pack should be let to cool before attempting to recharge. When a hot battery pack is placed on the charger, the charger may indicate the battery pack is not ready to charge. When the battery pack cools, the charger will automatically begin charging.

### CHARGING A COOL BATTERY PACK






If the battery is below normal temperature range, the red LED will begin flashing and the green LED will be off. When the battery warms to a temperature of more than 0°C, the charger will automatically begin charge mode.



## CHARGE STATUS

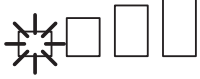See Fig. 1.

To display the amount of charge left in the battery, press the Charge level indicator button.

Charge level indicator	Amount of charge left
	0-10%
	10-25%
	25-50%
	50-75%
	75-100%

## MAINTENANCE

The batteries have been designed to provide maximum trouble-free life. However, like all batteries, they will eventually wear out. **DO NOT** disassemble battery pack and attempt to replace the batteries. Handling of these batteries, especially when wearing rings and jewellery, could result in serious burns.

To obtain the longest possible battery life, remove the battery pack from the charger once it is fully charged and ready for use.

## STORAGE

For battery storage longer than 30 days:

- Store the battery pack where the temperature is below 27°C.
- Store battery packs in a "charged" condition (minimum of 30%-50% charged).
- To charge the battery pack after a six months storage period, it is recommended to discharge the battery about 10% - 20% (by running it in a tool) and charge afterwards to maximize the battery lifetime.

## ENVIRONMENTAL PROTECTION



Recycle raw materials instead of disposing as waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

## ⚠ WARNING

Upon removal, cover the battery pack's terminals with heavy-duty adhesive tape. Do not attempt to destroy or disassemble battery pack or remove any of its components. Batteries must be recycled or disposed of properly. Also, never touch both terminals with metal objects and/or body parts as short circuit may result. Keep away from children. Failure to comply with these warnings could result in fire and/or serious injury.

## SYMBOLS



Safety alert



Regulatory Compliance Mark (RCM). Product meets applicable regulatory requirements.



Please read the instructions carefully before starting the machine.



Do not dispose of used battery packs in the household refuse or by burning them. Hand them over to applicable collection points.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

**COMPATIBLE BATTERY PACKS**

Battery Pack	Output	Battery type	Battery Capacity	Number of Cell for Battery	Weight
RB18L15	18 V $\equiv$	Lithium-Ion	1.5 Ah	5	0.45 kg
RB18L15A			1.5 Ah	5	0.43 kg
RB18L25			2.5 Ah	5	0.45 kg
RB18L25A			2.5 Ah	5	0.43 kg
RB18L40			4.0 Ah	10	0.72 kg
RB18L40A			4.0 Ah	10	0.72 kg
RB18L50			5.0 Ah	10	0.74 kg
RB18L50A			5.0 Ah	10	0.74 kg



*RYOBI is a trademark of Ryobi Limited,  
and is used under license.*

Imported by:  
**Techtronic Industries Australia Pty Ltd**  
31 Gilby Road, Mount Waverley,  
VIC, 3149, Australia  
**Techtronic Industries N.Z. Limited**  
Unit C, 70 Business Parade South,  
Highbrook, Auckland 2013, New Zealand

961152948 -02B

