

ozito

ELECTRIC CHAIN PRUNING SAW


600W 200mm

INSTRUCTION MANUAL


SPECIFICATIONS

Power:	600W
Bar Length:	200mm (8")
Cutting Capacity:	Ø100mm
Chain Pitch:	9.53mm (3/8")
Chain Speed:	8m/s
Oil Feed:	Automatic
Oil Tank Capacity:	60ml
Weight:	3.84kg

ozito.com.au

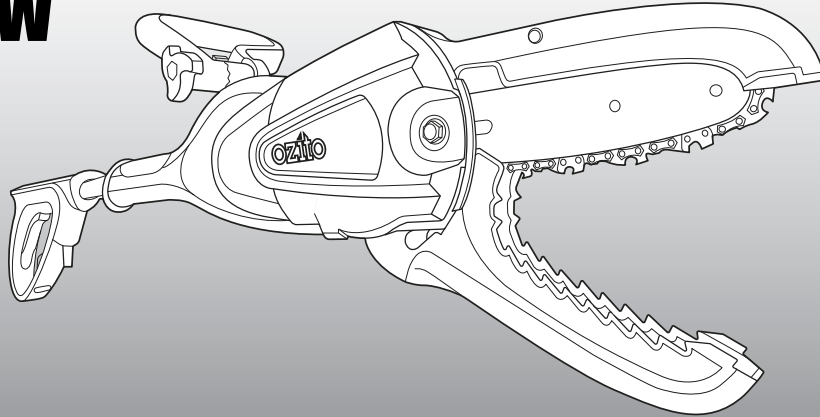

STANDARD EQUIPMENT



Chain Pruning Saw



Combination Wrench

3 YEAR REPLACEMENT WARRANTY

EJS-5520

WARRANTY

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO YOUR NEAREST BUNNINGS WAREHOUSE WITH YOUR BUNNINGS REGISTER RECEIPT. PRIOR TO RETURNING YOUR PRODUCT FOR WARRANTY PLEASE TELEPHONE OUR CUSTOMER SERVICE HELPLINE:

Australia 1800 069 486

New Zealand 0508 069 486

TO ENSURE A SPEEDY RESPONSE PLEASE HAVE THE MODEL NUMBER AND DATE OF PURCHASE AVAILABLE. A CUSTOMER SERVICE REPRESENTATIVE WILL TAKE YOUR CALL AND ANSWER ANY QUESTIONS YOU MAY HAVE RELATING TO THE WARRANTY POLICY OR PROCEDURE.

The benefits provided under this warranty are in addition to other rights and remedies which are available to you at law.

Our goods come with guarantees that cannot be excluded at law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Generally you will be responsible for all costs associated with a claim under this warranty, however, where you have suffered any additional direct loss as a result of a defective product you may be able to claim such expenses by contacting our customer service helpline above.

3 YEAR REPLACEMENT WARRANTY

Your product is guaranteed for a period of **36 months from the original date of purchase**. If a product is defective it will be replaced in accordance with the terms of this warranty. Warranty excludes consumable parts, for example: Guide bar, chain and included accessories.

WARNING


The following actions will result in the warranty being void.

- If the tool has been operated on a supply voltage other than that specified on the tool.
- If the tool shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
- Failure to perform maintenance as set out within the instruction manual.
- If the tool is disassembled or tampered with in any way.
- Professional, industrial or high frequency use.

KNOW YOUR PRODUCT


ELECTRIC CHAIN PRUNING SAW

- | | |
|--------------------|----------------------|
| 1. Rear handle | 9. Chain |
| 2. Front handle | 10. Lower jaw |
| 3. Knob | 11. Oil level window |
| 4. Lower jaw lock | 12. Motor housing |
| 5. Side cover | 13. Oil cap |
| 6. Side cover bolt | 14. Cord retainer |
| 7. Upper jaw | 15. On/Off trigger |
| 8. Guide bar | 16. Lock-off switch |

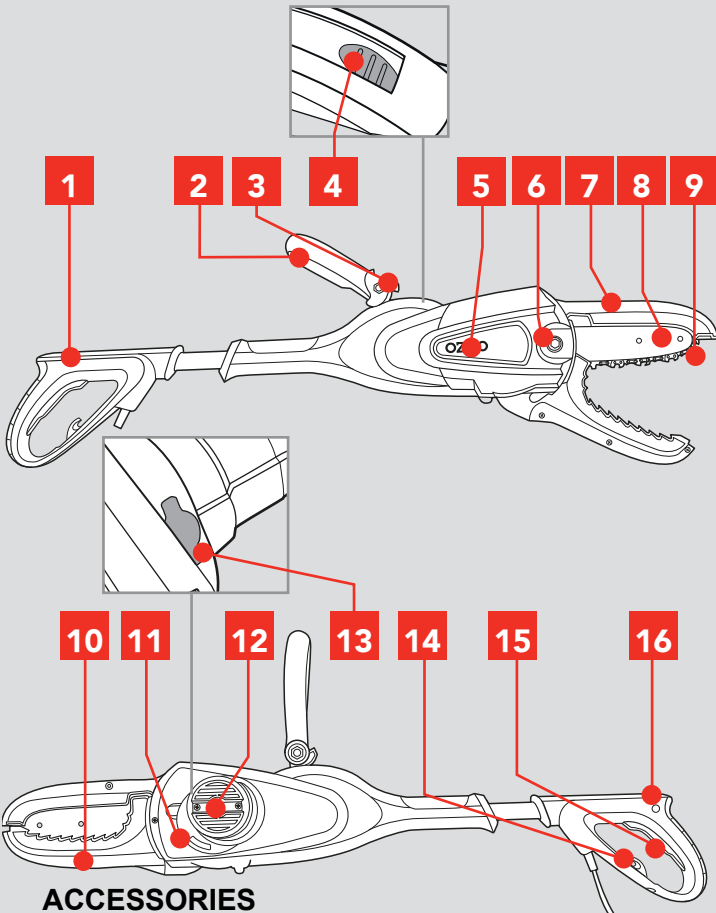

ACCESSORIES

17. Combination Wrench

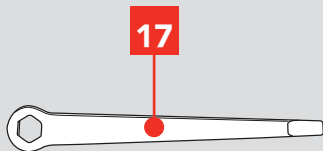

ONLINE MANUAL

Scan this QR Code with your mobile device to take you to the online manual.




ASSEMBLY

1. FRONT HANDLE



WARNING! ENSURE THE CHAIN PRUNING SAW IS TURNED OFF & DISCONNECTED FROM THE POWER SUPPLY BEFORE PERFORMING ANY OF THE FOLLOWING OPERATIONS.

1. With the jaws closed, place the Front Handle in vertical upright position.

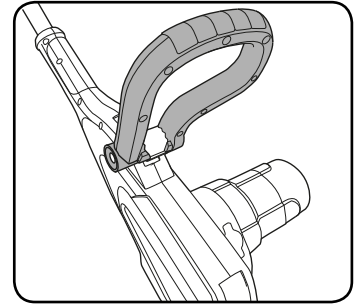

WARNING! DO NOT ASSEMBLE FRONT HANDLE FORWARD OF THE VERTICAL UPRIGHT POSITION AS THIS COULD CAUSE LOSS OF CONTROL AND RESULT IN SERIOUS PERSONAL INJURY.

2. Insert the supplied bolt from the motor side and secure with washer and locking knob.

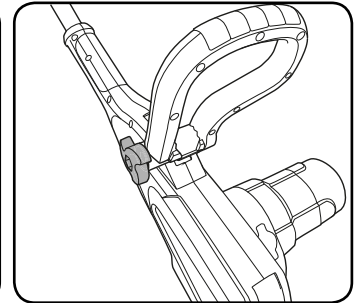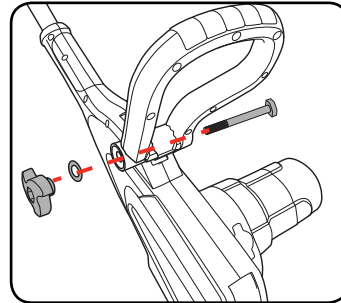

3 YEAR REPLACEMENT WARRANTY


SETUP & PREPARATION

2. LUBRICATION

NOTE: ONLY USE OIL THAT IS EXPRESSLY LABELLED "CHAIN BAR OIL".


Filling with oil

1. Place the jaw saw on a flat surface and remove the oil tank cap.
2. Fill the tank with chain bar oil, ensuring that no dirt enters the tank. **The capacity of the chain oil tank is 60ml.**

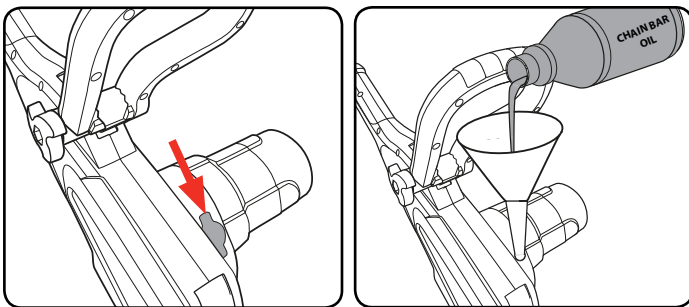

3. Refit cap and clean any oil spillage.

4. Always fill the oil tank when the oil level falls below the minimum mark on the oil level window.

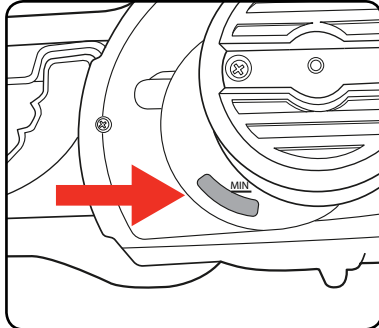

WARNING! NEVER START WORK UNLESS THE CHAIN AND BAR ARE LUBRICATED.

NOTE: It is normal for oil to seep from the saw when not in use. To prevent seepage, empty the oil tank after each use then run for one minute.

When storing the unit for a long period of time (three months or longer) be sure the chain is lightly lubricated; this will prevent rust on the chain and bar sprocket.

3. CHAIN TENSION


WARNING! ENSURE THE CHAIN PRUNING SAW IS TURNED OFF & DISCONNECTED FROM THE POWER SUPPLY BEFORE PERFORMING ANY OF THE FOLLOWING OPERATIONS.

Adjusting the chain tension


Check the chain tension frequently and adjust as often as necessary

CAUTION: ALWAYS WEAR GLOVES WHEN HANDLING THE CHAIN AS IT IS VERY SHARP AND CAN CUT YOU WHEN IT IS NOT MOVING.


1. Pull the front handle all the way back and depress the lower jaw lock button. Keep the button depressed while releasing the handle to lock the lower jaw in the open position.

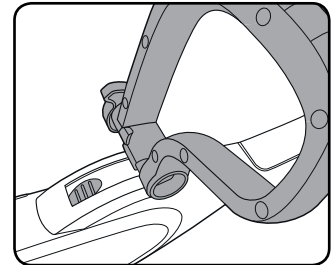


2. Loosen the chain cover bolt to finger tight using the combination wrench provided.

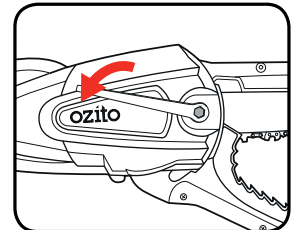

Adjust the chain tensioning screw **CLOCKWISE** to tension the chain. Turning screw **COUNTERCLOCKWISE** will decrease amount of tension on the chain.

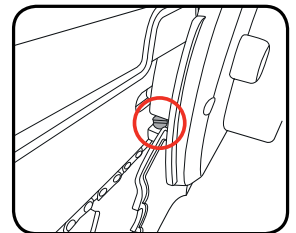

The tension is correct when the chain can be pulled 3mm away from the guide bar when using your finger and thumb. Do not over-tighten as this will reduce the life of the chain and guide bar.

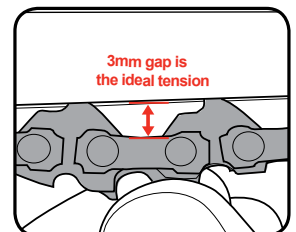

3. Retighten the chain cover bolt.

4. Return the lower jaw to the closed position by pulling back on the front handle and allowing the handle to move all the way forward.


NOTE: Proper tension of the chain is extremely important and must be checked before starting, as well as during any cutting operation. Taking the time to make adjustments to the chain will result in improved cutting performance and prolonged chain life.

OPERATION


4. CORD RETAINER

The cord retainer is used to “anchor” an extension lead when it is connected to the power cord of the tool. It prevents the extension lead from being accidentally disconnected from the chain pruning saw’s power cord or shaken loose during use.


1. Make a loop with the extension lead and push it through the hole under the on/off trigger.

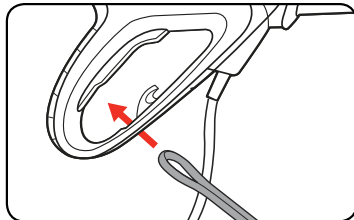

2. Hook the loop over the cord retainer and ensure it is pulled firmly into place.

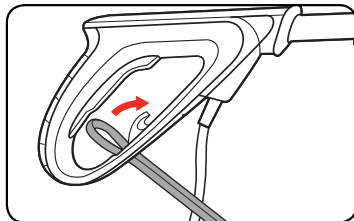

3. Connect the extension lead socket to the power cord plug.

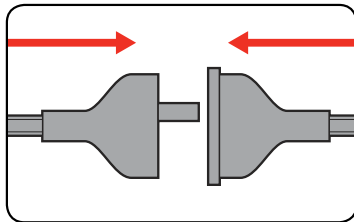

Route the power and extension lead away from the work area to prevent contact with the saw.

NOTE: Always use an approved extension lead suitable for the power input of this tool.

CAUTION: TO AVOID THE EXTENSION LEAD FROM DETACHING; ALWAYS CHECK THAT THE LEAD IS ATTACHED TO THE CORD RETAINER BEFORE USE.


5. SWITCHING ON/OFF

CAUTION! TO REDUCE THE RISK OF ELECTRIC SHOCK, WE RECOMMEND THE USE OF A RESIDUAL CURRENT DEVICE (RATED AT 30mA OR LESS).


Switching on

WARNING! ALWAYS USE THE CHAIN PRUNING SAW WITH BOTH HANDS.

1. Use the thumb of your right hand to push the lock-off switch in and squeeze the on/off trigger to start the motor.

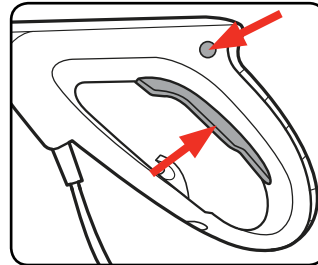


2. The chain will now be running, ready to make a cut. Release the lock-off switch.

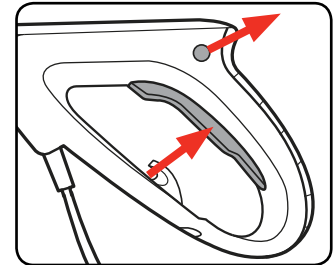

Switching off

1. Release the ON/OFF trigger.

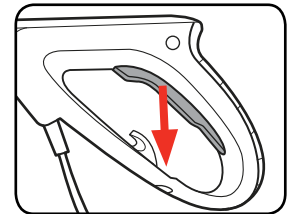


CAUTION: ALWAYS CARRY THE CHAIN PRUNING SAW BY THE FRONT HANDLE. IF THE CHAIN PRUNING SAW IS PLUGGED IN AND YOU CARRY IT BY THE REAR HANDLE, THERE IS A RISK THAT YOU COULD ACCIDENTALLY PRESS THE LOCK-OFF SWITCH AND THE ON/OFF TRIGGER AT THE SAME TIME, INADVERTENTLY STARTING THE CHAIN PRUNING SAW.


6. CUTTING

CAUTION: POSITION THE CORD SO THAT IT WILL NOT BE CAUGHT IN BRANCHES DURING CUTTING

1. Holding the front handle with left hand and move rearward to open the lower jaw.

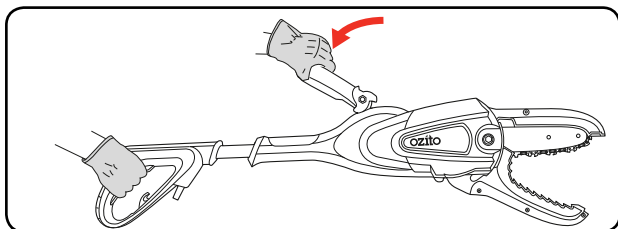

2. Position the jaw saw with the jaw placed over the desired branch to cut.

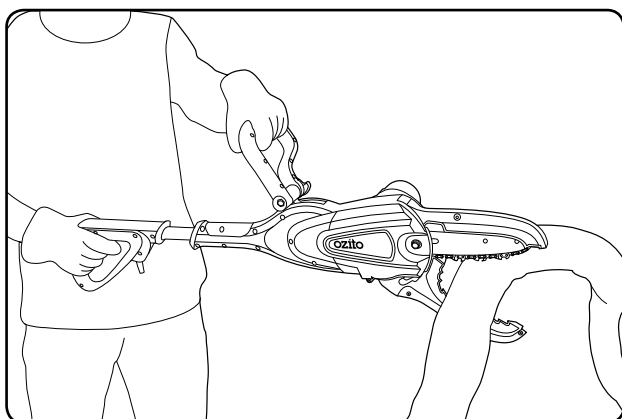

3. To start cutting, move handle forward to close the lower jaw. Make sure the tool is running at full speed before attempting to cut.
4. After cutting, move the front handle rearward to have the jaw teeth open to release the branch.

WARNING! THE CHAIN AND BAR BECOME JAMMED, STOP THE MOTOR, ALLOW THE CHAIN TO STOP. DISCONNECT THE PLUG FROM THE POWER SOURCE BEFORE ATTEMPTING TO REMOVE THE OBSTRUCTION.

WARNING! DO NOT USE AN UNSTABLE FOOT-HOLD OR LADDER. DO NOT OVERREACH. DO NOT SAW ABOVE SHOULDER HEIGHT. ALWAYS USE BOTH HANDS TO HOLD THE SAW. FIRST CUT UP FROM THE BOTTOM AND FINISH DOWN FROM THE TOP.

Cutting hints and tips

- This unit is designed for felling small trees no taller than yourself (Do Not use a ladder) and trimming small branches and limbs up to 100mm in diameter.
- Do not force the jaw saw into the cut. Apply only light pressure whilst running the motor at full speed.
- Saw off the lower branches on the tree first. By doing so, it is easier for the cut branches to fall to the ground.
- Remove long branches in several stages.
- When cutting branches that are lying on the ground, make sure the location is clear of other objects, electric wires, cables, etc., before cutting. Also be aware of the position of your feet before cutting items on the ground.

MAINTENANCE


7. CHAIN AND BAR

Replacing the chain and bar


CAUTION! ALWAYS DISCONNECT THE MAINS PLUG BEFORE CLEANING THE CHAIN PRUNING SAW.

CAUTION: ALWAYS WEAR GLOVES WHEN HANDLING THE CHAIN AS IT IS VERY SHARP AND CAN CUT YOU WHEN IT IS NOT MOVING.

1. Pull the front handle all the way back and depress the lower jaw lock button. Keep the button depressed while releasing the handle to lock the lower jaw in the open position.

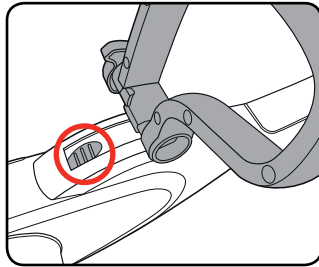


2. Remove the chain cover bolt by turning counterclockwise direction using the combination wrench provided.

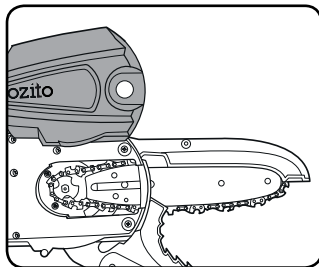


3. Remove the chain cover and set aside.

4. Rotate the chain tensioning screw counterclockwise as needed to release the chain tension.


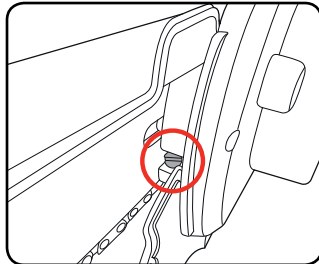


5. Remove the bar and chain from the mounting surface.



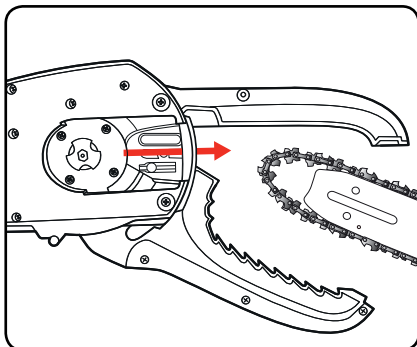


6. Remove the old chain from the bar.

7. Fit the chain over the guide bar, making sure that the cutters are facing in the direction of rotation.

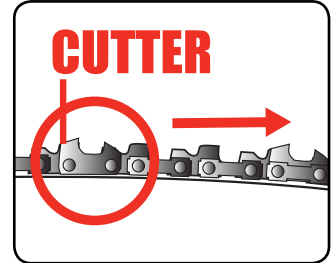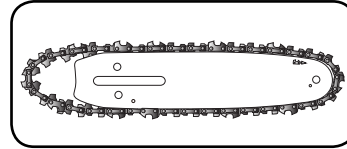

8. While holding the chain in position on the bar, reinsert the bar and chain through the opening between the jaws and place the chain around the sprocket (A). Also ensure that the pin (B) fits into the guide bar. If it does not fit, it can be adjusted slightly with the chain tensioning screw. The chain must not slip off the bar when you do this.

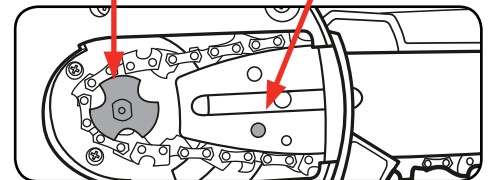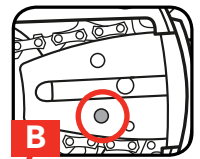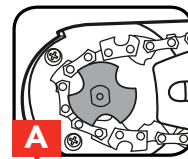

9. Pull the guide bar forward until the chain is closely seated. Make sure that all the drive links are in the groove of the bar.
10. Attach the side cover and loosely secure it with the side cover bolt.
11. Refer to “Chain tension” section before fully tightening the side cover bolt.

8. GENERAL MAINTENANCE

CAUTION! ALWAYS DISCONNECT THE MAINS PLUG BEFORE CLEANING THE CHAIN PRUNING SAW.

Maintaining the guide bar

1. Remove any sawdust from the guide bar, including the groove. Oil and sawdust combine and emit a burning smell during operation if the blade is not regularly cleaned.
2. Make sure that the oil port is not clogged. Grease the nose sprocket at the tip of the guide bar.
3. Check for oil leakage and loose fastenings, especially those securing the handles and the guide bar.
4. Clean any dust away from the cooling vents as clogged vents can cause overheating. By maintaining a clean unit you will extend the useful life of the chain and the tool in general.

Chain Sharpening

Chain File: 3.96mm (5/32")

Chain Pitch: 9.53mm (3/8")

Chain Gauge: 1.3mm (0.050")


Sharpen the chain regularly to maintain optimum performance of the saw.

Signs of a dull chain are:

- The sawdust becomes powder-like
- Extra force is required to execute a cut
- The cut does not track in a straight line
- Increased vibration

Sharpen each cutter using a chain file. Always use outward strokes and maintain a 30° angle between the chain and file. After sharpening, the cutters must all have the same width and length.

After every 3 – 4 uses get an authorised repair centre to professionally sharpen your chain. They have the special tools necessary to ensure the correct cutting angles and depths.

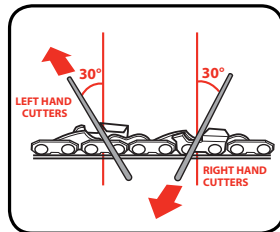

WARNING! WEAR HEAVY GLOVES WHEN HANDLING THE CHAIN. HOLD THE GUIDE BAR SECURELY IN A VICE.

Cleaning and storing

- Keep the handles free of grease so that you can maintain a firm grip.
- Clean the device as required with a damp cloth.
- If the chain pruning saw is not to be used for an extended period of time then you should remove the chain oil from the tank. Briefly immerse the chain and the cutter rail in an oil bath and then wrap them in oil paper.

CAUTION! NEVER IMMERSE THE UNIT IN WATER OR OTHER LIQUIDS IN ORDER TO CLEAN IT.

CAUTION! STORE THE CHAIN PRUNING SAW IN A SAFE AND DRY PLACE OUT OF THE REACH OF CHILDREN.

Note: Ozito Industries will not be responsible for any damage or injuries caused by the repair of the line trimmer by an unauthorised person or by mishandling of the line trimmer. This tool is designed for DIY use - use in commercial or industrial environments will void the warranty.

DESCRIPTION OF SYMBOLS

V	Volts	Hz	Hertz
~	Alternating current	W	Watts
/min	Revolutions or reciprocation per minute	n ₀	No load speed
	Double insulated		Regulator compliance mark
	Diameter		Warning
	Read instructions		Do not expose to rain
	Wear safety glasses		Wear muffs
	Beware of kickback		Sound power level
	Chain drive links 33		Wear protective gloves
	IMPORTANT! When placing the chain on the guide bar, ensure the chain direction is the same as the image on the guide bar		
	Disconnect and discontinue use should the power cord be damaged		
	Always hold the saw with both hands		

CARING FOR THE ENVIRONMENT



Power tools that are no longer usable should not be disposed of with household waste but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice.




Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

SPARE PARTS

Chain Replacement:

The chain can be purchased through Ozito spare parts or from your local Bunnings Warehouse. The correct chain can be purchased by matching the pitch, gauge and number of links as shown below:



9.53mm(3/8)



1.3mm(.050")
Gauge



33 Links

Spare parts can be ordered from the Special Orders Desk at your local Bunnings Warehouse.


For further information, or any parts not listed here, visit www.ozito.com.au or contact Ozito Customer Service:

Australia 1800 069 486

New Zealand 0508 069 486

E-mail: enquiries@ozito.com.au

ELECTRICAL SAFETY

 **WARNING!** When using mains-powered tools, basic safety precautions, including the following, should always be followed to reduce risk of fire, electric shock, personal injury and material damage.

Read the whole manual carefully and make sure you know how to switch the tool off in an emergency, before operating the tool.

Save these instructions and other documents supplied with this tool for future reference.

The manufacturer cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety information.

This product has been designed for 230V and 240V only. Always check that the power supply corresponds to the voltage on the rating plate.



Note: The supply of 230V and 240V is interchangeable for Australia and New Zealand. This tool is double insulated in accordance with AS/NZS 60745-1; therefore no earth wire is required.

The power supply for this product should be protected by a residual current device (rated at 30mA or less). A residual current device reduces the risk of electric shock.

If the supply cord is damaged, it must be replaced by an electrician or a power tool repairer in order to avoid a hazard.


This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Note: Double insulation does not take the place of normal safety precautions when operating this tool. The insulation system is for added protection against injury resulting from a possible electrical insulation failure within the tool.

Using an Extension Lead

Always use an approved extension lead suitable for the power input of this tool. Before use, inspect the extension lead for signs of damage, wear and ageing. Replace the extension lead if damaged or defective. When using an extension lead on a reel, always unwind the lead completely. Use of an extension lead not suitable for the power input of the tool or which is damaged or defective may result in a risk of fire and electric shock.

GENERAL POWER TOOL SAFETY WARNINGS

 **WARNING!** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1. Work area safety

a. Keep work area clean and well lit. Cluttered or dark areas invite accidents.

b. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

c. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2. Electrical safety

a. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.

b. Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.

c. Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

d. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

e. When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

f. If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

3. Personal safety

a. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

b. Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e. Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

f. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

g. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

h. Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

4. Power tool use and care

a. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

b. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

d. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

h. Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5. Service

a. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

ADDITIONAL SAFETY INSTRUCTIONS FOR CHAINSAWS

• Keep all parts of the body away from the saw chain when the chain saw is operating. Before you start the chain saw, make sure the saw chain is not contacting anything. A moment of inattention while operating chain saws may cause entanglement of your clothing or body with the saw chain.

• Always hold the chain saw with your right hand on the rear handle and your left hand on the front handle. Holding the chain saw with a reversed hand configuration increases the risk of personal injury and should never be done.

• Hold the power tool by insulated gripping surfaces only, because the saw chain may contact hidden wiring or its own cord. Saw chains contacting as a "live" wire may make exposed metal parts of the tool "live" and could give the operator an electric shock.

• Wear safety glasses and hearing protection. Further protective equipment for head, hands, legs and feet is recommended. Adequate protective clothing will reduce personal injury by flying debris or accidental contact with the saw chain.

• Do not operate a chain saw in a tree. Operation of a chain saw while up in a tree may result in personal injury.

• Always keep proper footing and operate the chain saw only when standing on fixed, secure and level surface. Slippery or unstable surfaces such as ladders may cause a loss of balance or control of the chain saw.

• When cutting a limb that is under tension be alert for spring back. When the tension in the wood fibres is released the spring loaded limb may strike the operator and/or throw the chain saw out of control.

• Use extreme caution when cutting brush and saplings. The slender material may catch the saw chain and be whipped toward you or pull you off balance.

• Carry the chain saw by the front handle with the chain saw switched off and away from your body. When transporting or storing the chain saw always fit the guide bar cover. Proper handling of the chain saw will reduce the likelihood of accidental contact with the moving saw chain.

• Follow instructions for lubricating, chain tensioning and changing accessories. Improperly tensioned or lubricated chain may either break or increase the chance for kickback.

• Keep handles dry, clean, and free from oil and grease. Greasy, oily handles are slippery causing loss of control.

• Cut wood only. Do not use chain saw for purposes not intended. For example: do not use chain saw for cutting plastic, masonry or non-wood building materials. Use of the chain saw for operations different than intended could result in a hazardous situation.

Causes and operator prevention of kickback

Kickback may occur when the nose or tip of the guide bar touches an object, or when the wood closes in and pinches the saw chain in the cut.

Tip contact in some cases may cause a sudden reverse reaction, kicking the guide bar up and back towards the operator.

Pinching the saw chain along the top of the guide bar may push the guide bar rapidly back towards the operator.

Either of these reactions may cause you to lose control of the saw which could result in serious personal injury. Do not rely exclusively upon the safety devices built into your saw. As a chain saw user, you should take several steps to keep your cutting jobs free from accident or injury.

Kickback is the result of tool misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below:

• Maintain a firm grip, with thumbs and fingers encircling the chain saw handles, with both hands on the saw and position your body and arm to allow you to resist kickback forces. Kickback forces can be controlled by the operator, if proper precautions are taken. Do not let go of the chain saw.

• Do not overreach and do not cut above shoulder height. This helps prevent unintended tip contact and enables better control of the chain saw in unexpected situations.

• Only use replacement bars and chains specified by the manufacturer. Incorrect replacement bars and chains may cause chain breakage and/or kickback.

• Follow the manufacturer's sharpening and maintenance instructions for the saw chain. Decreasing the depth gauge height can lead to increased kickback.